


62641\_C3175 L99 with Automatic Transmission



Step 1: Rear of transmission must be supported using a suitable jack

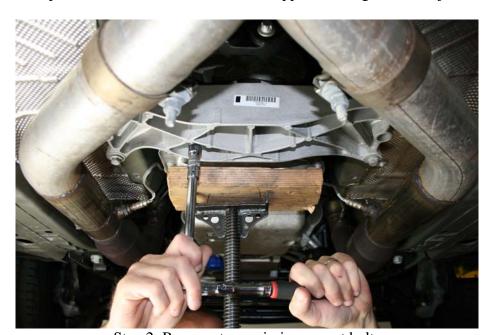

Step 2: Remove transmission mount bolts

For Technical Assistance, call Moroso's Tech Line (203)-458-0542, 8:30am-5:00pm Eastern Time MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE GUILFORD, CT 06437 www.moroso.com







Step 3: Remove transmission crossmember bolts



Step 4: Remove transmission crossmember from vehicle




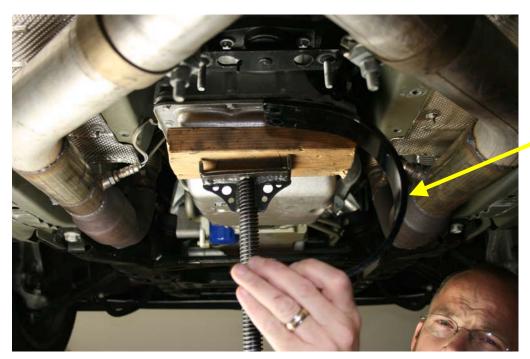

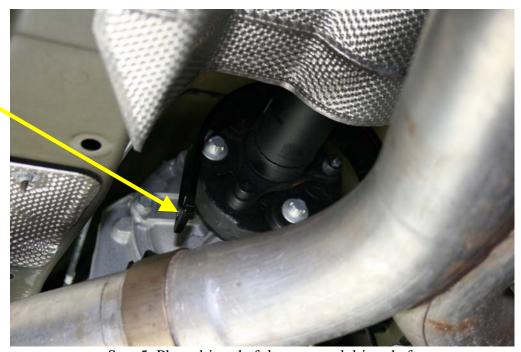

Step 5: Place drive shaft loop around drive shaft



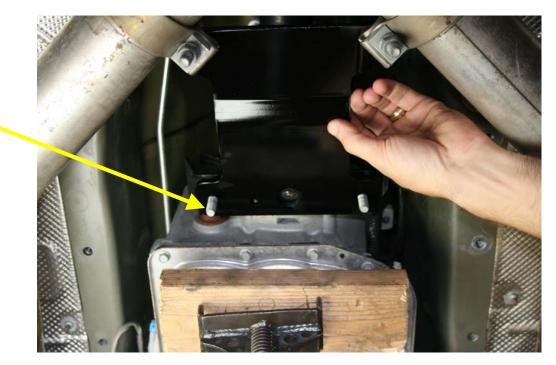



Step 6: Place drive shaft base plate over transmission mount bolts







Step 7: Place ¼" spacers on top of crossmember, one on each side and reinstall crossmember







For Technical Assistance, call Moroso's Tech Line (203)-458-0542, 8:30am-5:00pm Eastern Time MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE GUILFORD, CT 06437 www.moroso.com





Step 8: Reinstall remaining crossmember bolts and tighten



Step 9: Reinstall and tighten transmission mount bolts

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time


MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE

GUILFORD, CT 06437

www.moroso.com



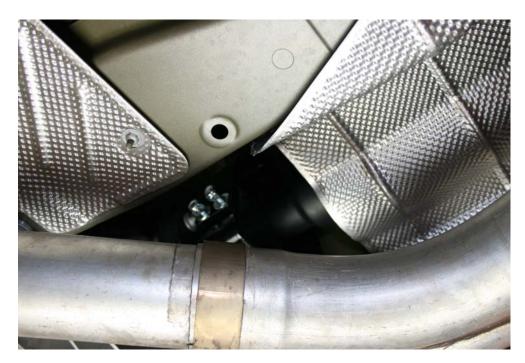



Step 10: Install and tighten drive shaft hardware, with nuts facing outward on both sides Installation Complete