

## INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified DEI technician.

**DESCRIPTION:** Oil Cooler Line Heat Shroud

**PART NUMBER:** 010488

**APPLICATION:** 2015 - 16 Corvette Z06

**KIT CONTENTS:**

Oil Cooler line Heat Shroud QTY 1

**TOOLS NEEDED:**

**OVERVIEW:** When engineering the C7 Corvette Z06, the oil cooler lines were placed extremely close to the catalytic converter... one of the hottest parts of the vehicle especially under racing conditions. The DEI Oil Cooler Heat Shroud is designed to wrap around the oil cooler lines without having to remove them, greatly reducing the radiant heat from soaking into the oil cooler lines.




**Kit Contents**

1. Lift car per factory manual
2. Remove passenger side body brace. **Fig. 1**
3. Locate the two oil cooler lines coming from the oil pan.
4. Wrap both lines with the DEI cover facing the hook and loop down and away from the exhaust. **Fig. 2**
5. Close the line cover making sure to securely fasten the hook and loop fastening system. **Fig. 3**
6. Reinstall factory body brace and torque to the factory specification. **Fig. 4**



**Fig. 1**

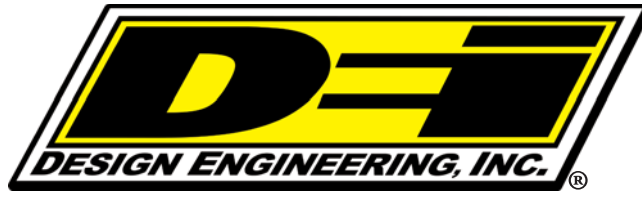

**Fig. 2**



**Fig. 3**



**Fig. 4**