



42307 Osgood Road Ste C Fremont CA 94539
www.extremeonlinestore.com
Tel: 510-249-9900

SPOILER-195-ABS

INSTALLATION MANUAL

16-Up Camaro 1LE Extended Style Rear Wickerbill Spoiler Installation Manual



**READ CAREFULLY
BEFORE INSTALLATION**



WARNING!!!

**Please test fit the items before
applying paint job.**

WE DO HIGHLY RECOMMEND PROFESSIONAL INSTALLATION



42307 Osgood Road Ste C Fremont CA 94539
www.extremeonlinestore.com
Tel: 510-249-9900

TOOLS

INSTALLATION MANUAL

Provided Screw




#1



#2

Clip Remover

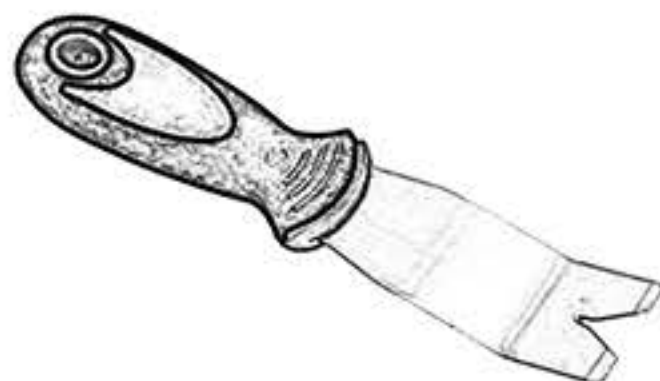

Screw Driver




Torx L-wrench




Auto Double-Sided Mounting Tape

not-provided

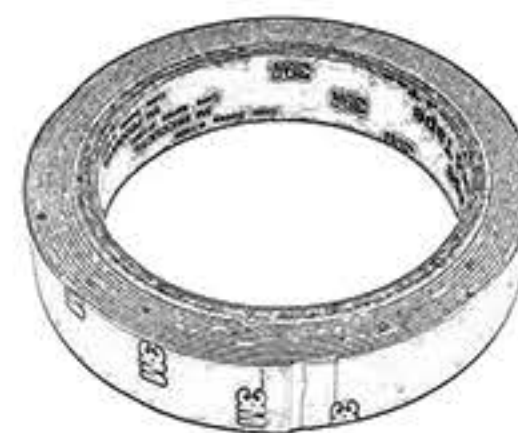

Socket Wrench

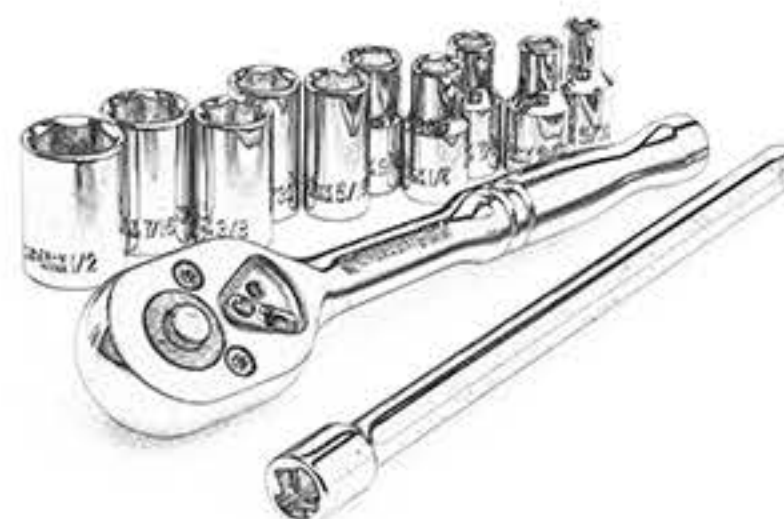

Auto Cleaner



Drilling bit





42307 Osgood Road Ste C Fremont CA 94539


www.extremeonlinestore.com

Tel: 510-249-9900

SPOILER-195-ABS

INSTALLATION MANUAL

1

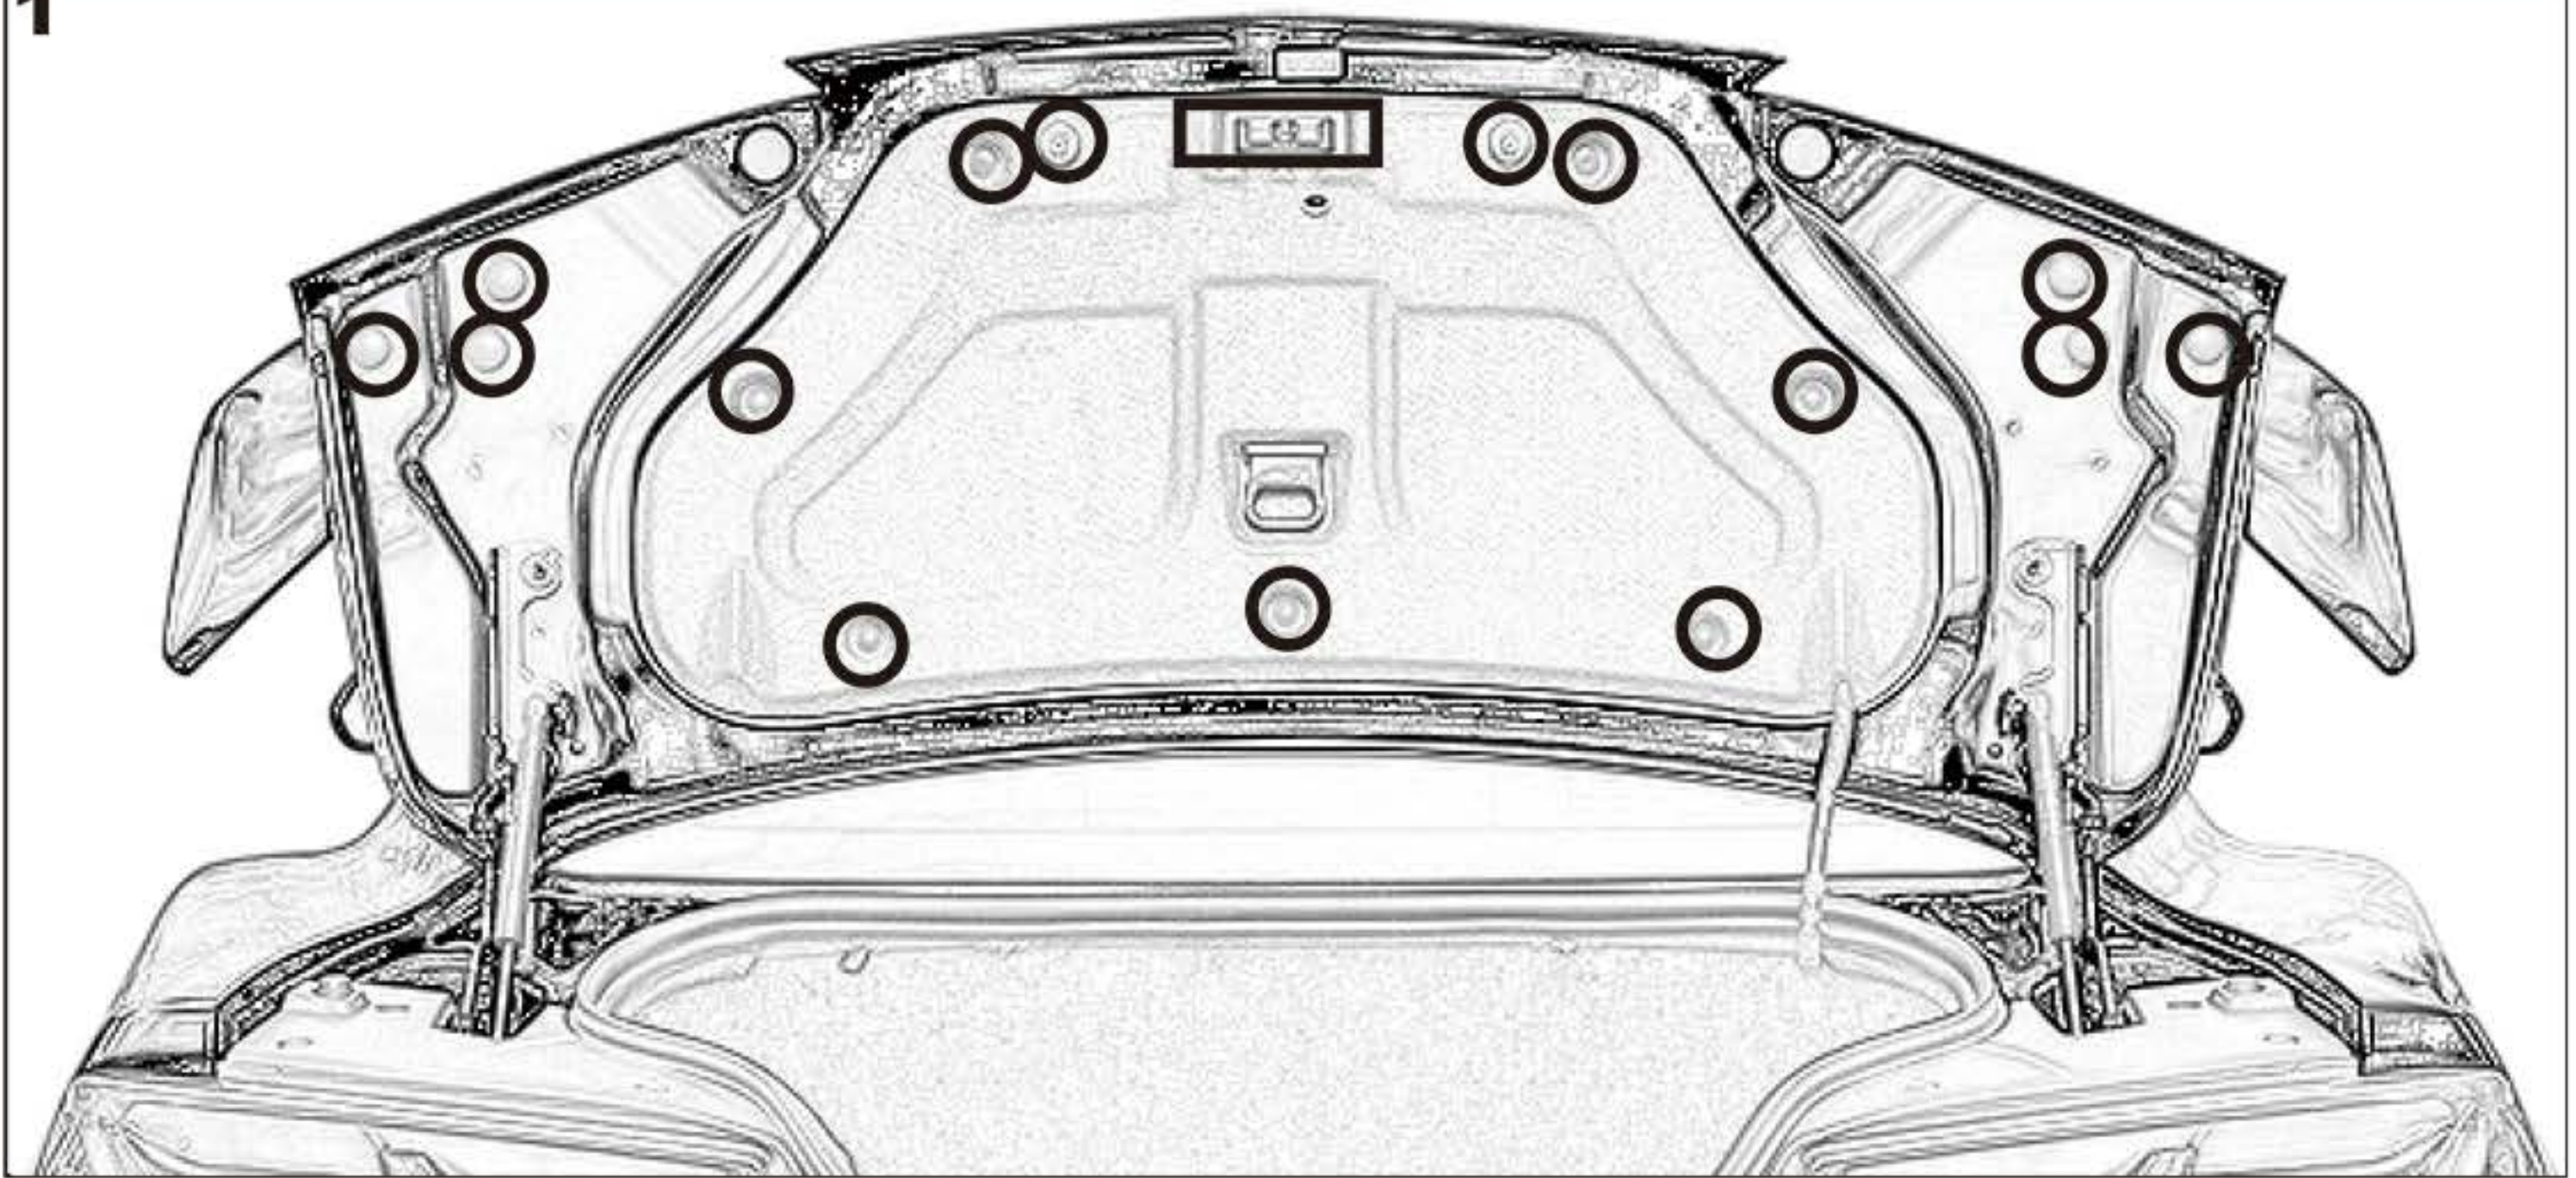

**Remove all the trunk hold plugs by using the Clip remover.
Take off the Trunk Trim Panel.**

2



- 1.If your vehicle does not have a spoiler then skip to step 4**
- 2.If your model is a regular RS (not 1LE), skip to step 3**
- 3.If your model is a SS/ZL1/ZL1 1LE remove bolts 2,3,6,7,10,11**
- 4.If your model is a SS 1LE / RS 1LE remove bolts 1,2,4,5,6,8,9,10,12**



42307 Osgood Road Ste C Fremont CA 94539


www.extremeonlinestore.com

Tel: 510-249-9900

SPOILER-195-ABS

INSTALLATION MANUAL

3

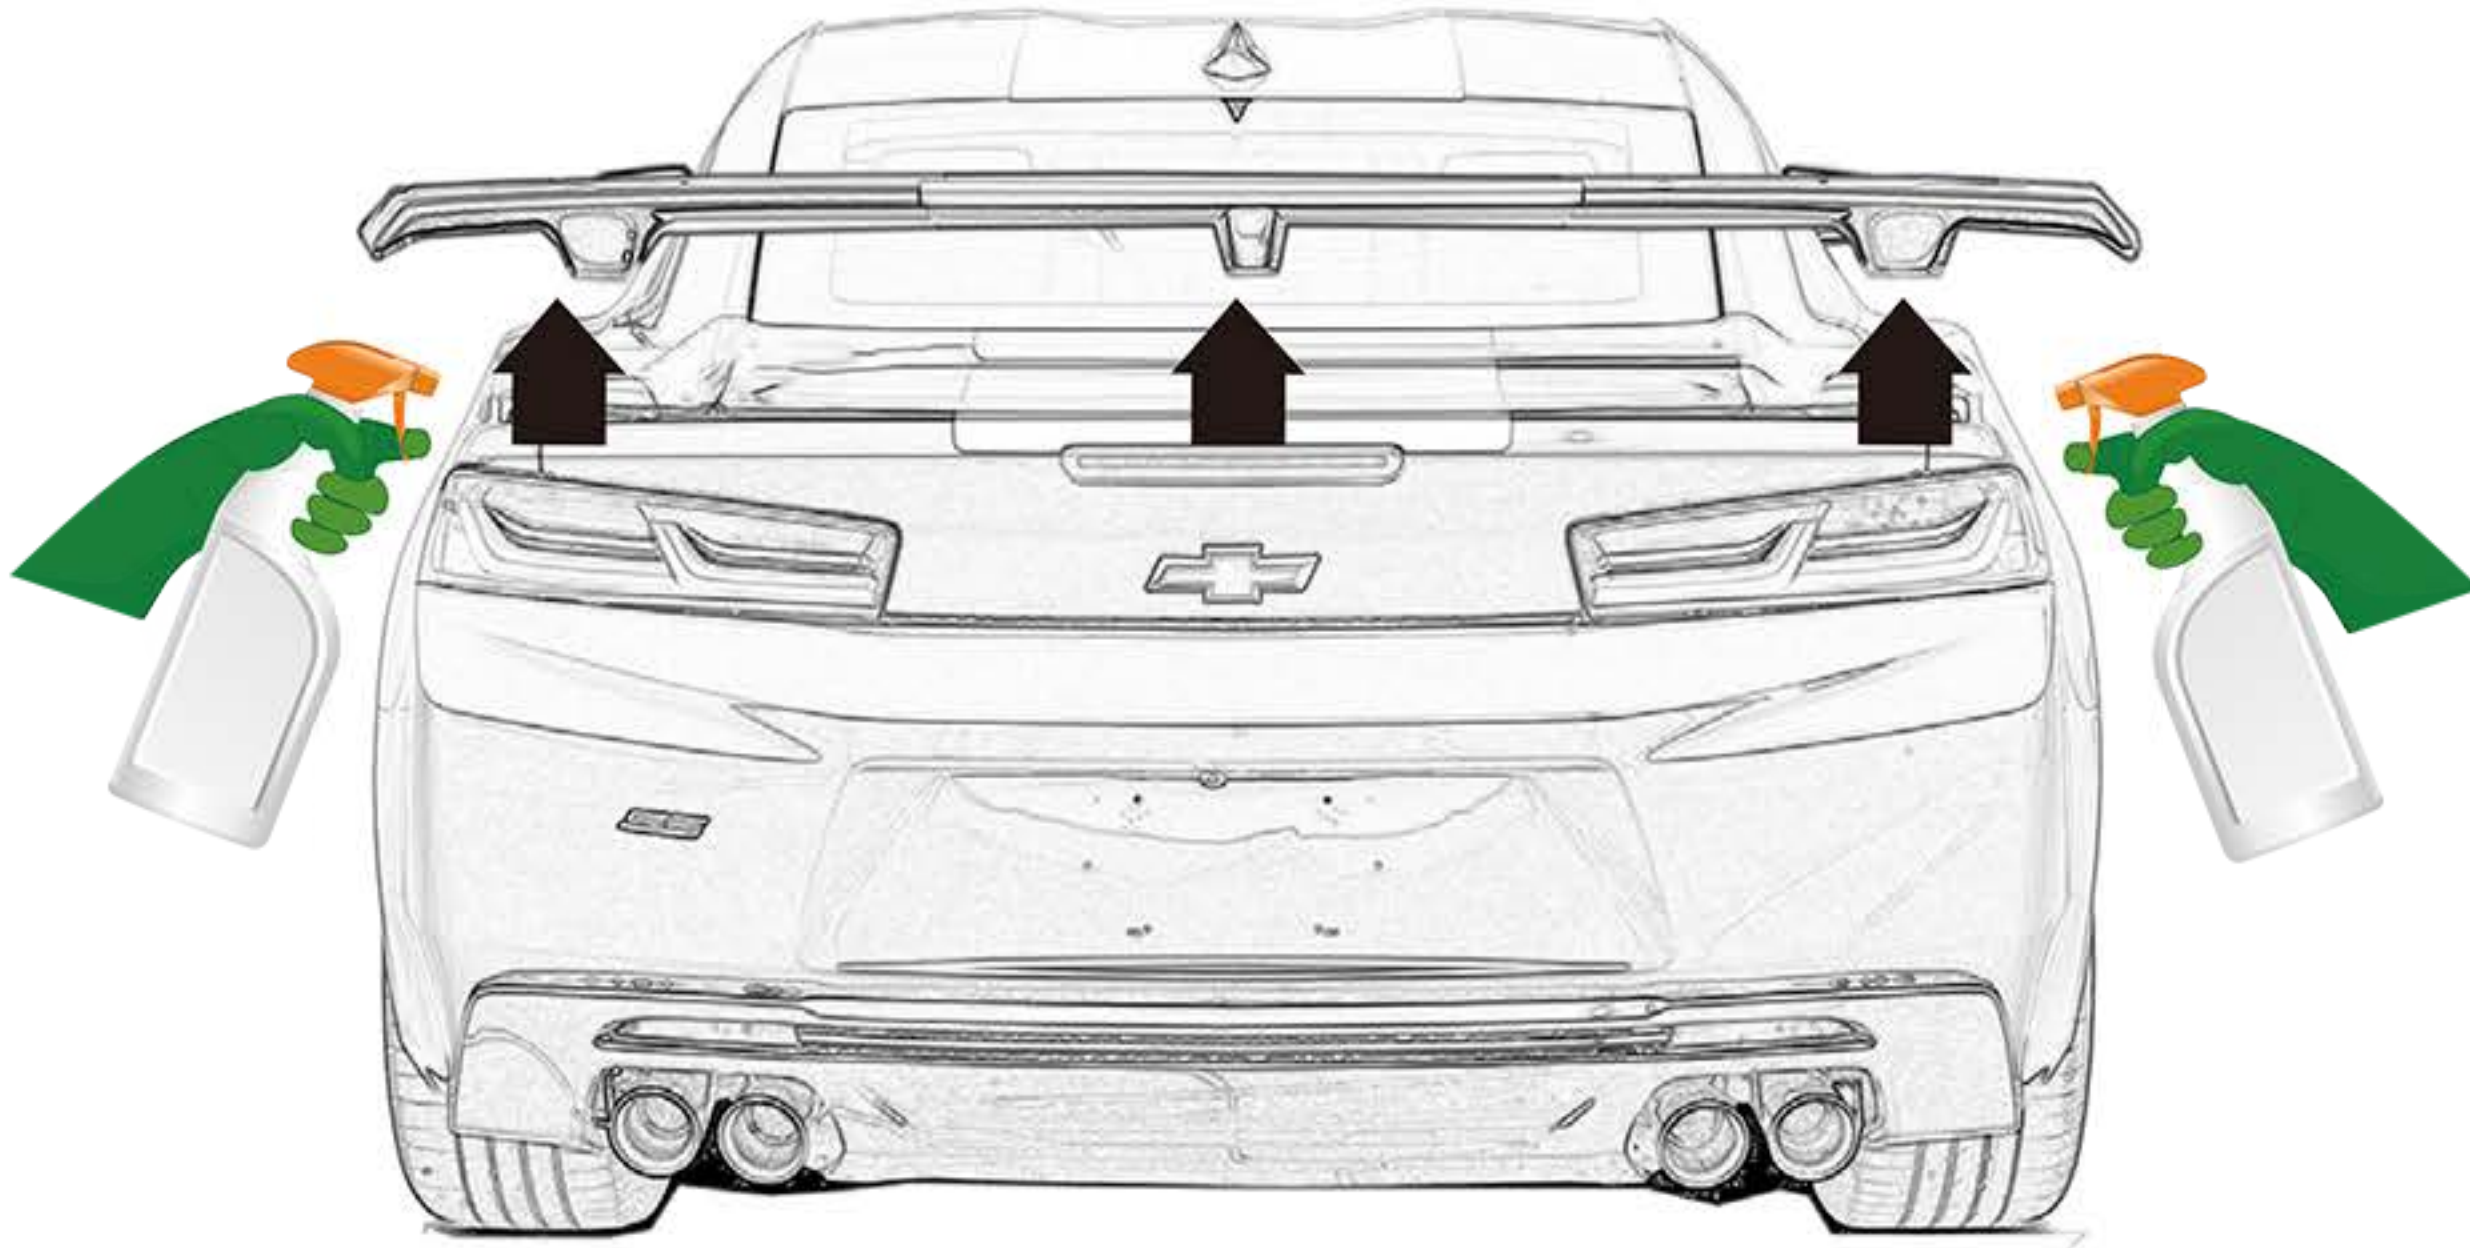

**Use fish line carefully to remove the OEM Spoiler.
Clean the surface with Auto cleaner .
Ensure the surface is free of debris and residue.**

4



- 1. For RS model (NOT 1LE), you will need to drill holes 1,2,4,5,6,8,9,10,12**
- 2. For SS/ZL1/ZL1 1LE models, you will need to drill holes 1,5,6,8,12**
- 3. For RS 1LE/ SS 1LE models DO NOT NEED drill holes**



42307 Osgood Road Ste C Fremont CA 94539


www.extremeonlinestore.com

Tel: 510-249-9900

SPOILER-195-ABS


INSTALLATION MANUAL

5

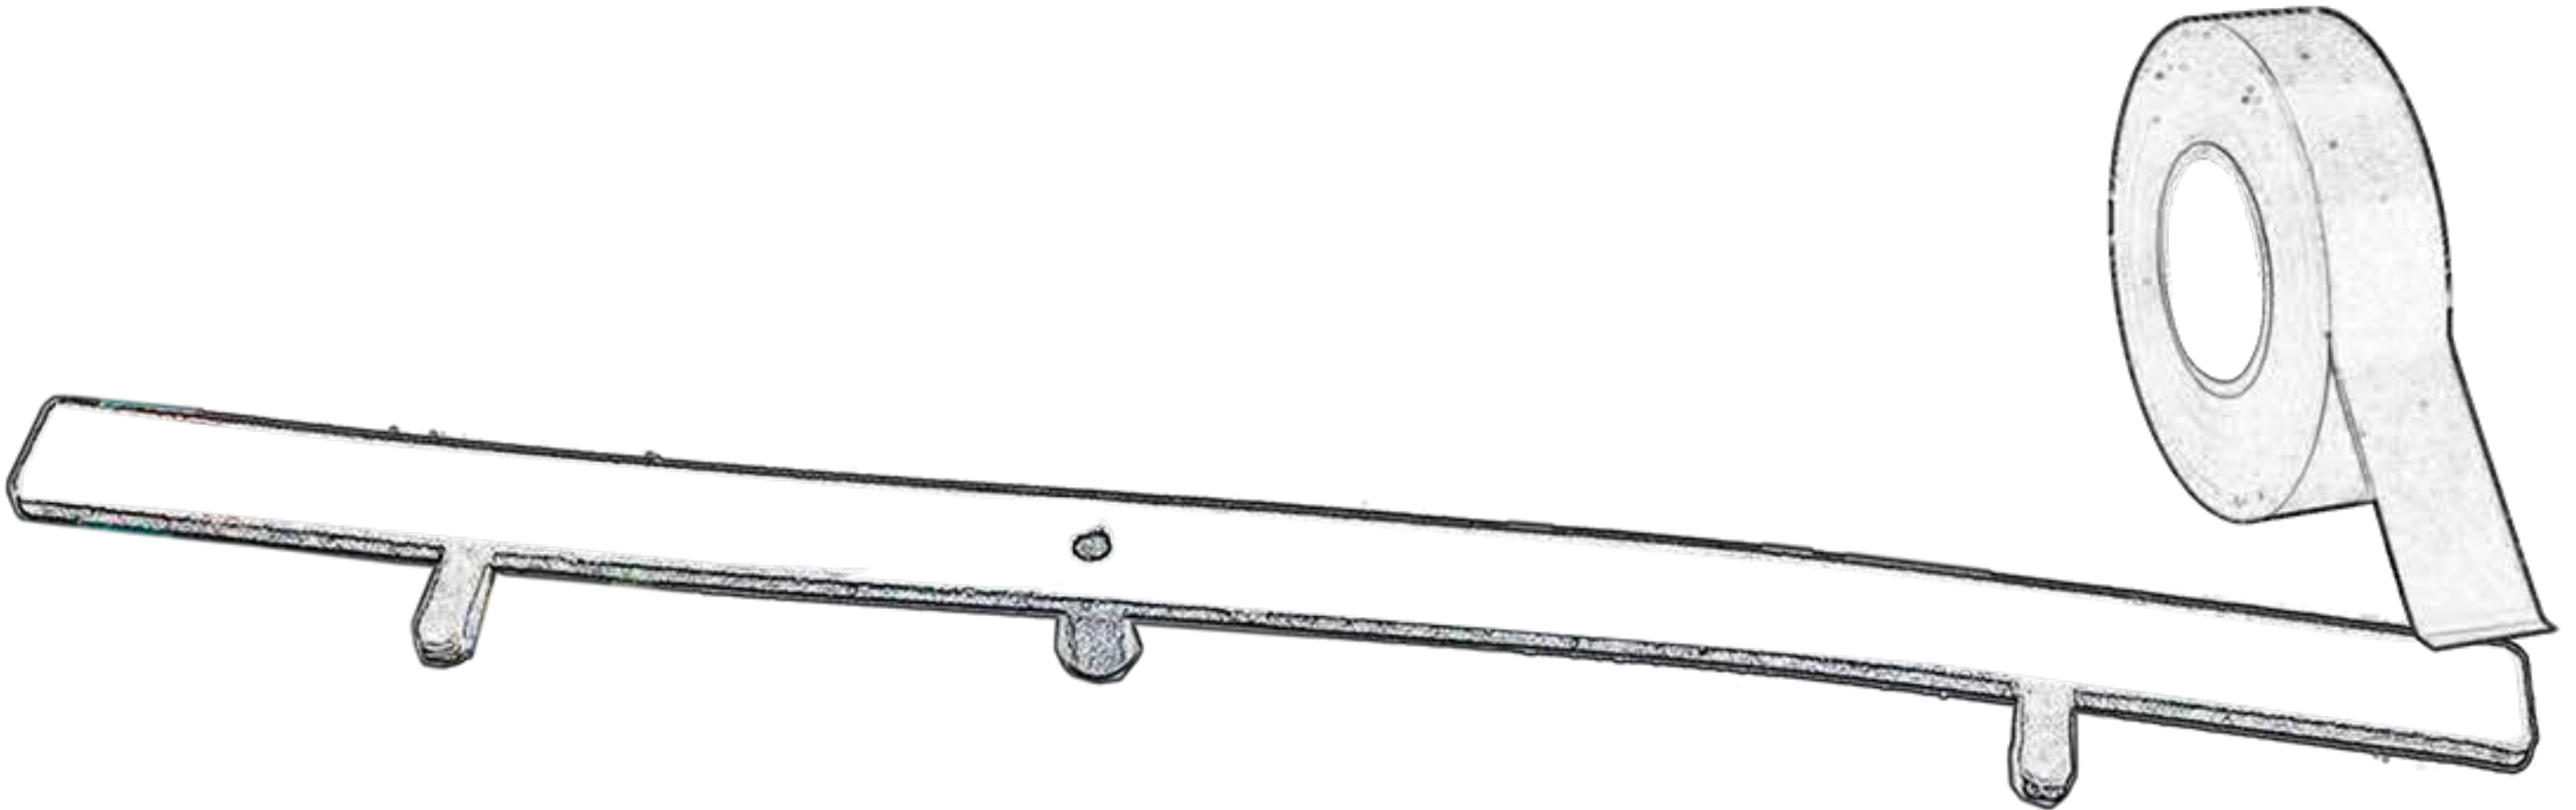

Attach the double sided tape onto the flat side of the drilling stripe

6

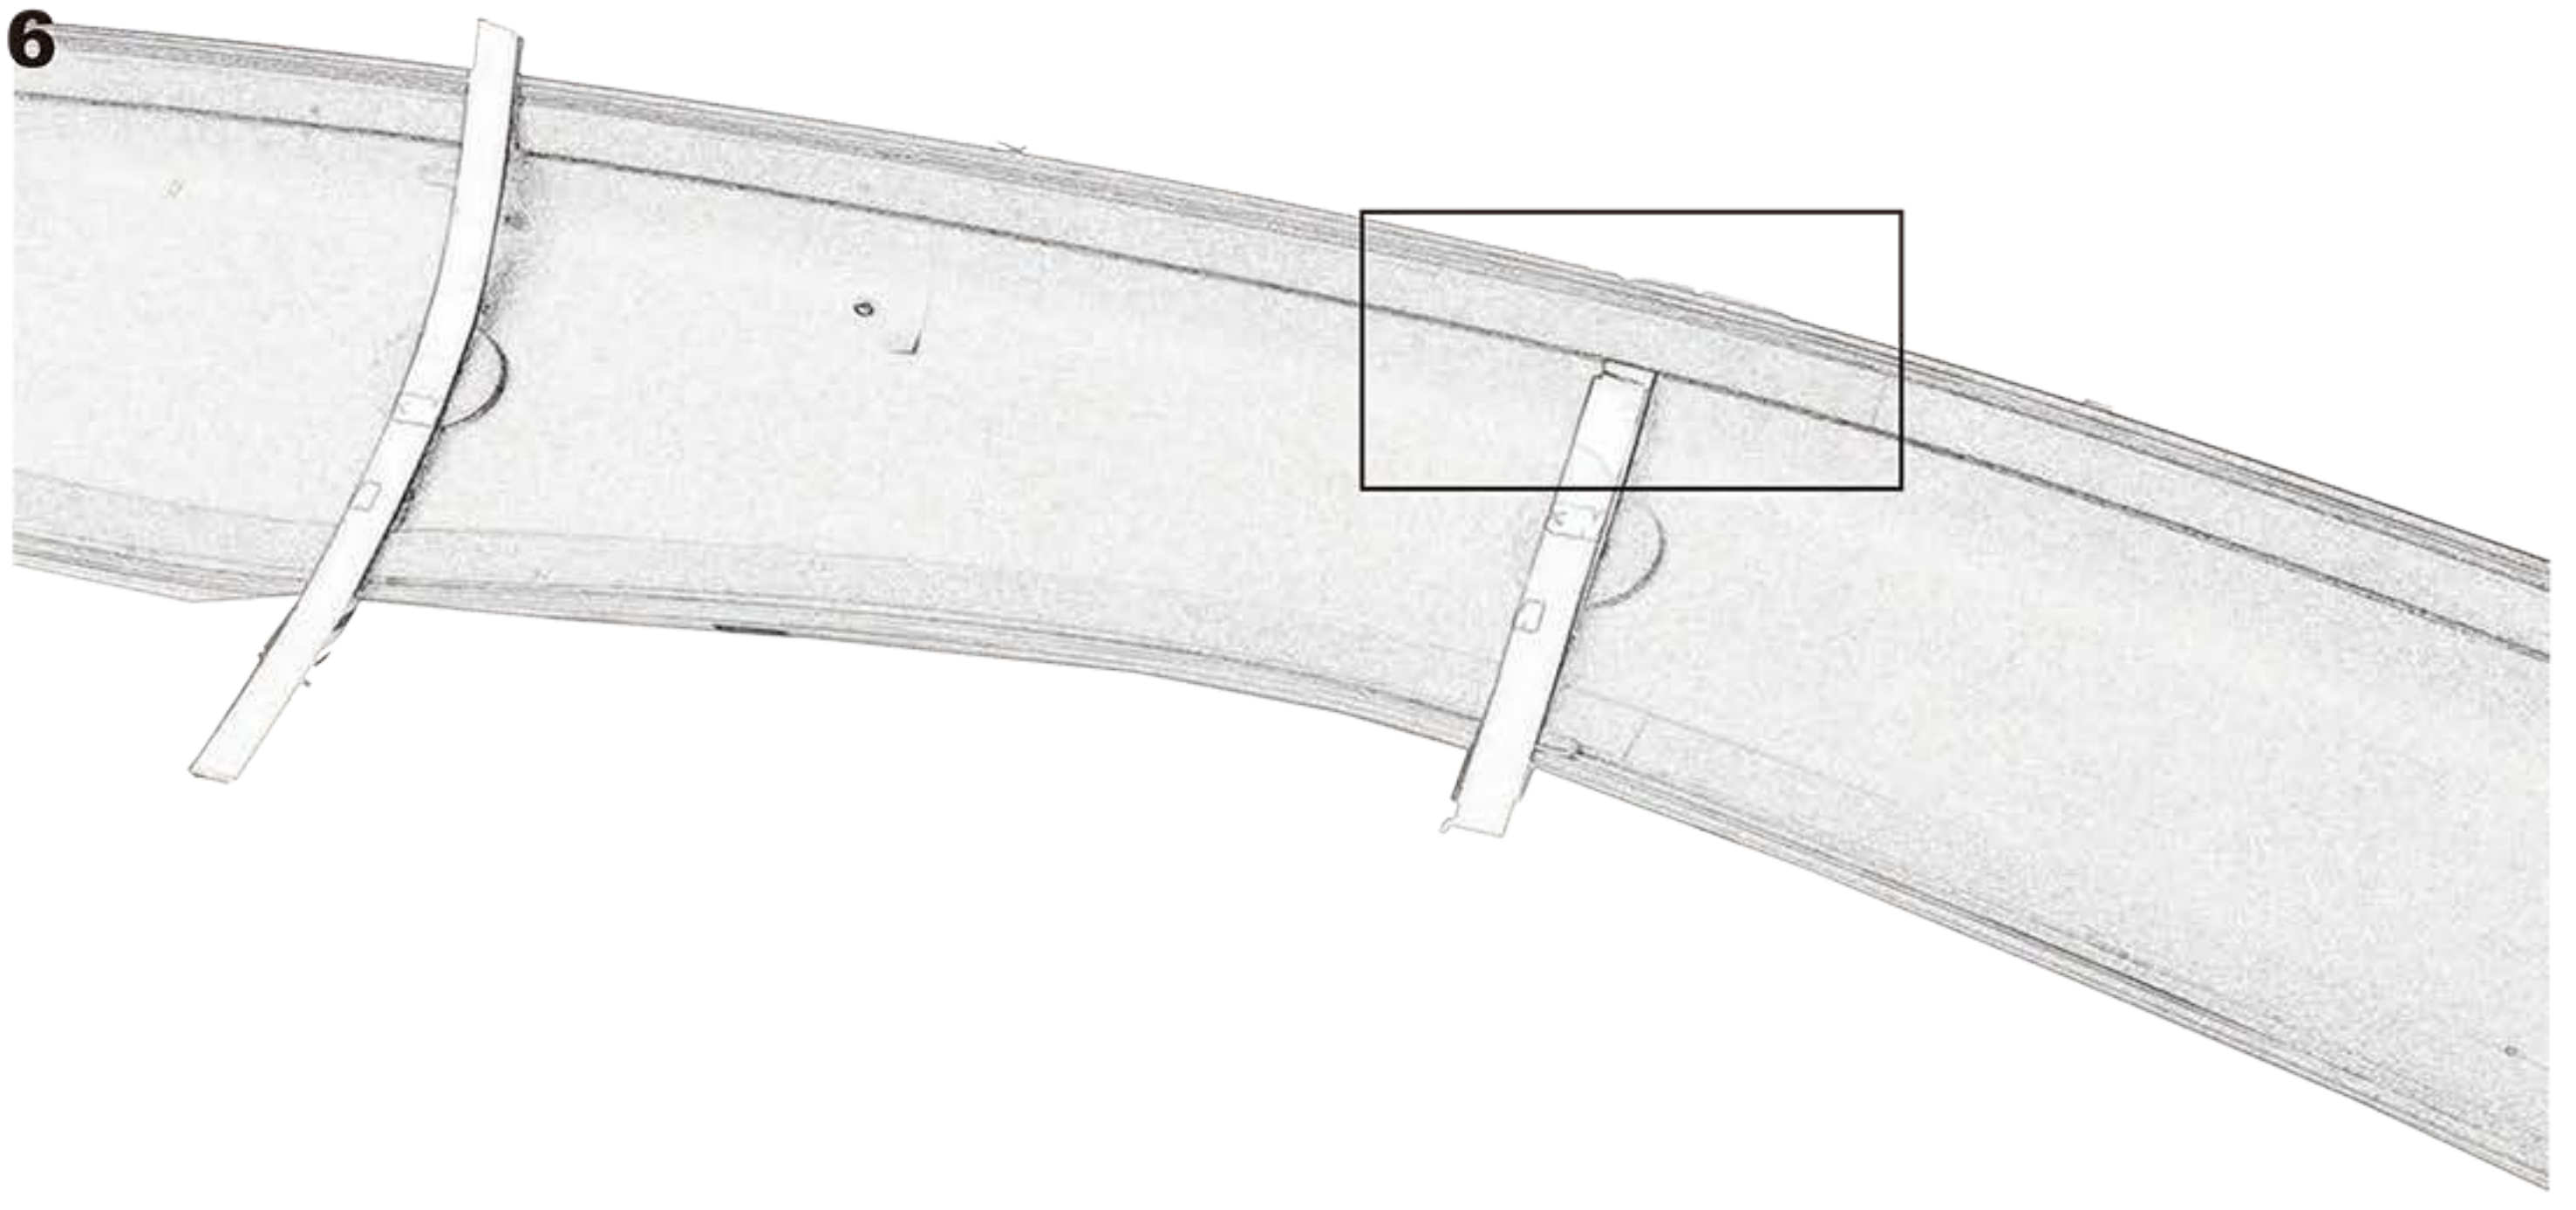

Insert the drilling stripe into the pre-drilled hole, hold them firmly with your thumb and you might need shorted it to fit. Then peel off the double sided tape



42307 Osgood Road Ste C Fremont CA 94539


www.extremeonlinestore.com

Tel: 510-249-9900

SPOILER-195-ABS

INSTALLATION MANUAL


7

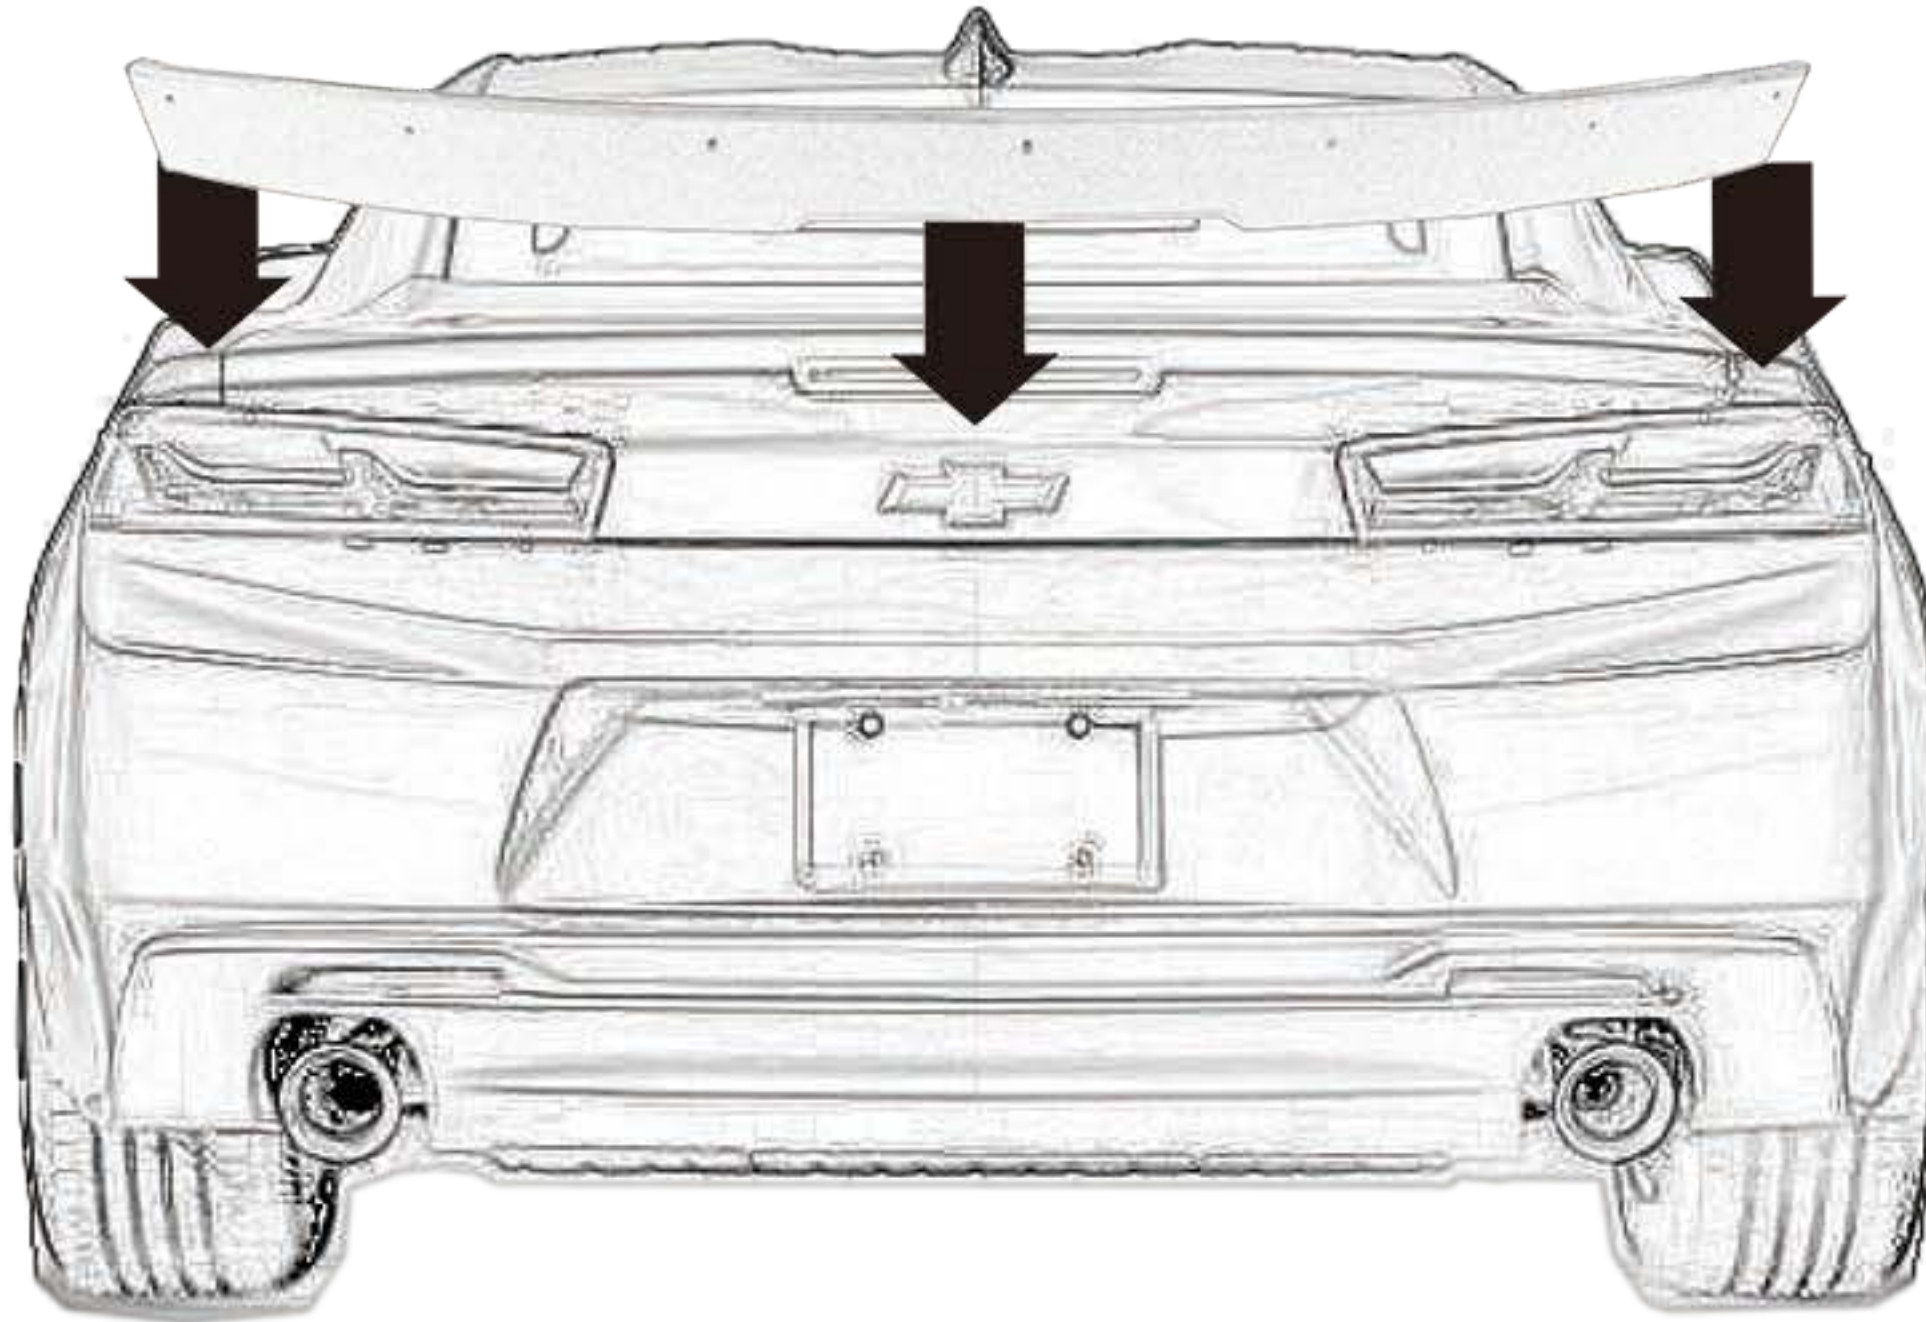

Attach the spoiler with drilling stripes on the vehicle, make sure the alignment is correct .

Gently apply enough pressure to make the drilling stripe stick completely on the trunk.

8

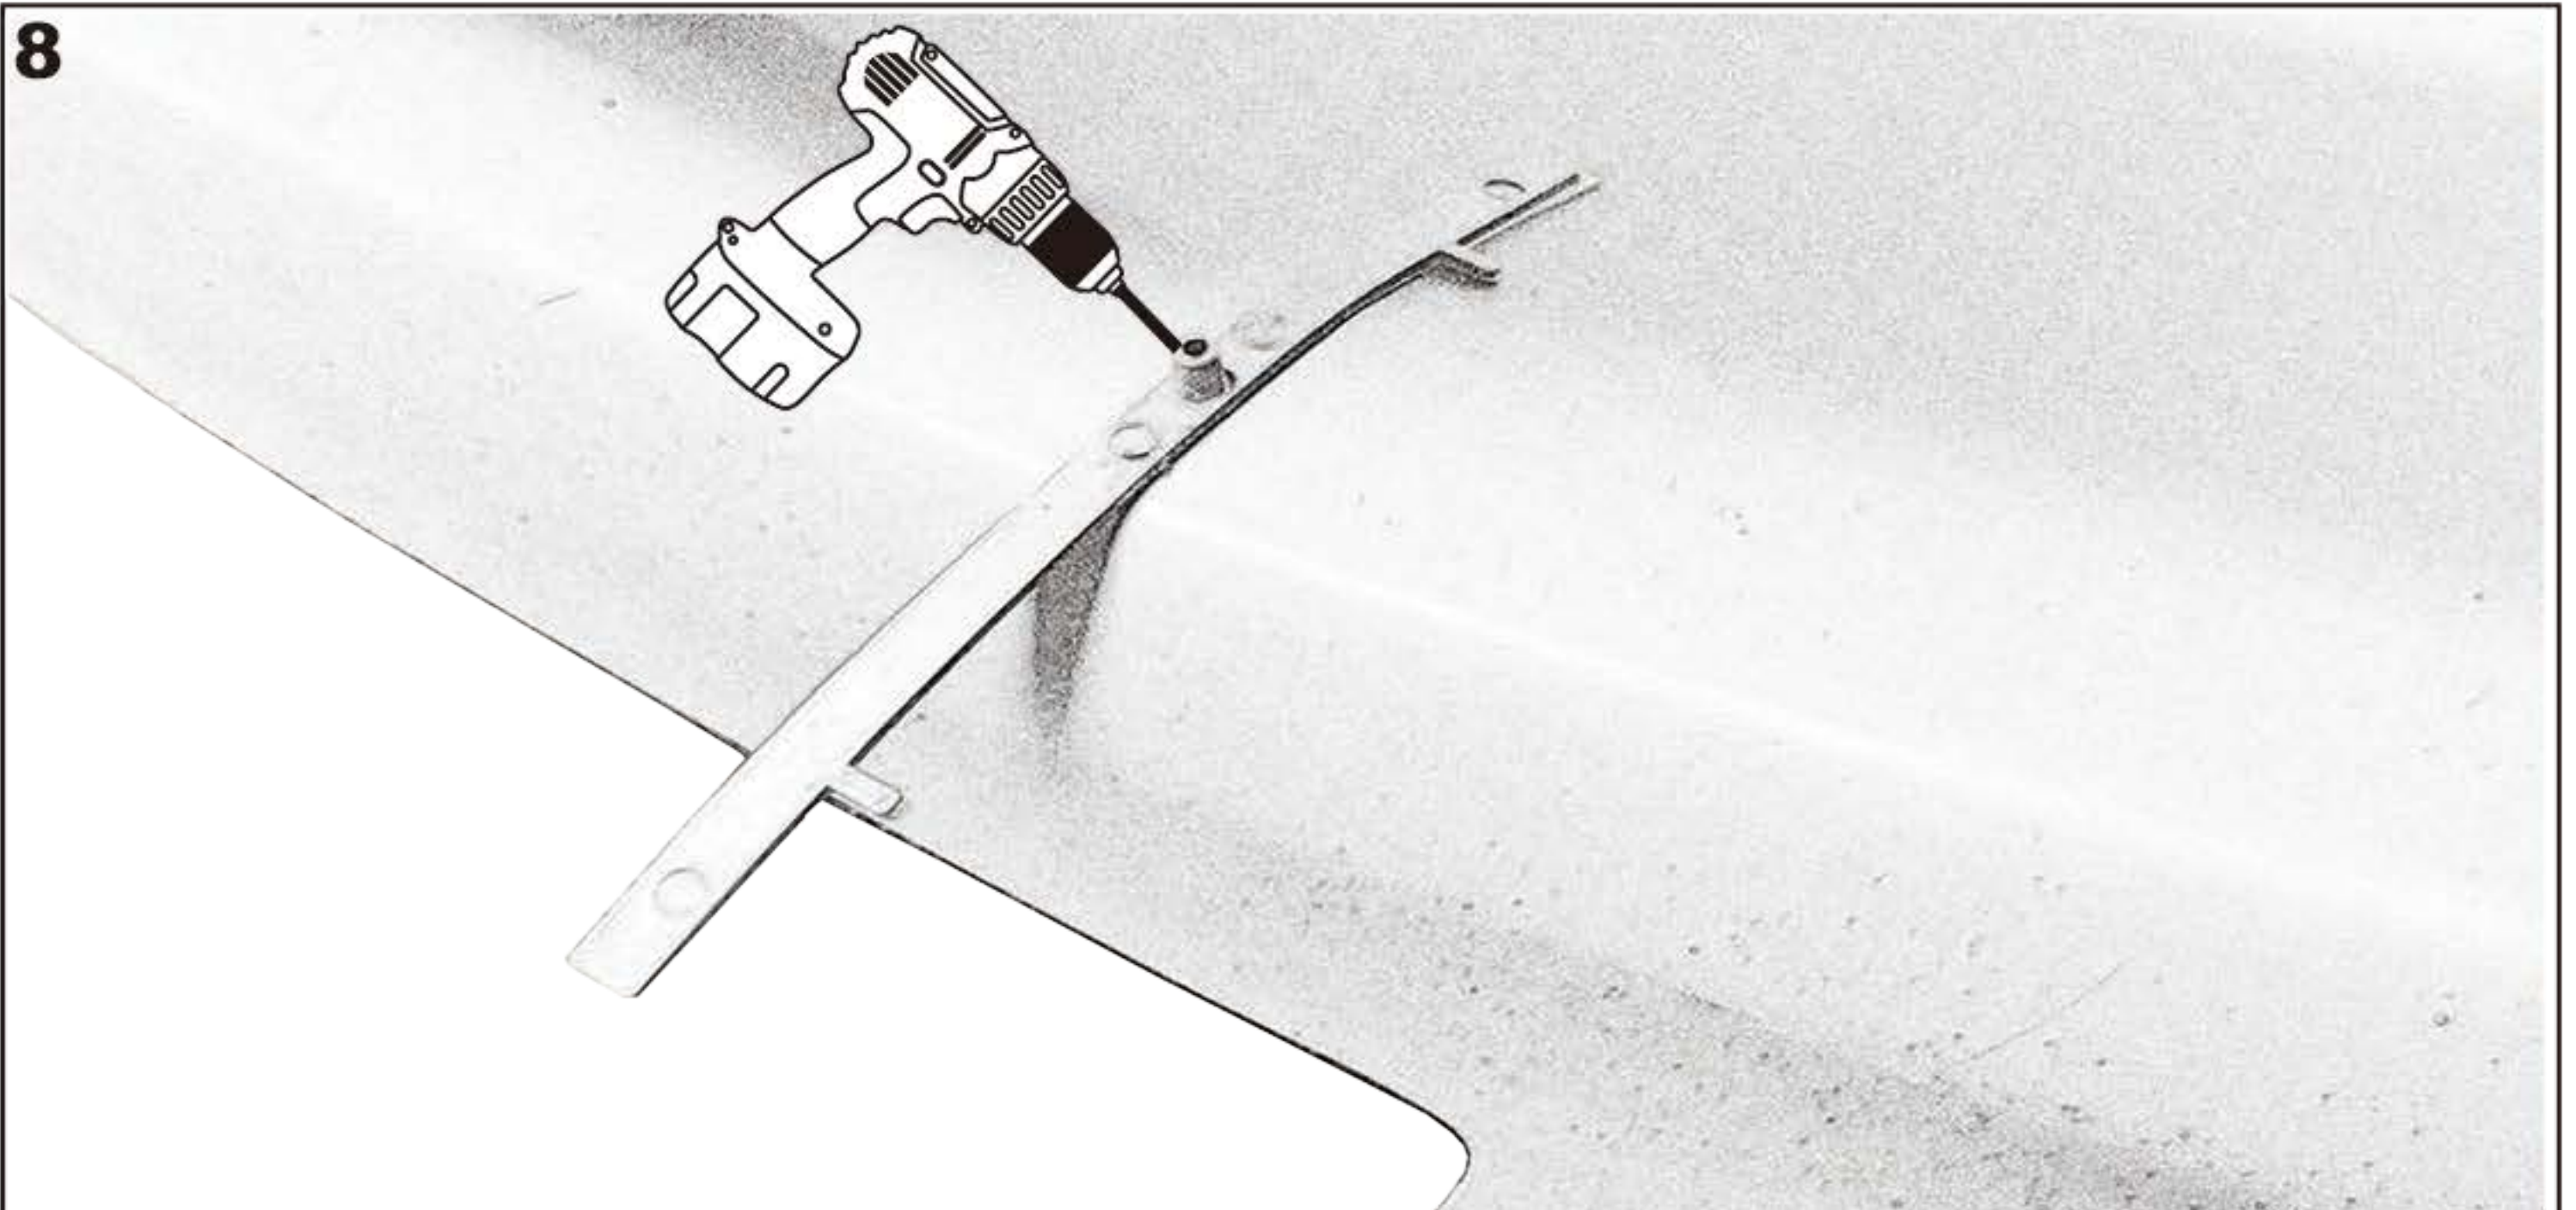

After removing the spoiler, use the drilling stripe as a template. Use any drilling bit that is smaller then 6mm to drill the trunk at the begining. Then use a bigger drilling bit to gradually expand the holes till 6mm.



42307 Osgood Road Ste C Fremont CA 94539


www.extremeonlinestore.com

Tel: 510-249-9900

SPOILER-195-ABS


INSTALLATION MANUAL

9

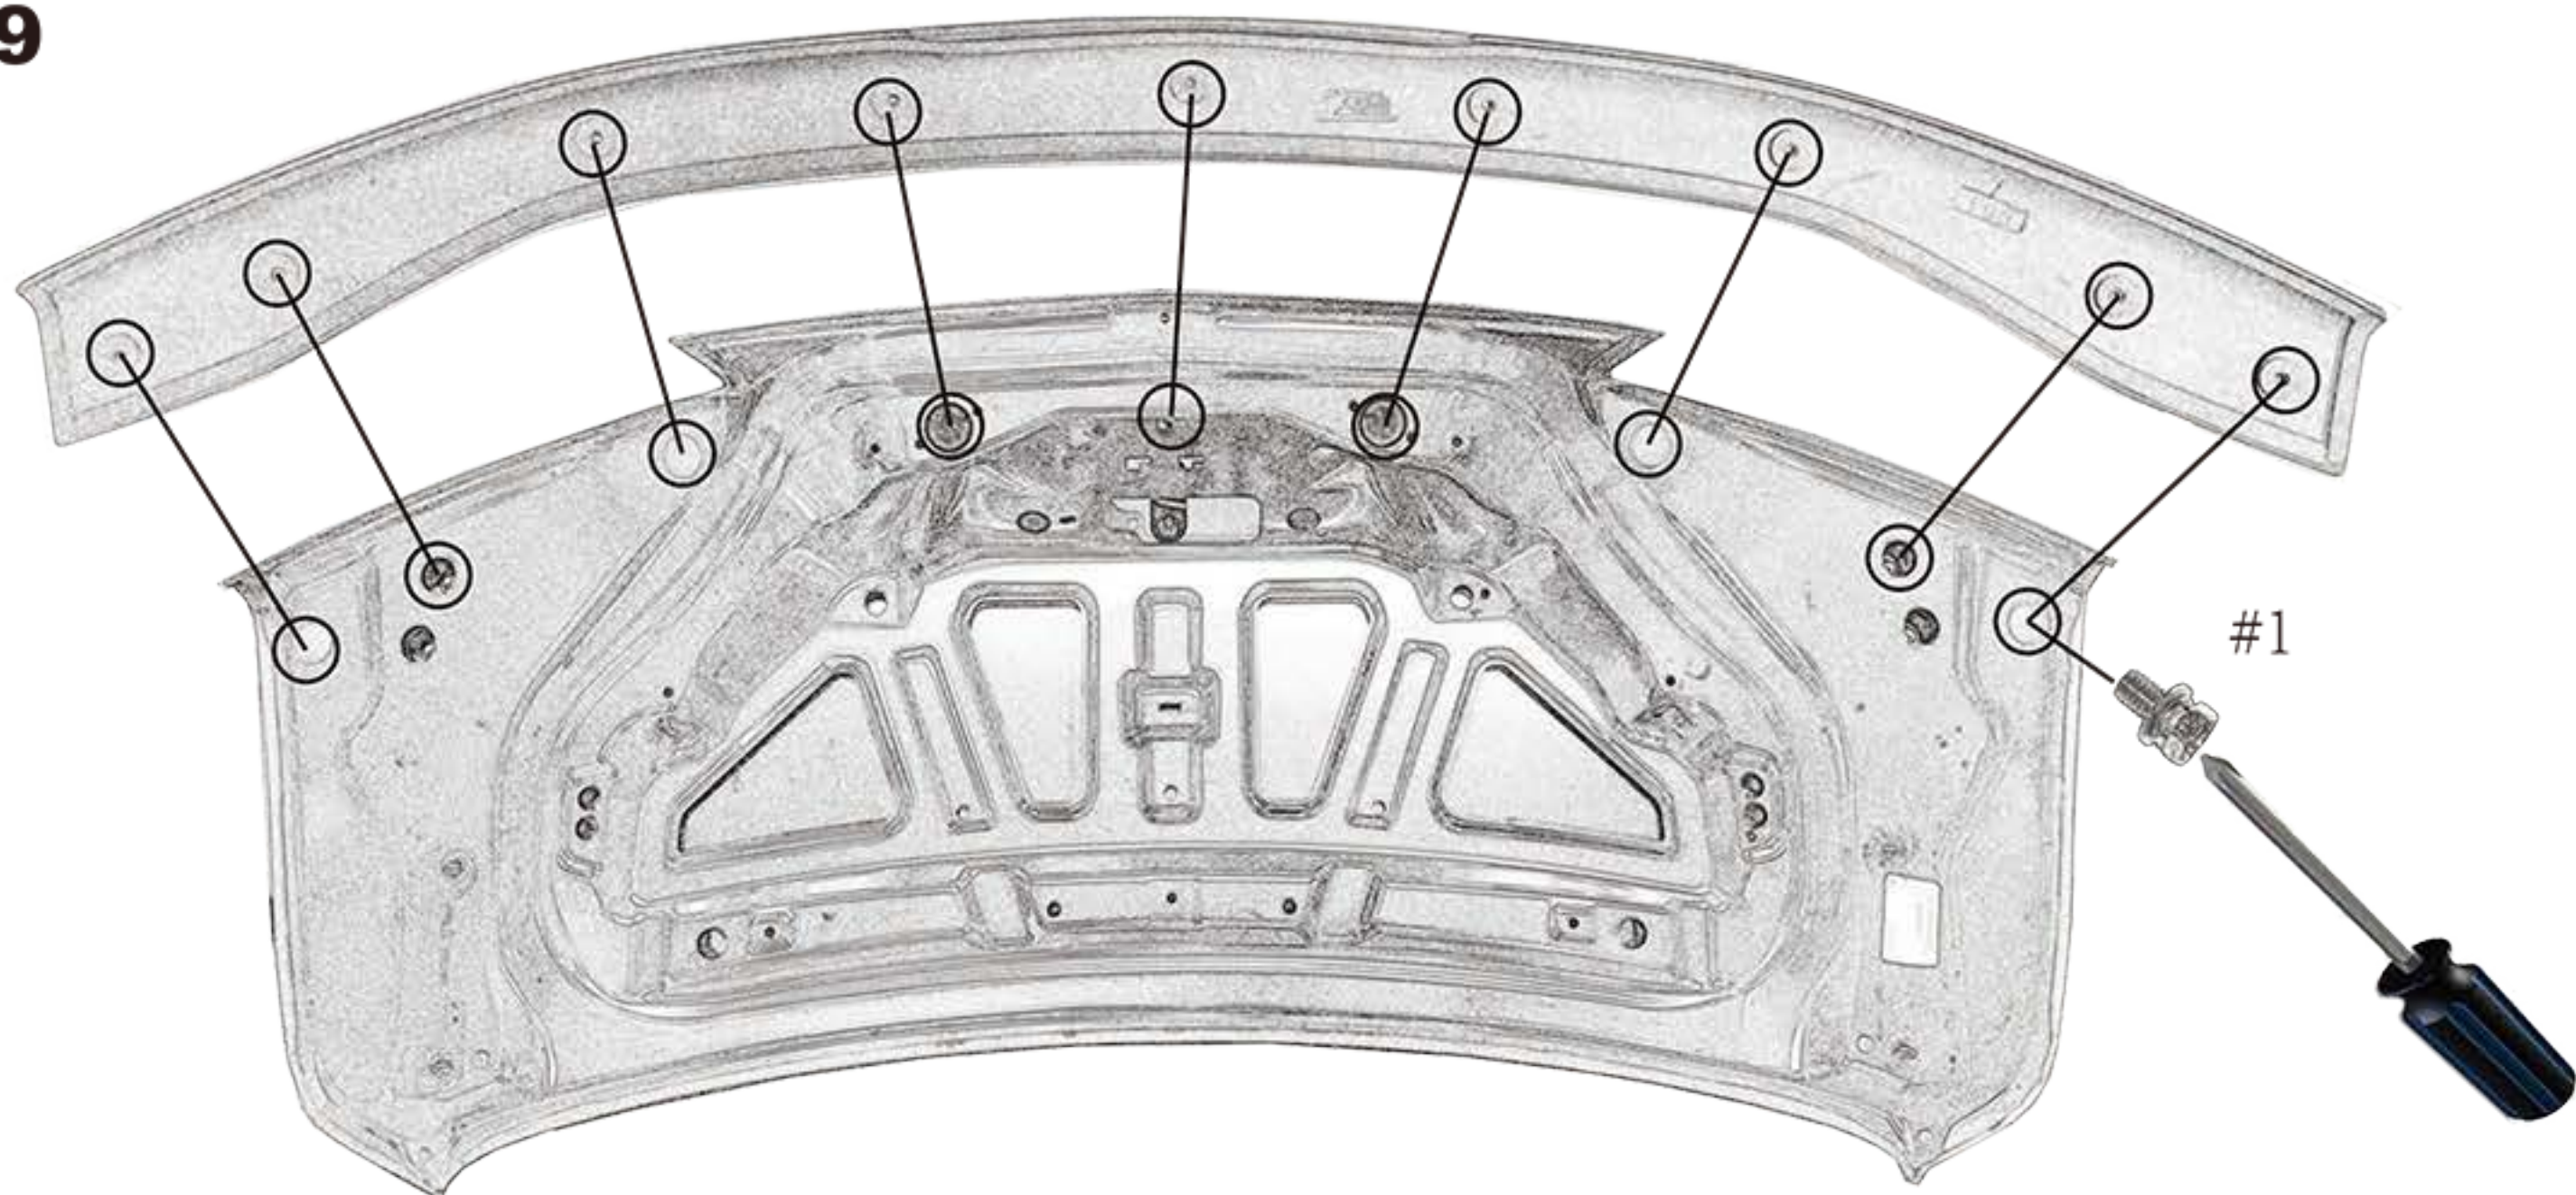

Install the center spoiler with provided bolts #1. (as shown in the picture)

10

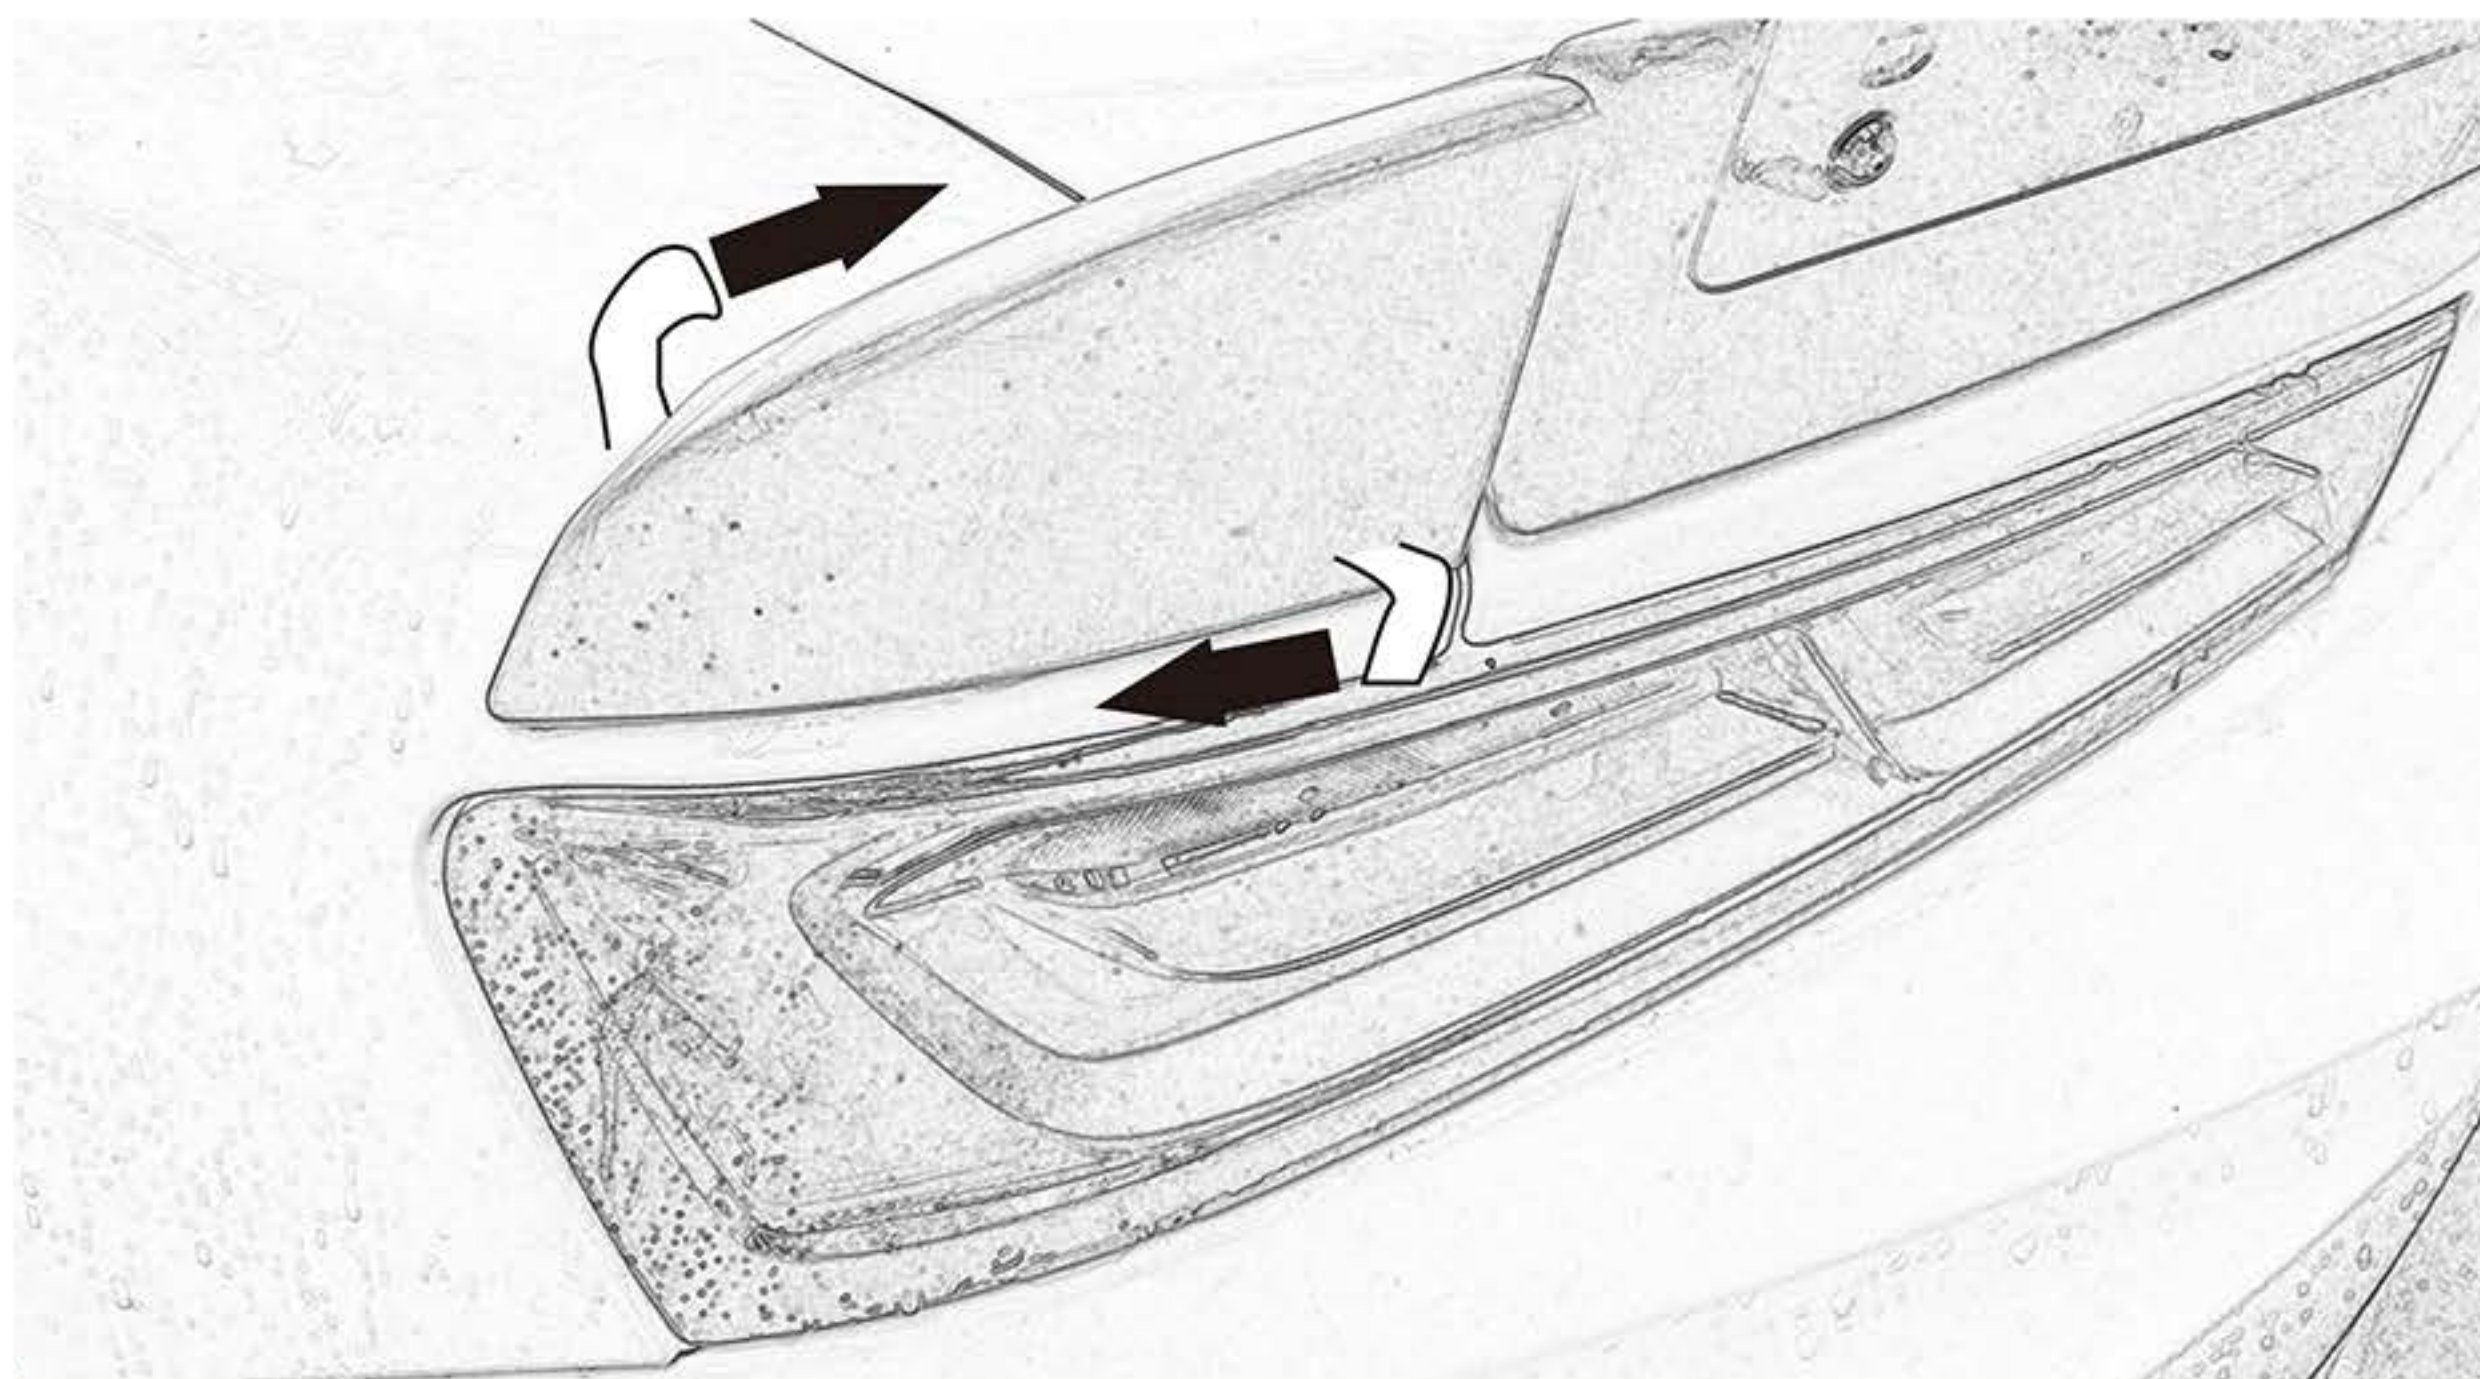

**Partially peel off the red strip on one side.
Then attach both side spoilers on the trunk. SLOWLY peel off the remaining
3M tape. Then apply enough pressure to secure the spoiler**




42307 Osgood Road Ste C Fremont CA 94539
www.extremeonlinestore.com
Tel: 510-249-9900

SPOILER-195-ABS

INSTALLATION MANUAL

11

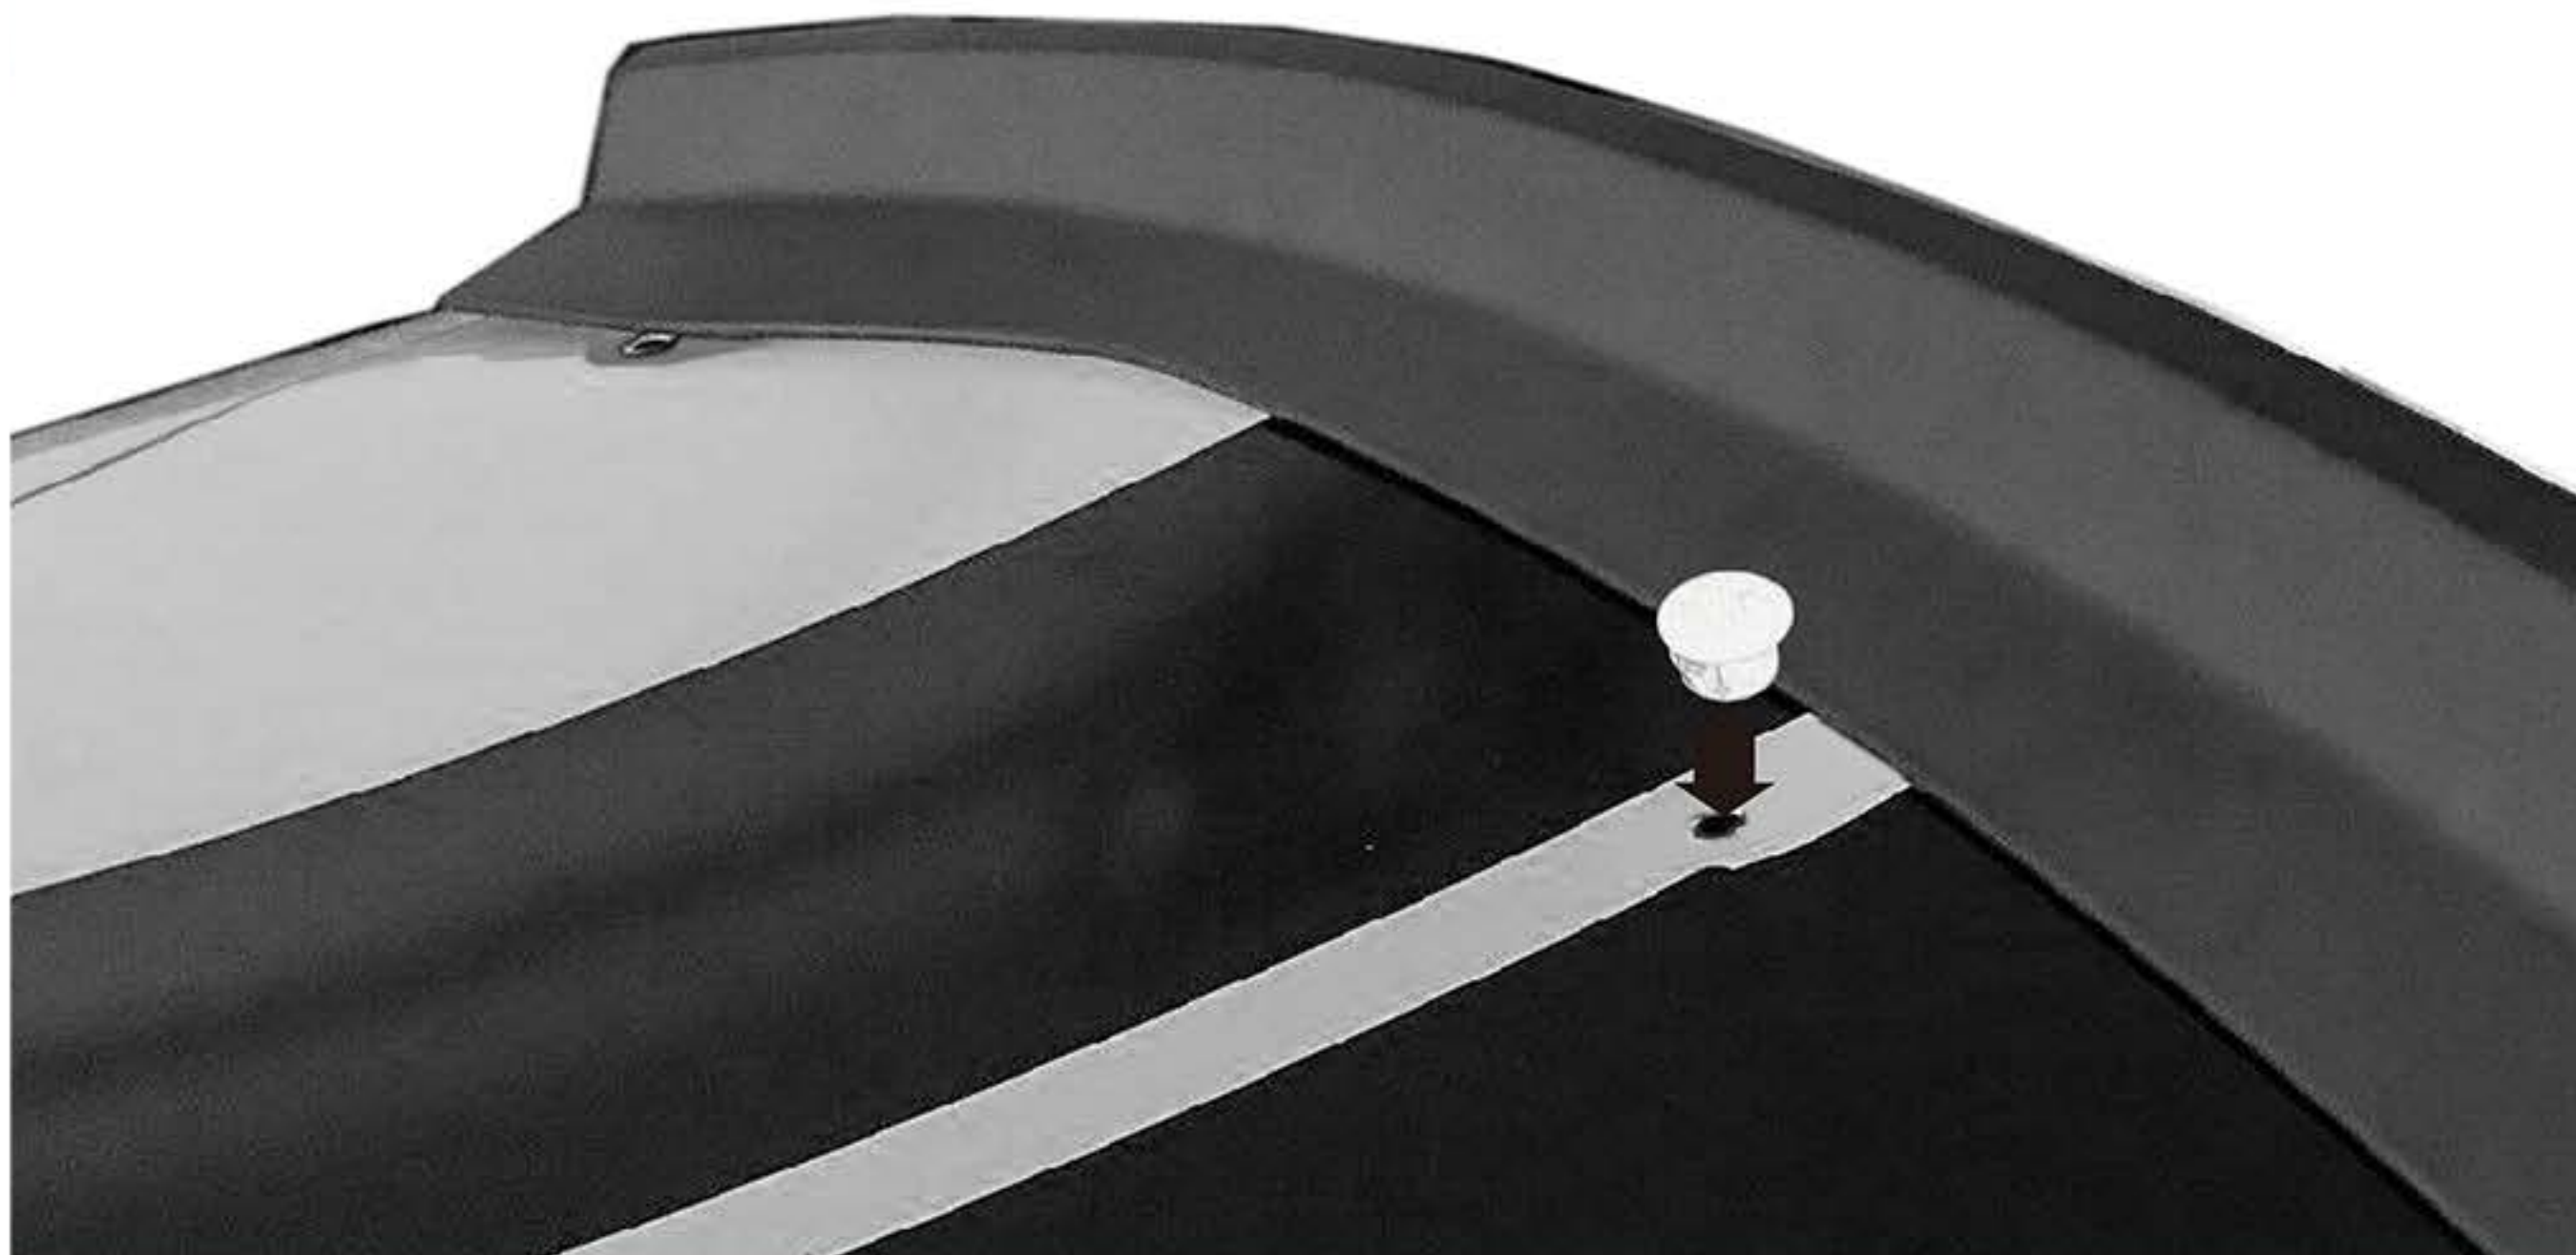

There will be one uncovered center hole, if your model is a regular SS/ZL1, simply fill it with 6mm Locking Hole Plug

12



**Attach the extension to the centre spoiler
Secure it by bolt #2 (Align from the middle to the side)**