



Rear Bumper Fascia Removal and Installation

Removal Procedure


1. Underbody Rear Air Rear Deflector » Remove — [Underbody Rear Air Rear Deflector Replacement](#)
2. Remove the rear wheel opening molding from the left and right side. [Rear Wheel Opening Molding Replacement](#)

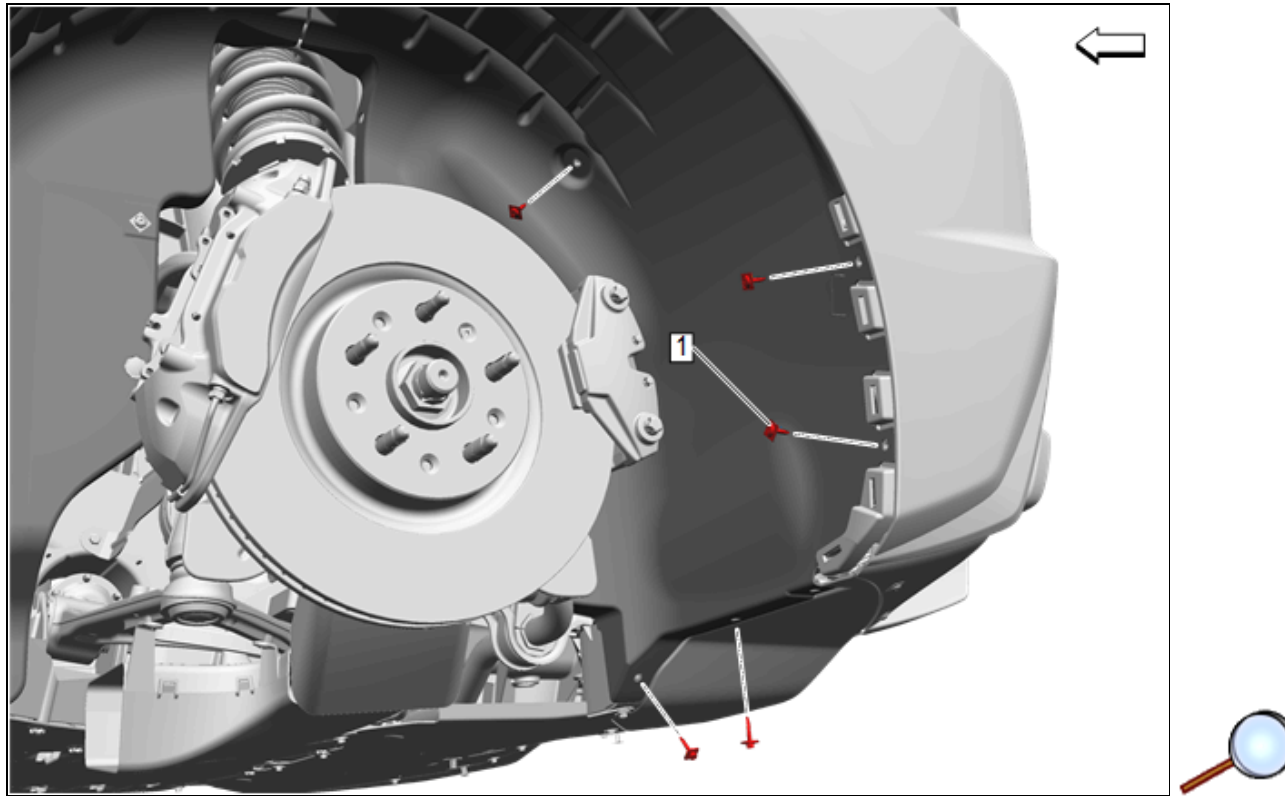


3. Remove the 5 rear wheelhouse liner bolts (1) from left side rear wheelhouse liner to access the rear bumper fascia bolts. [Rear Wheelhouse Liner Replacement- Left Side](#)

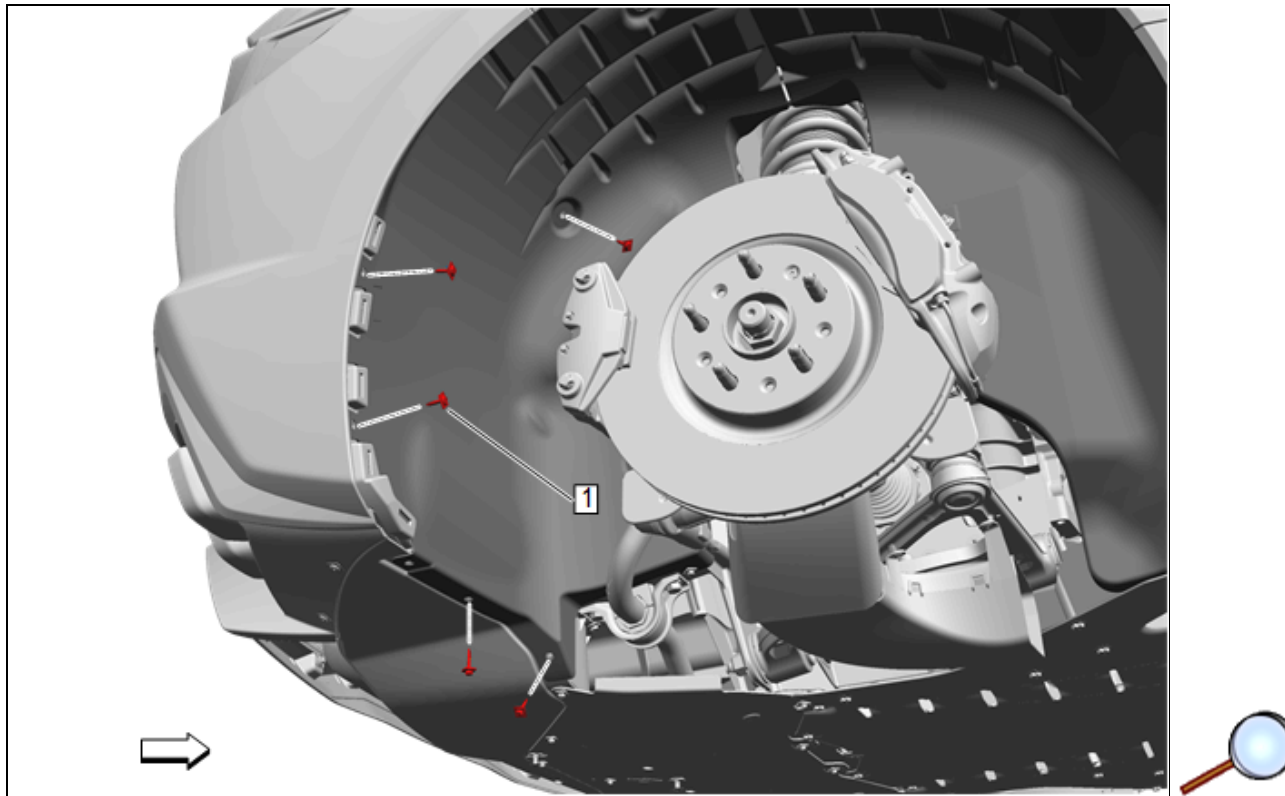


4. Remove the 5 rear wheelhouse liner bolts (1) from right side rear wheelhouse liner to access the rear bumper fascia bolts. [Rear Wheelhouse Liner Replacement - Right Side](#)

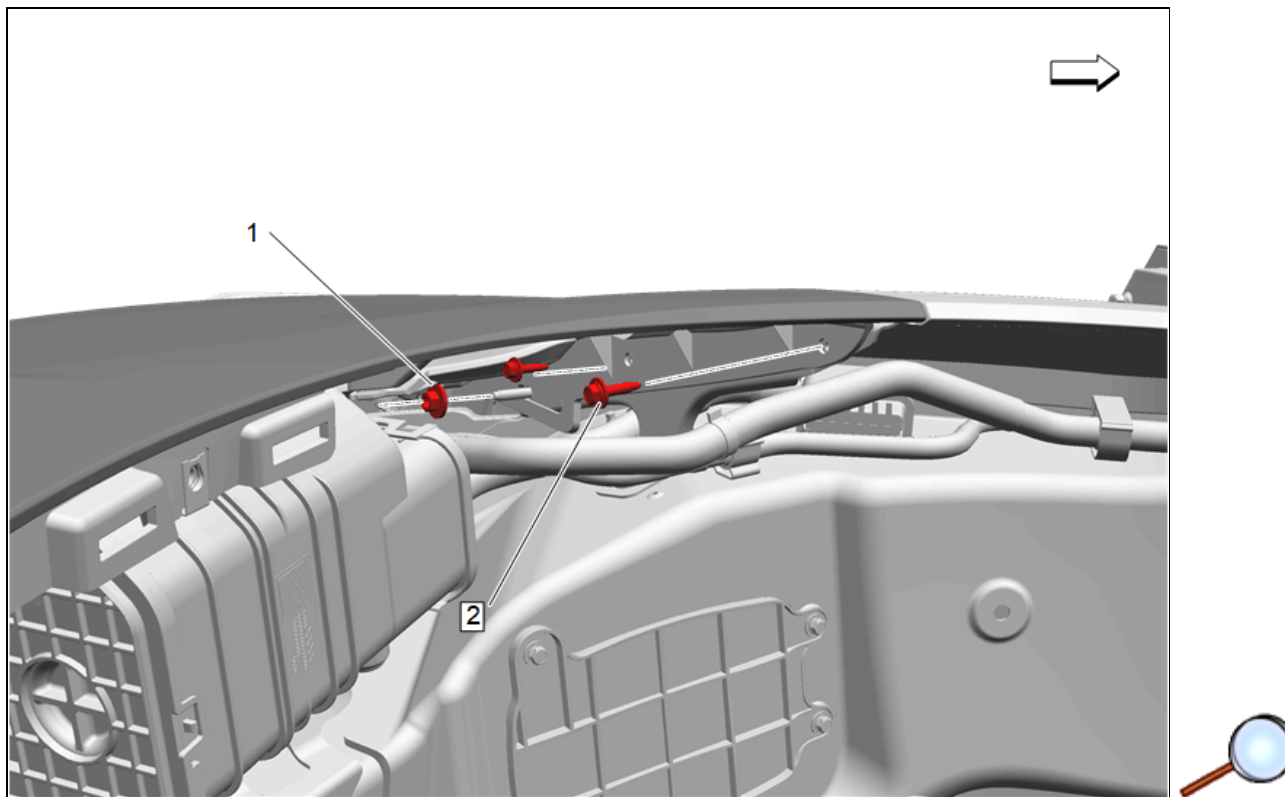


- 5. Remove the right side rear fascia nut (1).
- 6. Remove the 2 right side rear fascia bolts (2).

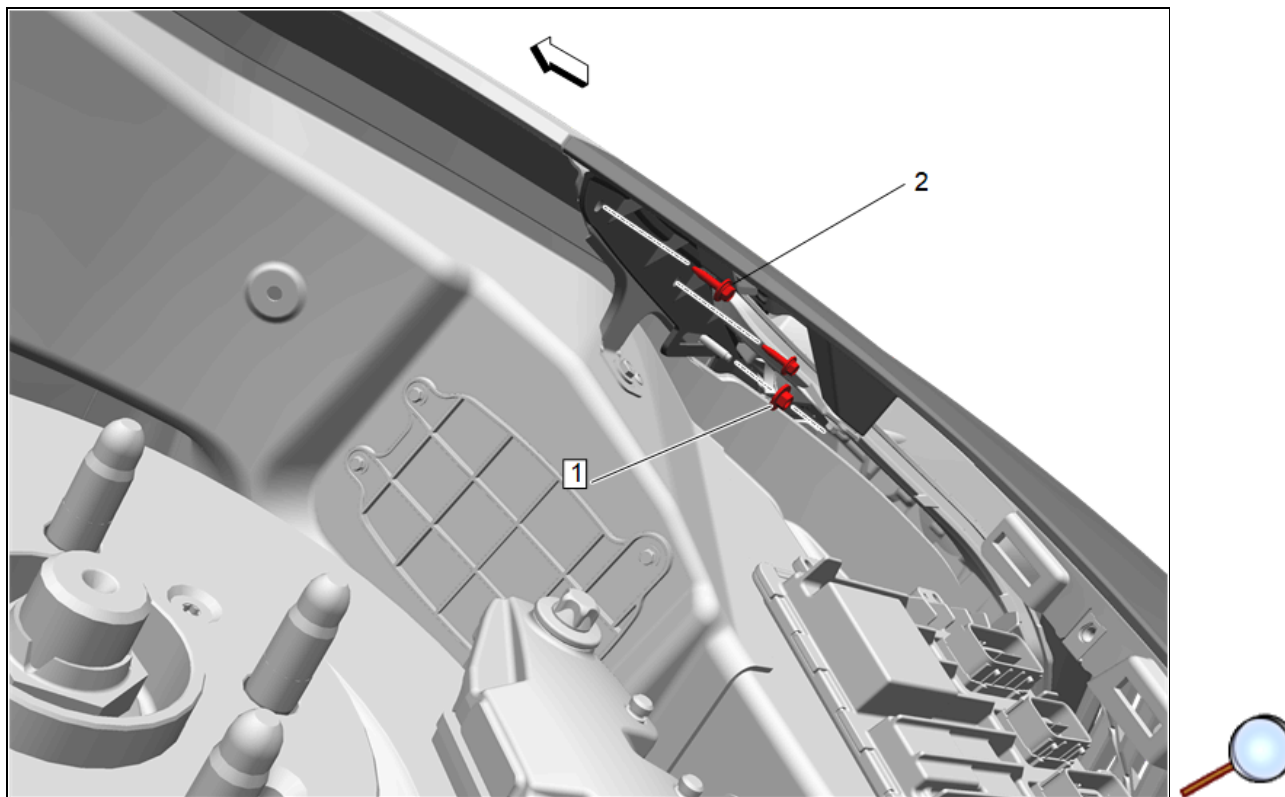


- 7. Remove the left side rear fascia nut (1).
- 8. Remove the 2 left side rear fascia bolts (2).

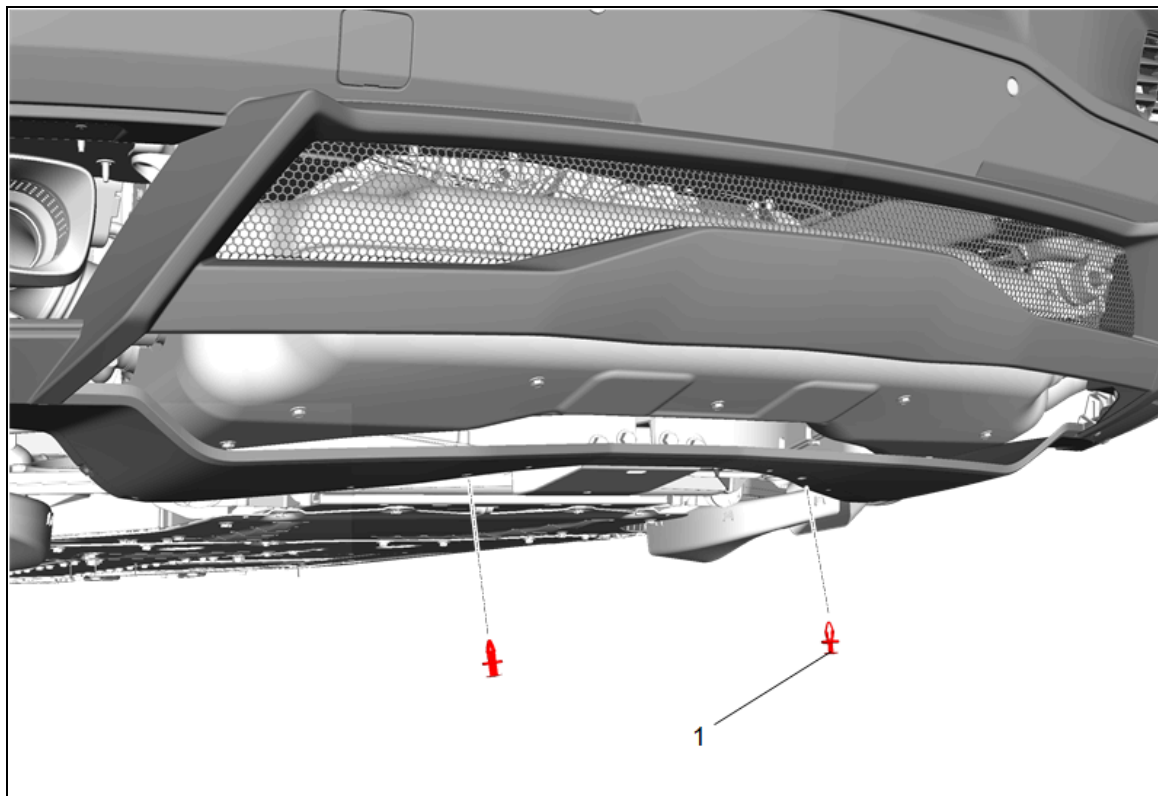


9. Rear Bumper Fascia Retainer (1) » Remove [2x]

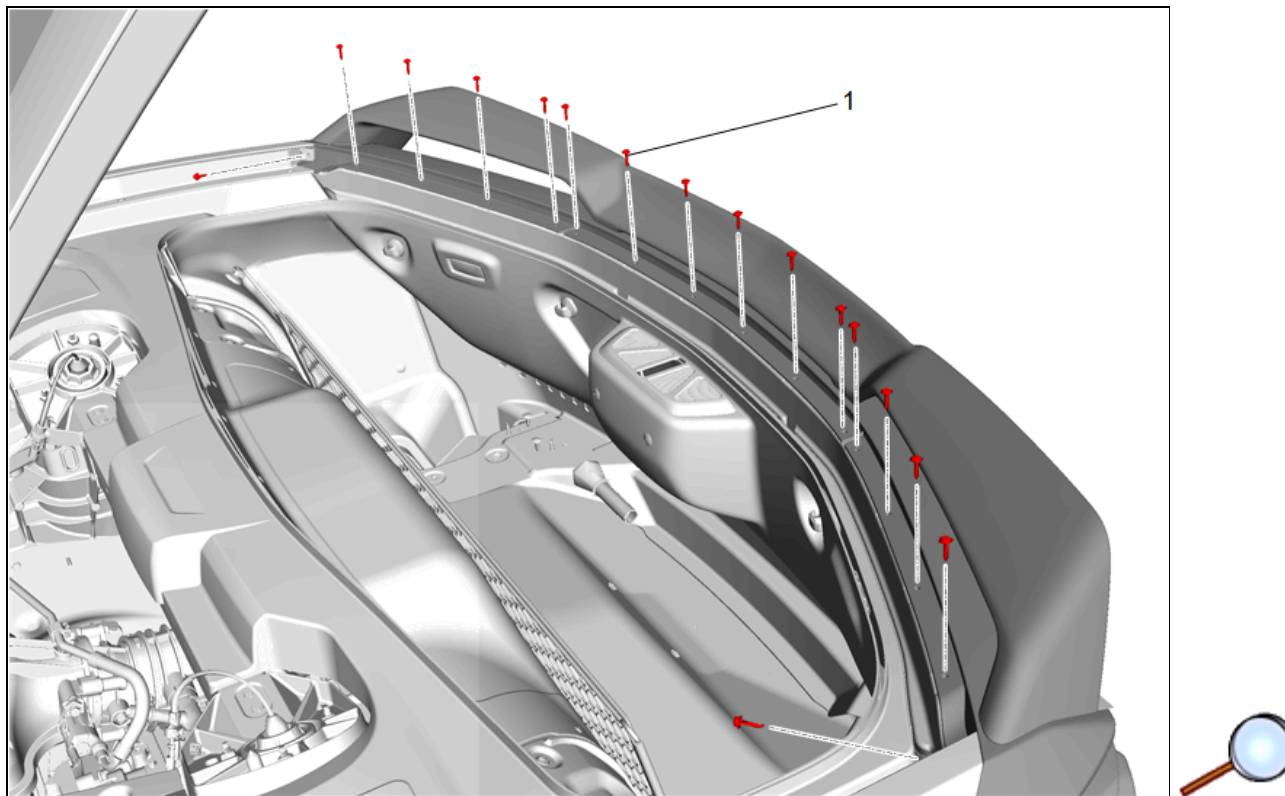

10. Rear Bumper Fascia Bolt (1) » Remove [16x]

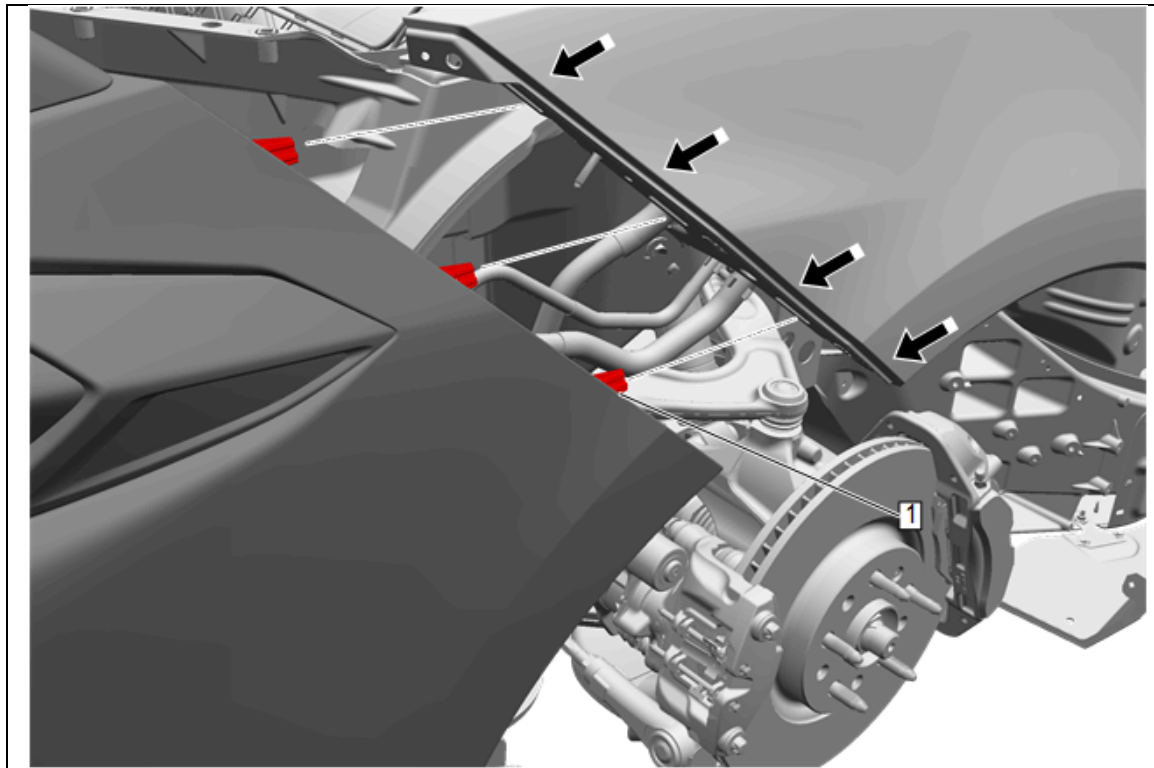


11. Apply two layers of masking tape to the painted surface of the left and right quarter panel to prevent paint damage to the quarter panel.
12. Release the 3 left and right side rear bumper fascia tabs (1) from the rear bumper fascia reinforcement.

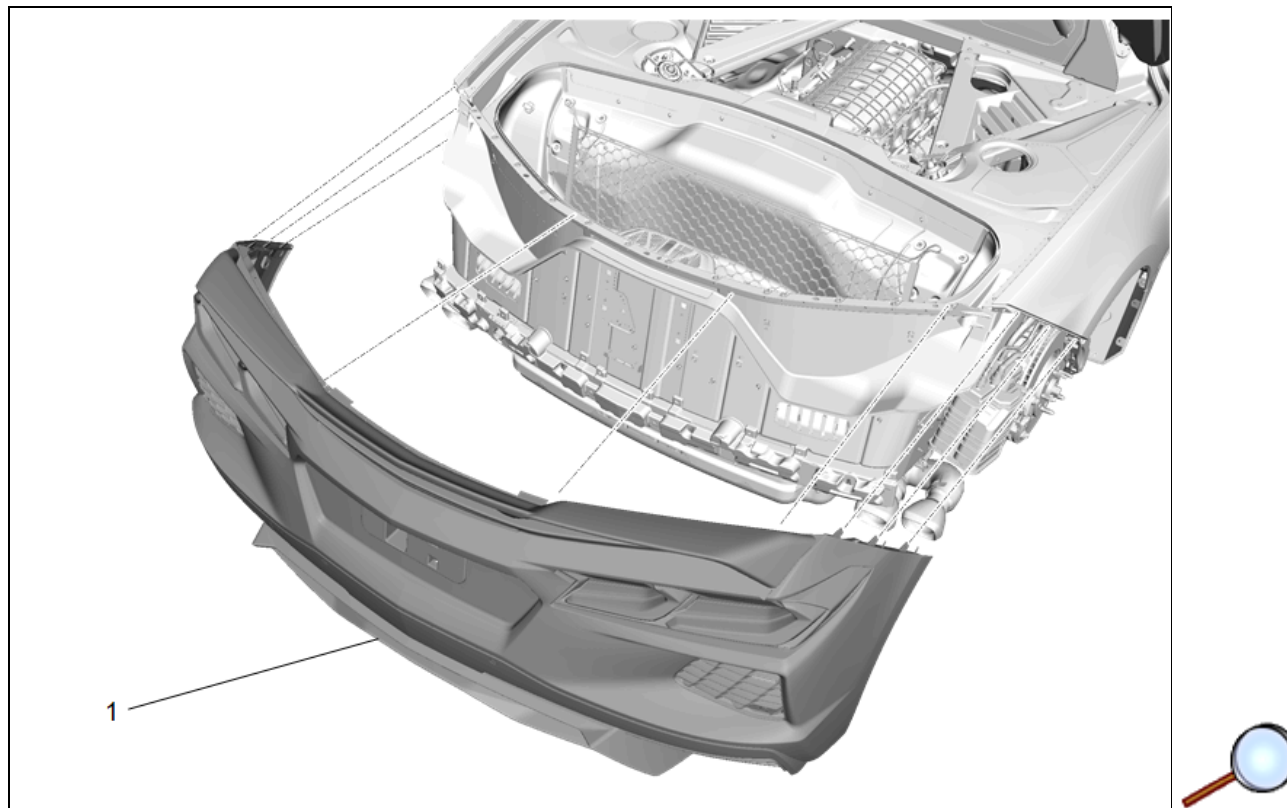


- 13. Rear Bumper Fascia (1) » Remove
- 14. Disconnect all electrical connectors.


Installation Procedure

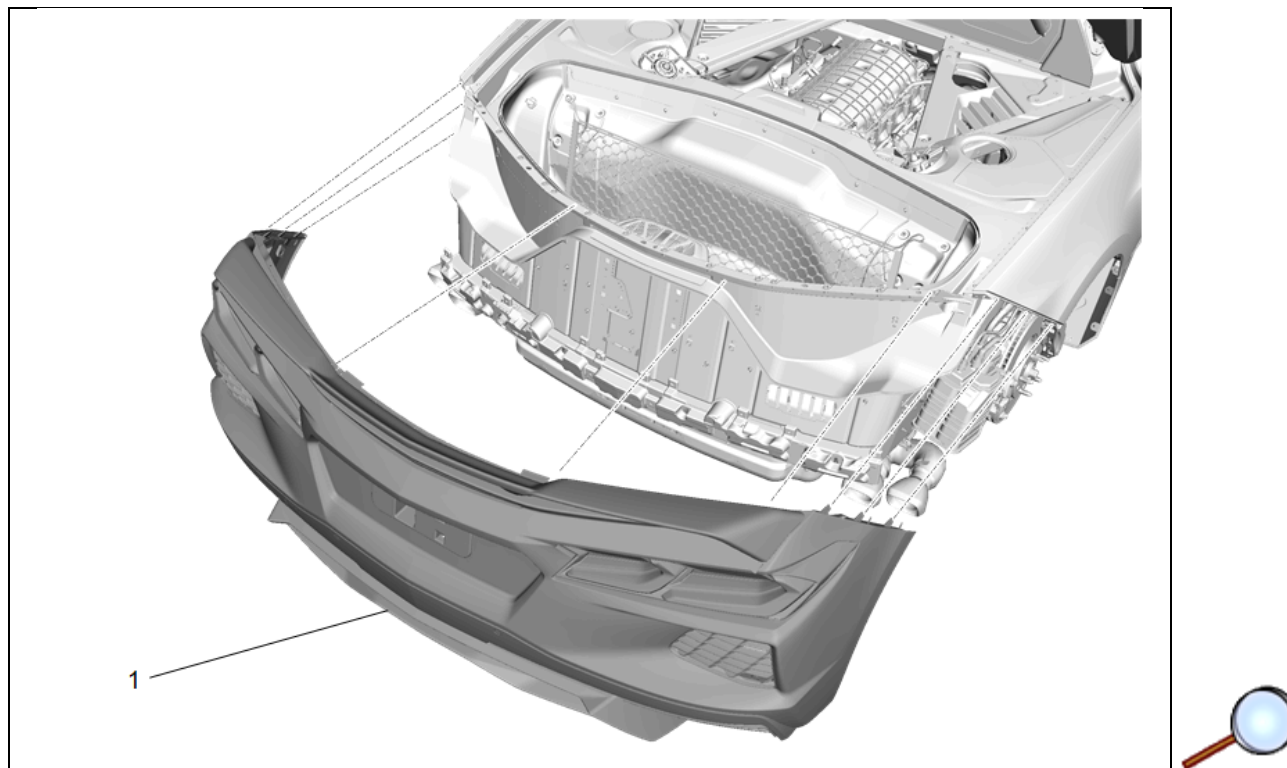

1. Connect the electrical connectors.
2. Rear Bumper Fascia (1) » Install

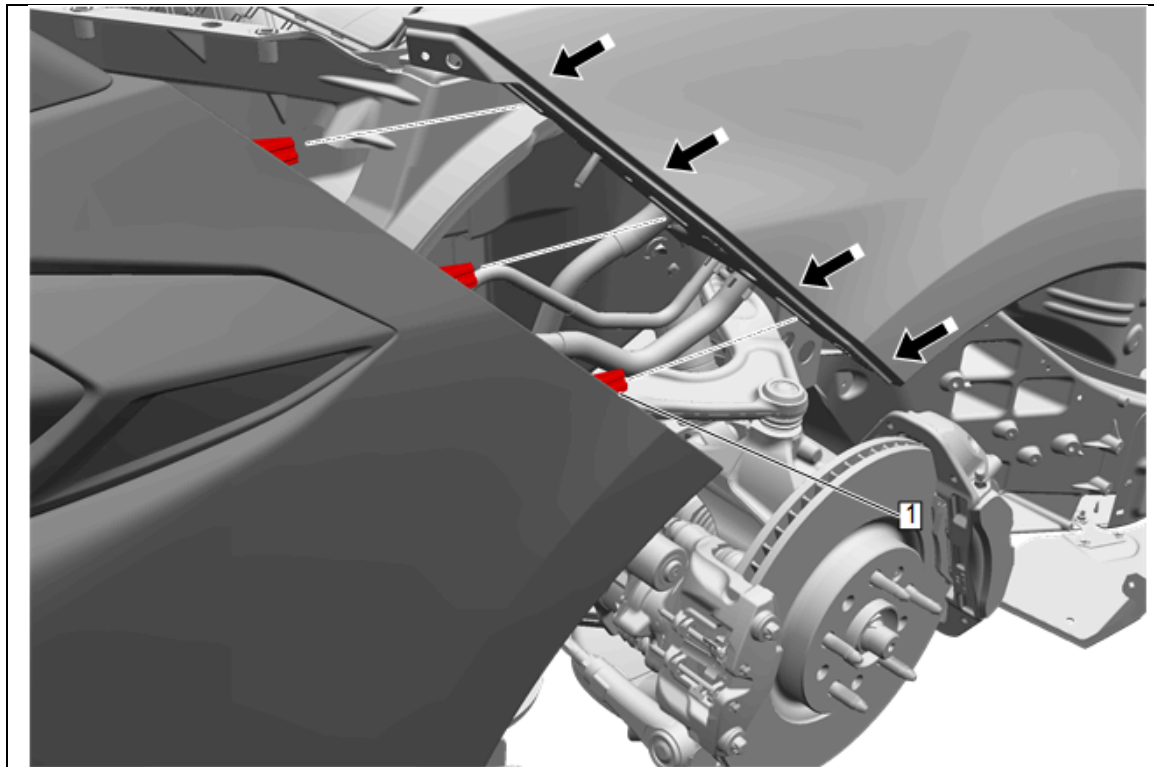


3. Secure the 3 left and right side rear bumper fascia tabs (1) to the rear bumper fascia reinforcement.
4. Remove the double layer of masking tape from painted surfaces.
5. Using a 50/50 mixture of isopropyl alcohol and clean drinkable water with a clean towel, remove any left over adhesive residue from the masking tape.

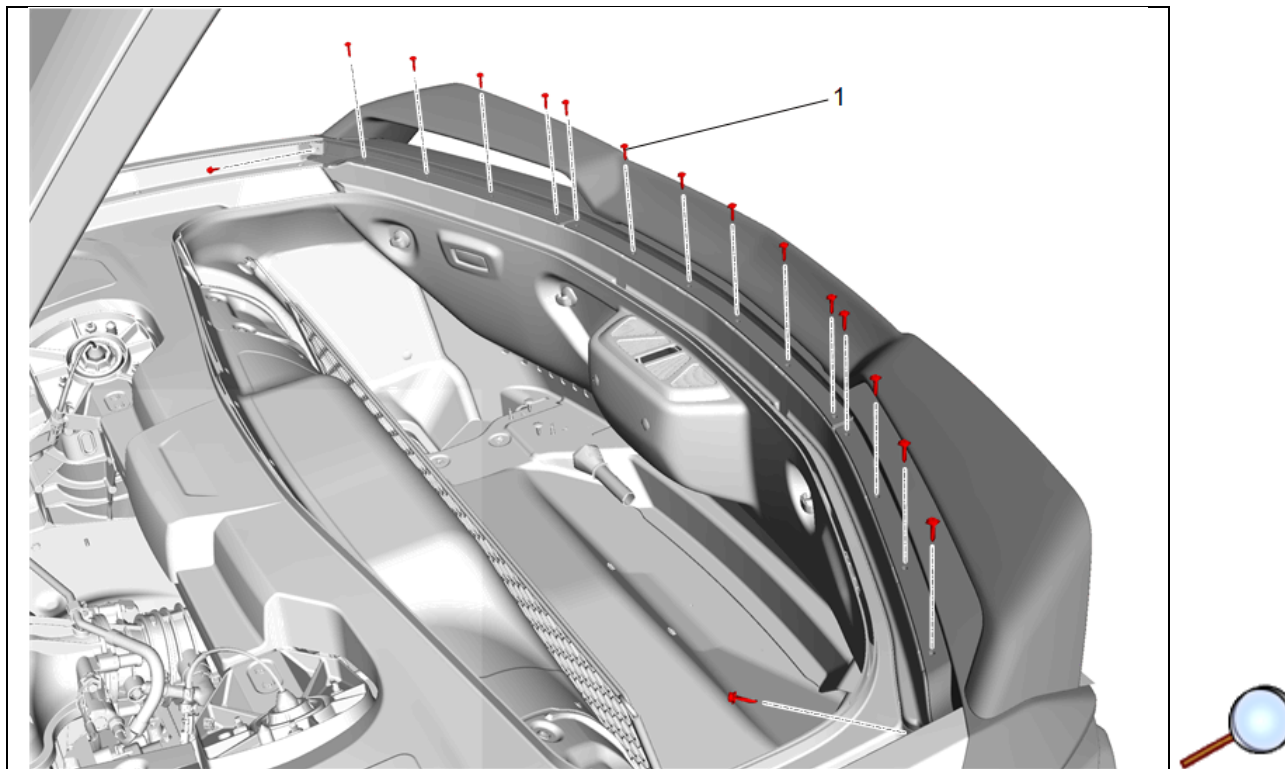


Caution: Refer to [Fastener Caution](#).


6. Rear Bumper Fascia Bolt (1) » Install and tighten [16x] **2.5 N•m (22 lb in)**

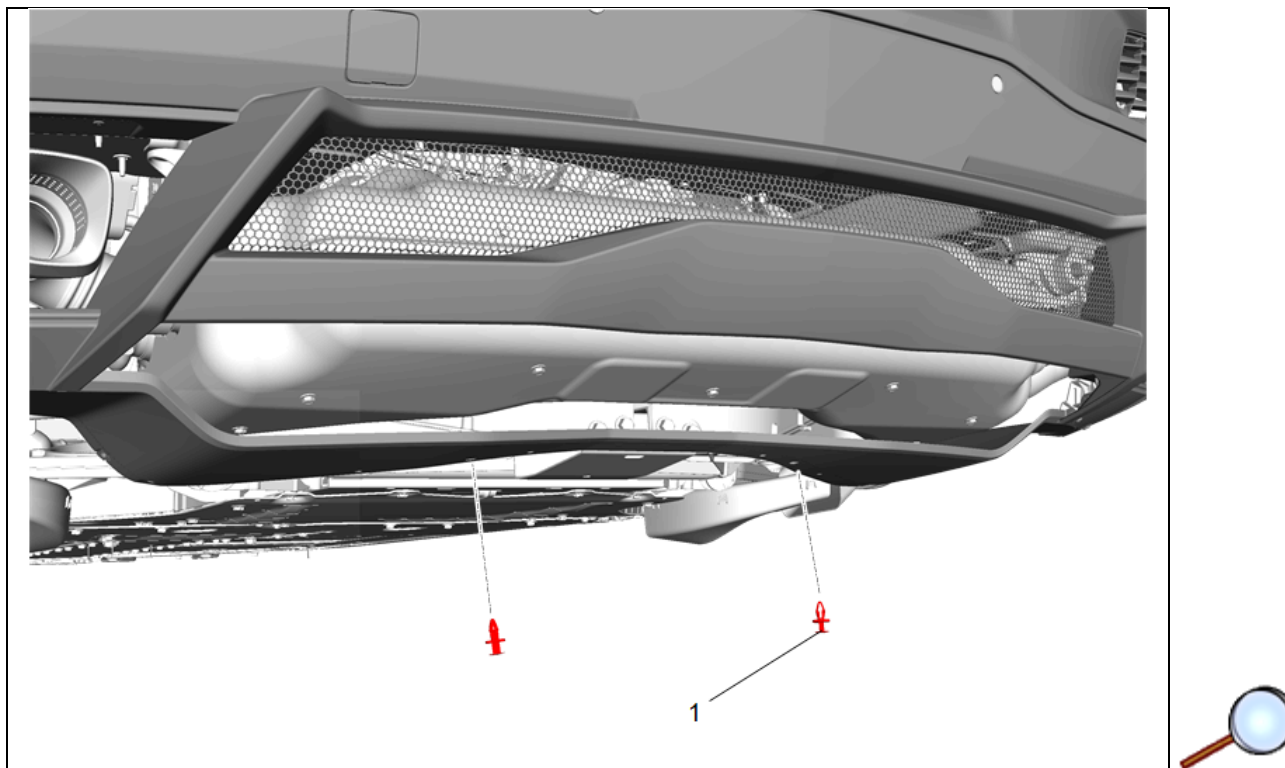


7. Rear Bumper Fascia Retainer (1) » Install [2x]

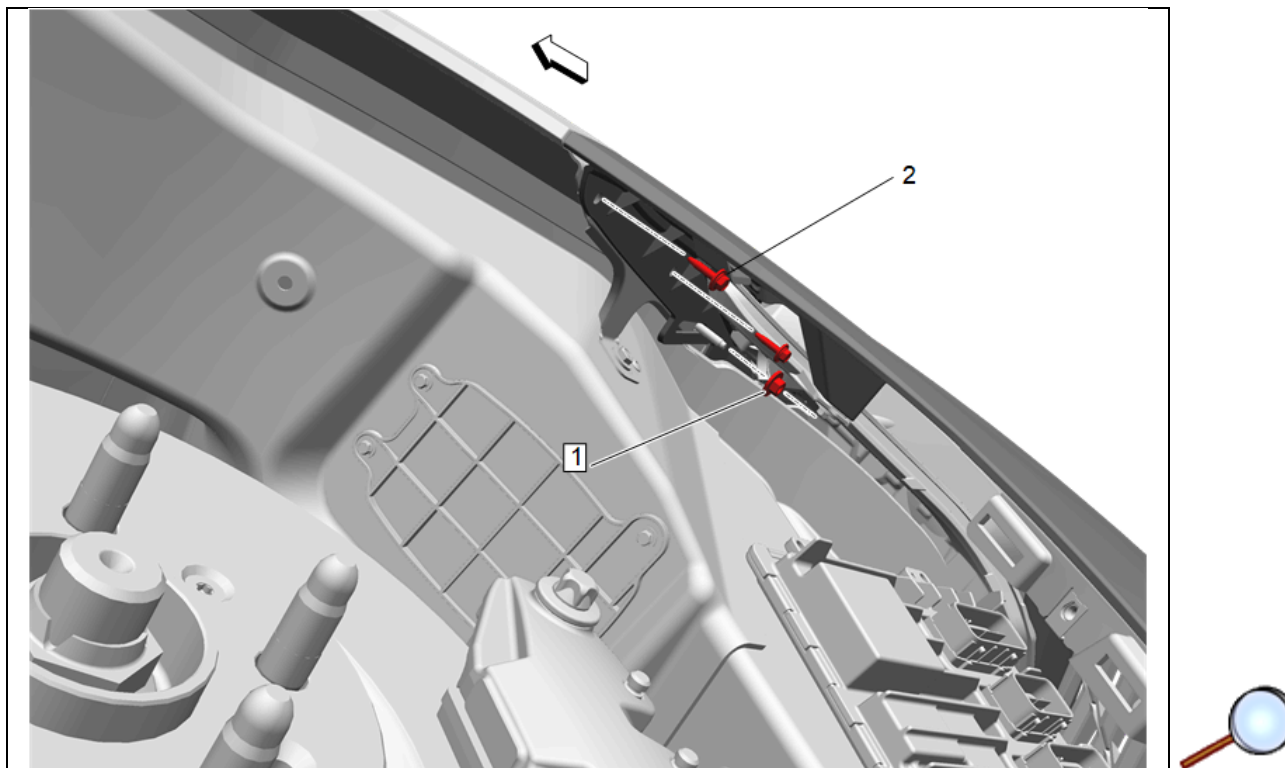


8. Install the left side rear bumper fascia nut (1) and tighten to **2.5 N•m (22 lb in)** .
9. Install the 2 left side rear bumper fascia bolts (2) and tighten to **2.5 N•m (22 lb in)** .

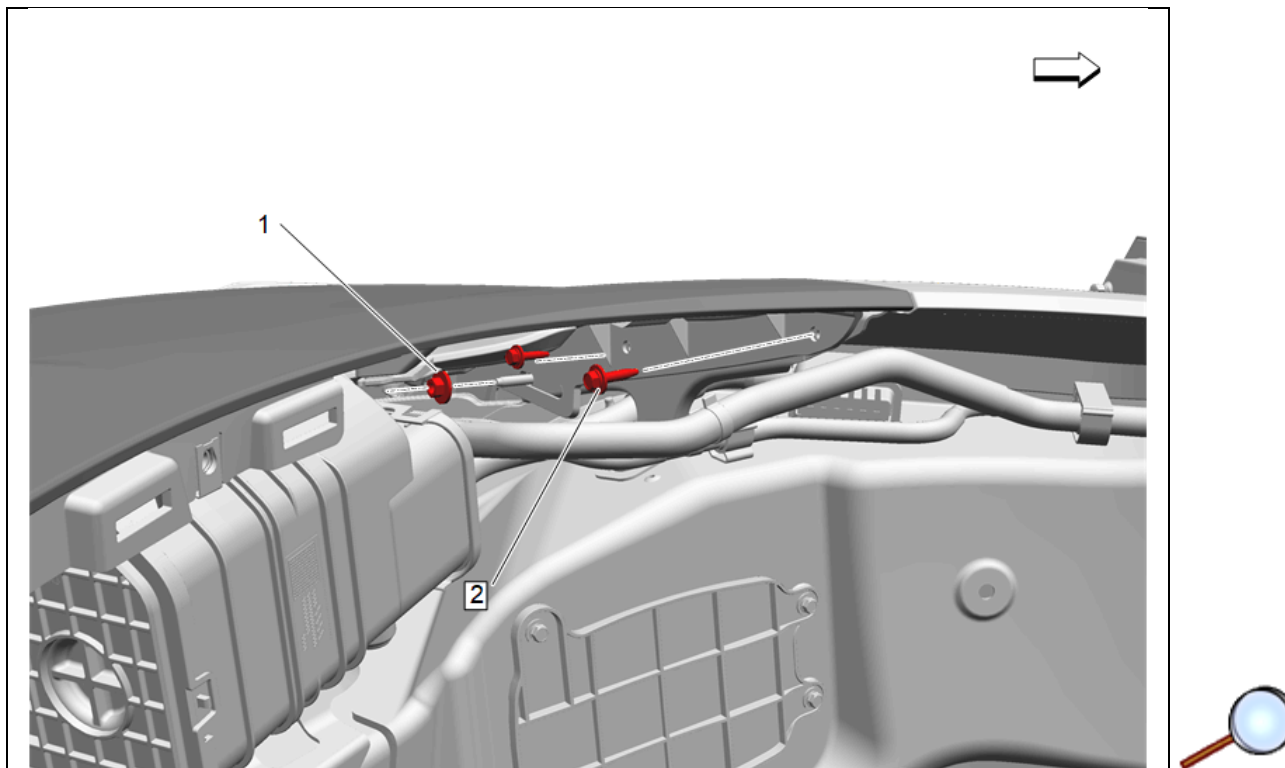

10. Install the right side rear fascia nut (1) and tighten to **2.5 N•m (22 lb in)** .
11. Install the 2 right side rear fascia bolts (2) and tighten to **2.5 N•m (22 lb in)** .

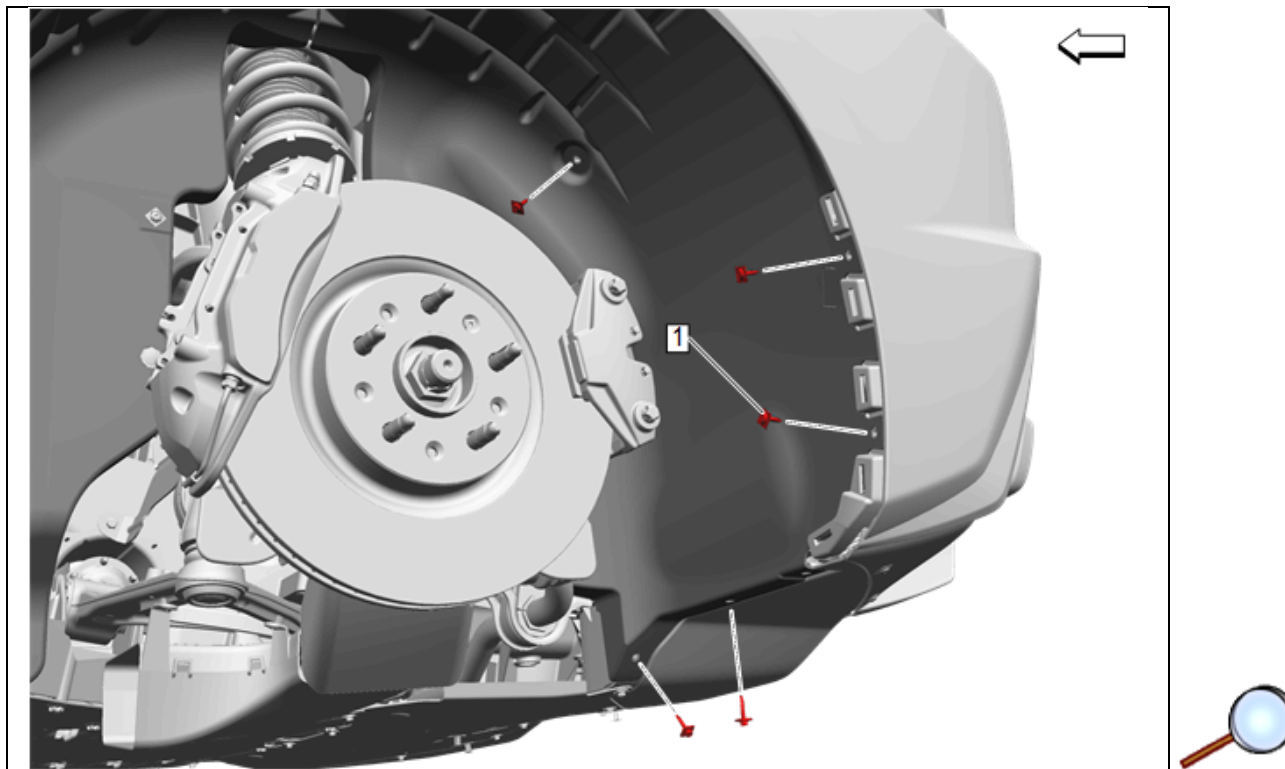

12. Install the 5 rear wheelhouse liner bolts (1) to the left side rear wheelhouse liner. [Rear Wheelhouse Liner Replacement - Right Side](#)

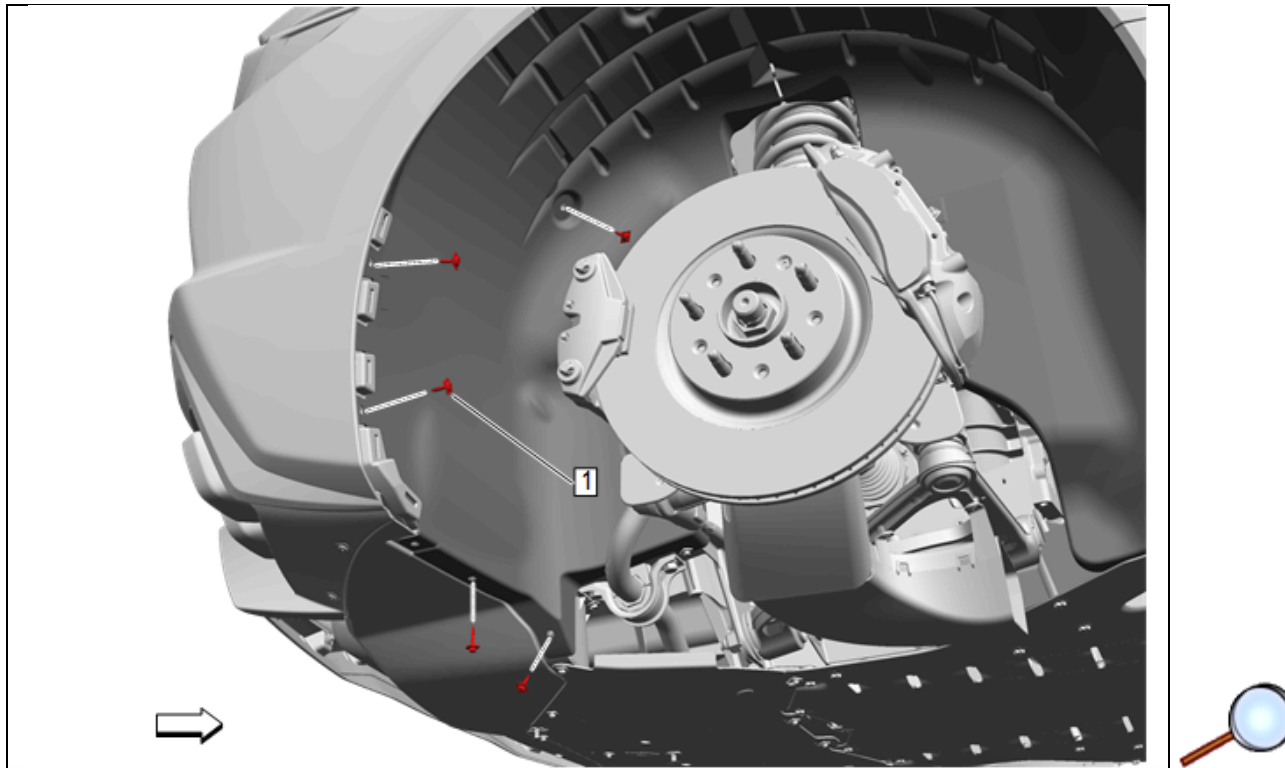

13. Install the 5 front wheelhouse liner bolts (1) to the right side rear wheelhouse liner. [Rear Wheelhouse Liner Replacement- Left Side](#)
14. Install the rear wheel opening molding to the left and right side. [Rear Wheel Opening Molding Replacement](#)
15. Underbody Rear Air Rear Deflector » Install — [Underbody Rear Air Rear Deflector Replacement](#)