

**2014 - 2019 Corvette C7
Performance H-Pipe Exhaust System**

Part No. 91S119

Exhaust Warranty Information

IMPORTANT - The warranty on this product is VOID if the product is not properly installed or has been modified or altered in any way. If you believe that modification will be required to fit an MRT Exhaust System on your vehicle, please contact MRT for assistance BEFORE making any modifications to the system.



Verify that all the following components are included in kit before beginning installation:



Parts include:

Part #1 C7 Corvette #91S119 H-Pipe

SUPPLIED HARDWARE

(2) - 2 3/4" Band Clamps
(4) 3/8 X 3" Bolt
(4) 3/8 Nut
(8) 3/8 Flat washer
(4) 3/8 Lock washer

REQUIRED TOOLS

14mm Deep Socket

Ratchet
15mm Deep Socket

Begin with removing factory exhaust system:

Step #1: Loosen clamps (fig #1) unbolt factory axle-backs

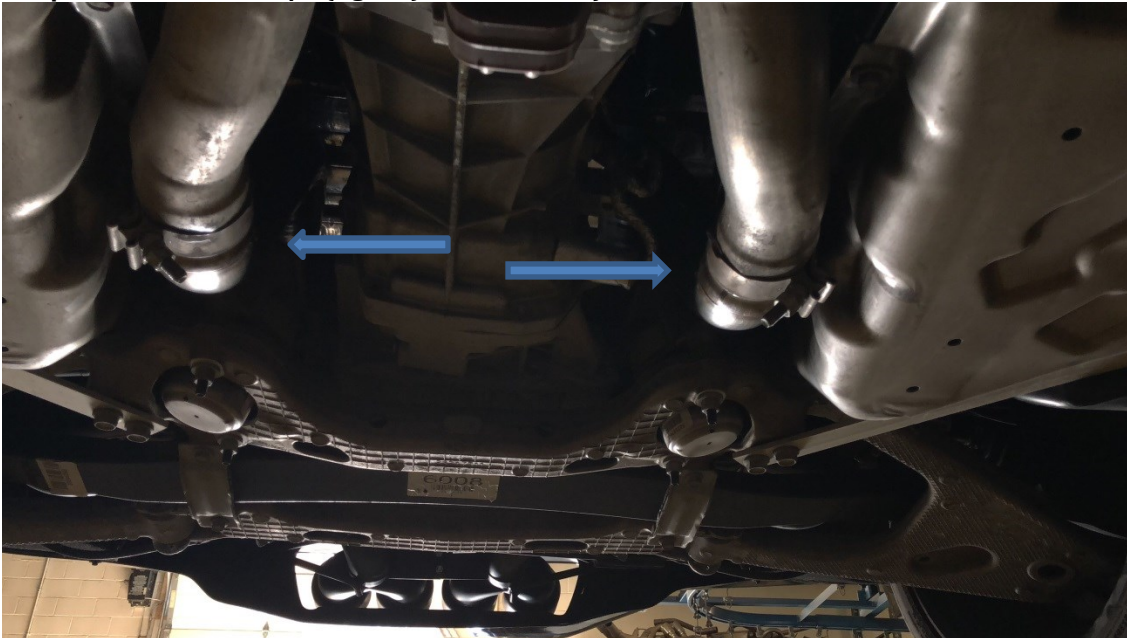


Fig. #1

Step #2: Unbolt the factory Mid pipe, remove factory Mid pipe

Installation steps for the MRT Axle-Back Exhaust System:

Step #1: Install MRT H-pipe in the opposite way the factory piece was removed, use supplied hardware for attachment.

Step #2: Slide band clamp on to tail pipe and slide the new mufflers into position over the stock exhaust pipe – keeping adjust tip alignment and tighten clamps. (fig #2)



Fig# 2

Note: Exhaust tip position can be adjusted by manipulating each assembly connection point in/out and rotating the tubing throughout the system.

MRT appreciate your business. Please feel free to contact us at any point with questions or concerns at
734-455-5807 or via email at Sales@MRT-Direct.com