

INSTALLATION INSTRUCTIONS - INS269

TUNED LENGTH HEADERS

Part # 4047 // 2014-2019 Chevy Silverado 5.3L/6.2L

Special Tools required: No special tools required.

Install Time: 4 hours.

Difficulty: Average.



NOTE! Be sure to work safe! Whenever you work under the vehicle be sure that it is located on level, solid ground and is supported by adequate safety stands! Remember: Hot asphalt will not support most jack stands safely!



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle.

BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.





STEP 1



Disconnect the negative battery terminal.

STEP 3



Loosen the clamp on the inlet hose at the air box lid, loosen the clamp at the air resonator box to the throttle body and remove it from the vehicle.

STEP 2



Disconnect the (2) vacuum lines that connect to the air resonator box and valve covers by pushing on the clips and pulling them off from there connections.

STEP 4



Remove the oil cap then remove the plastic cover from the engine replace oil cap.

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.






STEP 5



Remove the spark plug wires from the spark plugs and coil packs, remove spark plugs from the engine.

STEP 7

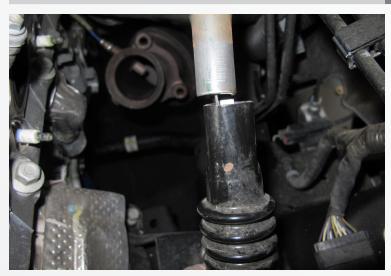

Remove the bolt that connects the steering shaft together, pull the two peaces apart, this allows the room needed to remove the exhaust manifold.

STEP 6



Remove the torx bit bolt from the oil dip stick bracket and remove the dip stick from the vehicle.

STEP 8



From underneath the vehicle remove the (3) bolts that connect the y-pipe to the exhaust manifold.

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.




STEP 9




Unbolt the exhaust manifold from the engine and remove it along with the gasket from the vehicle.


STEP 10

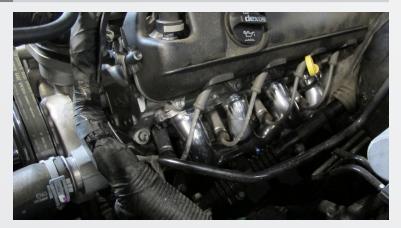

Install the BBK header with the supplied gasket and hardware. Install the spark plugs, wires, dip stick and steering shaft bolt, valve cover, oil cap, y-pipe.

STEP 11

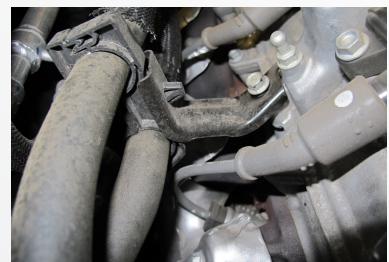

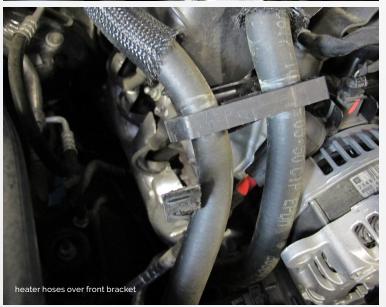

Passenger side remove valve cover, remove the bolt from the heater hose bracket lift hoses up and over the front bracket to hold them out of the way.

■MADE IN U.S.A.■


IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle.

BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.





STEP 12

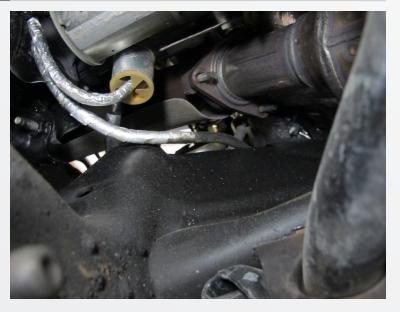

STEP 13



Install the BBK header with the supplied gasket and hardware install the spark plugs, wires, heater hose bracket, valve cover,y-pipe.

Passenger side removal follow steps 5-8-9 from driver side.

STEP 14



Reinstall the air resonator box and inlet tube and tighten down the clamps reconnect the vacuum tubes and the negative battery terminal.

■MADE IN U.S.A.■

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle.

BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.