

## 2014+ Silverado and Sierra Cat-Back Exhaust

Part No. 92T105, 92T110

### Materials Included

- Qty (1) – Lead pipe
- Qty (1) – Front over axle tube
- Qty (1) – Rear over axle tube
- Qty (1) – Muffler for 92T110,  
or delete tube for 92T105
- Qty (1) – Tip
- Qty (2) – 3 inch clamps
- Qty (1) – 2 ¾ inch swivel clamp

### Required Tools

- 15mm Socket



Part No.  
92T110



Part No.  
92T105


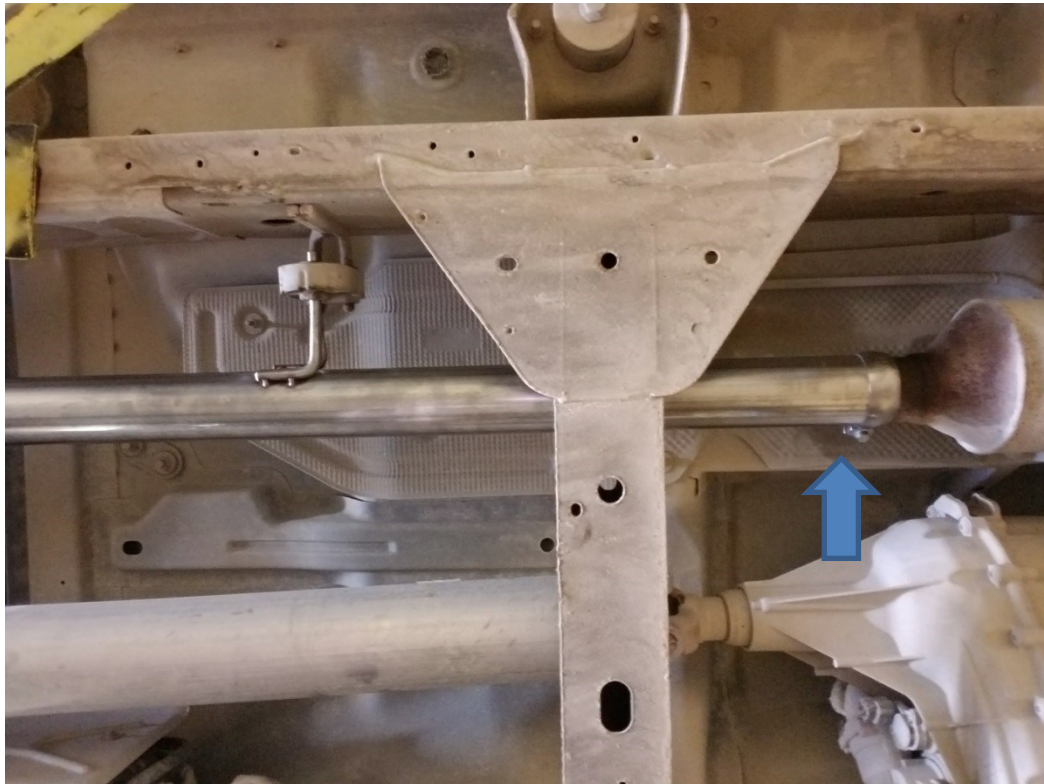


Figure 1.

Step 1 – Unclamp factory exhaust at (figure 1). Locate MRT flared tube and swivel clamp to install at factory joint (do not fully tighten clamp yet).

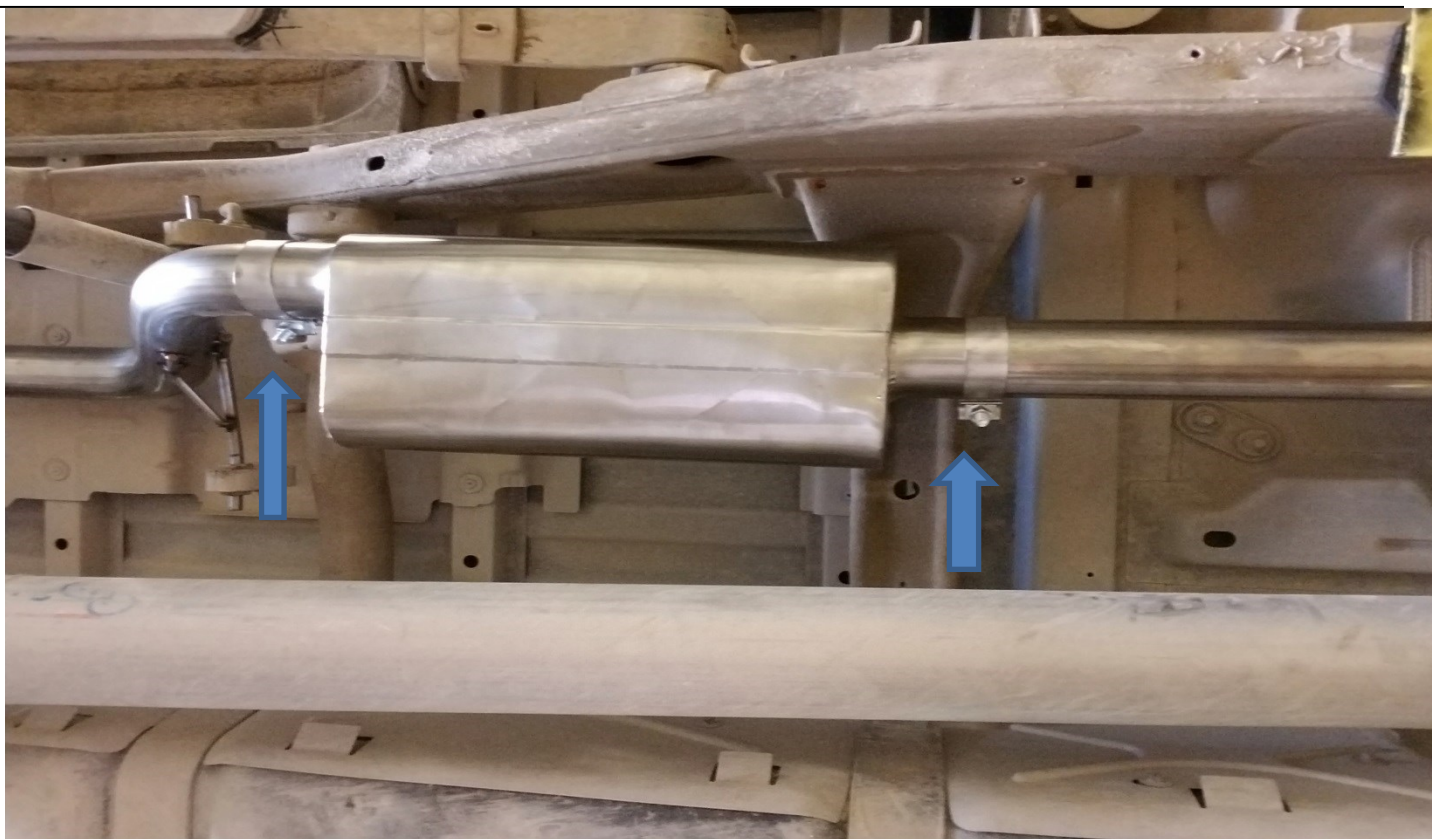

(Figure 2)

Step 2 – With supplied 3 inch band clamps, Attach MRT muffler OR muffler delete tube depending on the system that you ordered (do not fully tighten clamps yet).



Figure 3

Step 3– Slide hangers on to factory exhaust isolators as shown in figure 3





**Figure 4**

**Step 4 – Align tip, now tighten all band clamps from front to rear, starting with the swivel clamp to factory tube.**

**Torque Specifications for the band clamp is 30 to 35 foot pounds.**

## Warranty Information

*IMPORTANT* – The warranty on this product is VOID if the product is not properly installed, or has been modified or altered in any way. If you believe that modification will be required to fit an MRT Exhaust System on your vehicle, **please contact** MRT for assistance **BEFORE** making any modifications to the system.

MRT appreciates your business; please feel free to contact us at any point with questions or concerns at 734-455-5807 or via email at Sales@MRT-Direct.com