




CORVETTE C7 UNDER HOOD KIT INSTRUCTIONS

Part # ABD-1517XXX

INSTALLATION INSTRUCTIONS

Tools Needed:

- 3/32 Allen Wrench
- Cleaner (Isopropyl Alcohol)
- Rag

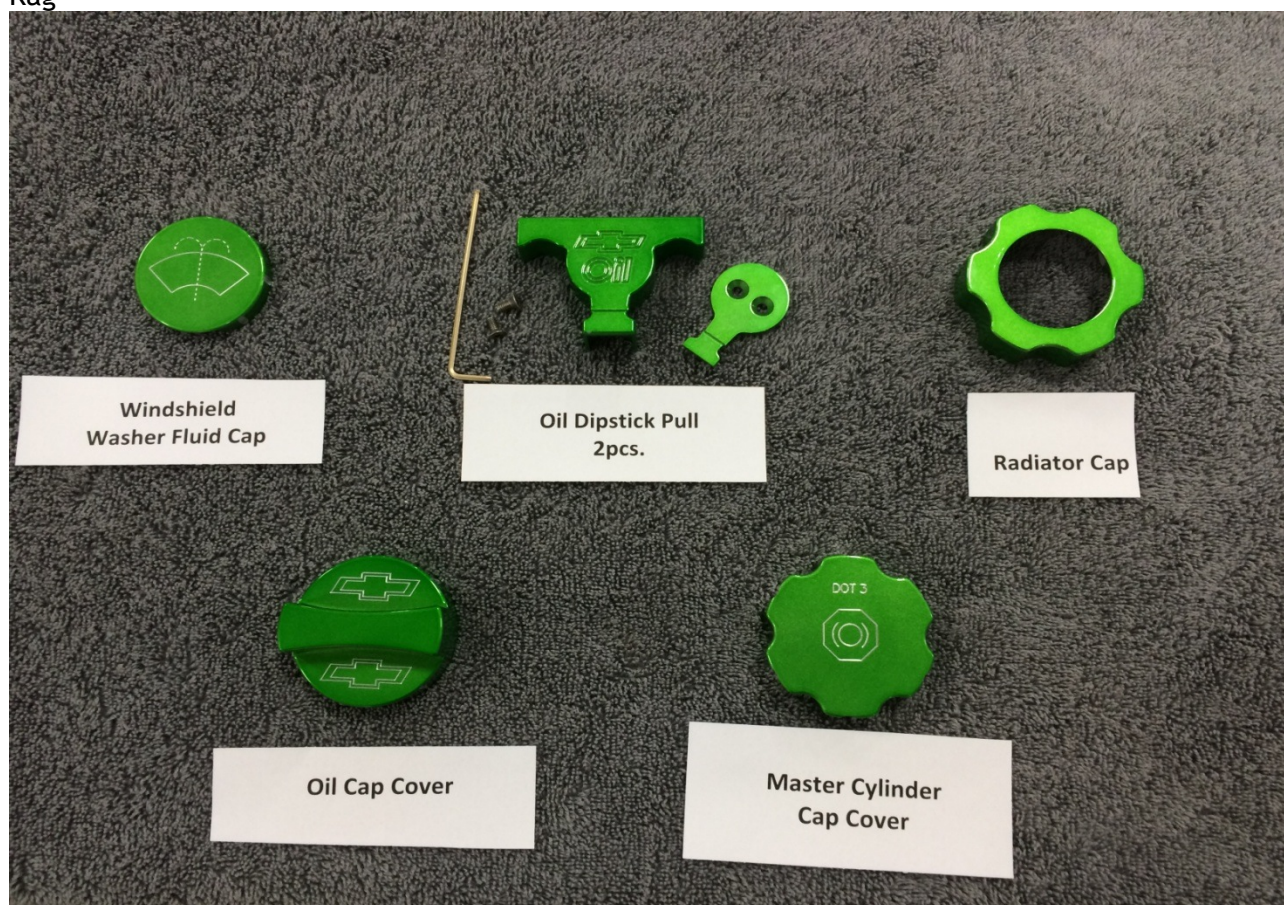

1. Open the hood.


2. Apply both halves of the dipstick handle to the yellow dipstick handle. Using the screws provided and your Allen wrench, tighten securely.



3. Orient the windshield washer cap over the existing cap and press down to snap into place.




4. Using a rag and isopropyl alcohol or other appropriate cleaner, clean the stock master cylinder, oil fill and radiator cap. These surfaces must be clean in order for the new cap to adhere.

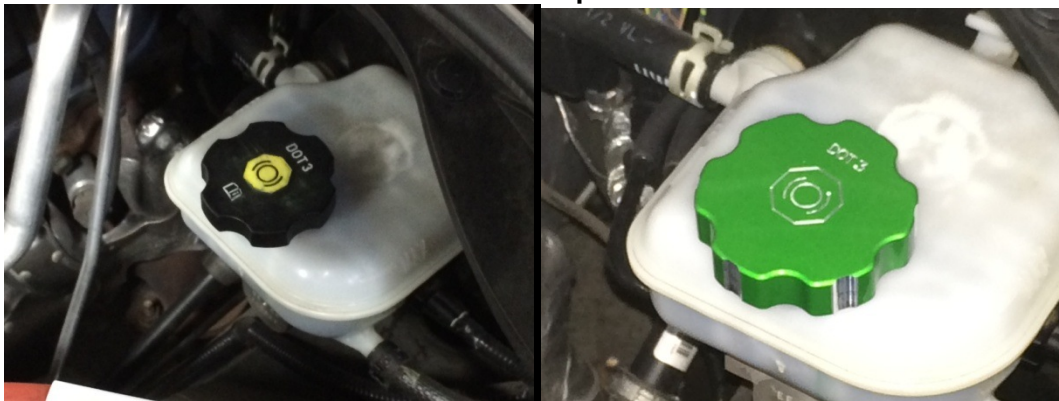

5. Remove the tape backing on the inside of the master cylinder cap. Press the cap over the existing cap and hold down for 2-3 minutes to ensure adhesion.

6. Repeat step 6 for the oil fill and radiator caps.

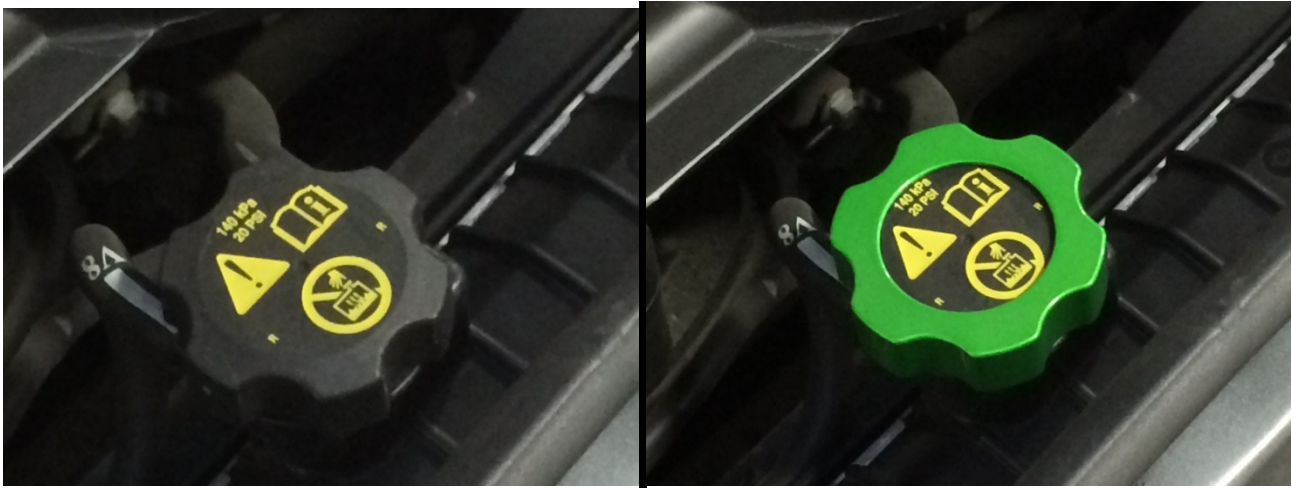

7. Wipe down any smudges and enjoy your color matched under hood kit!

AMERICAN BROTHER DESIGNS

Visit our website or youtube page for install videos

www.americanbrotherdesigns.com