

NoviStretch™ Front Bumper Mask

Step #1


Clean the bumper and surfaces under the car and the fender wells thoroughly (tar and grease remover is recommended).

Step #2



Turn the front wheels to gain easier access to the fender liner mounting screws that you will be replacing.

Step #3

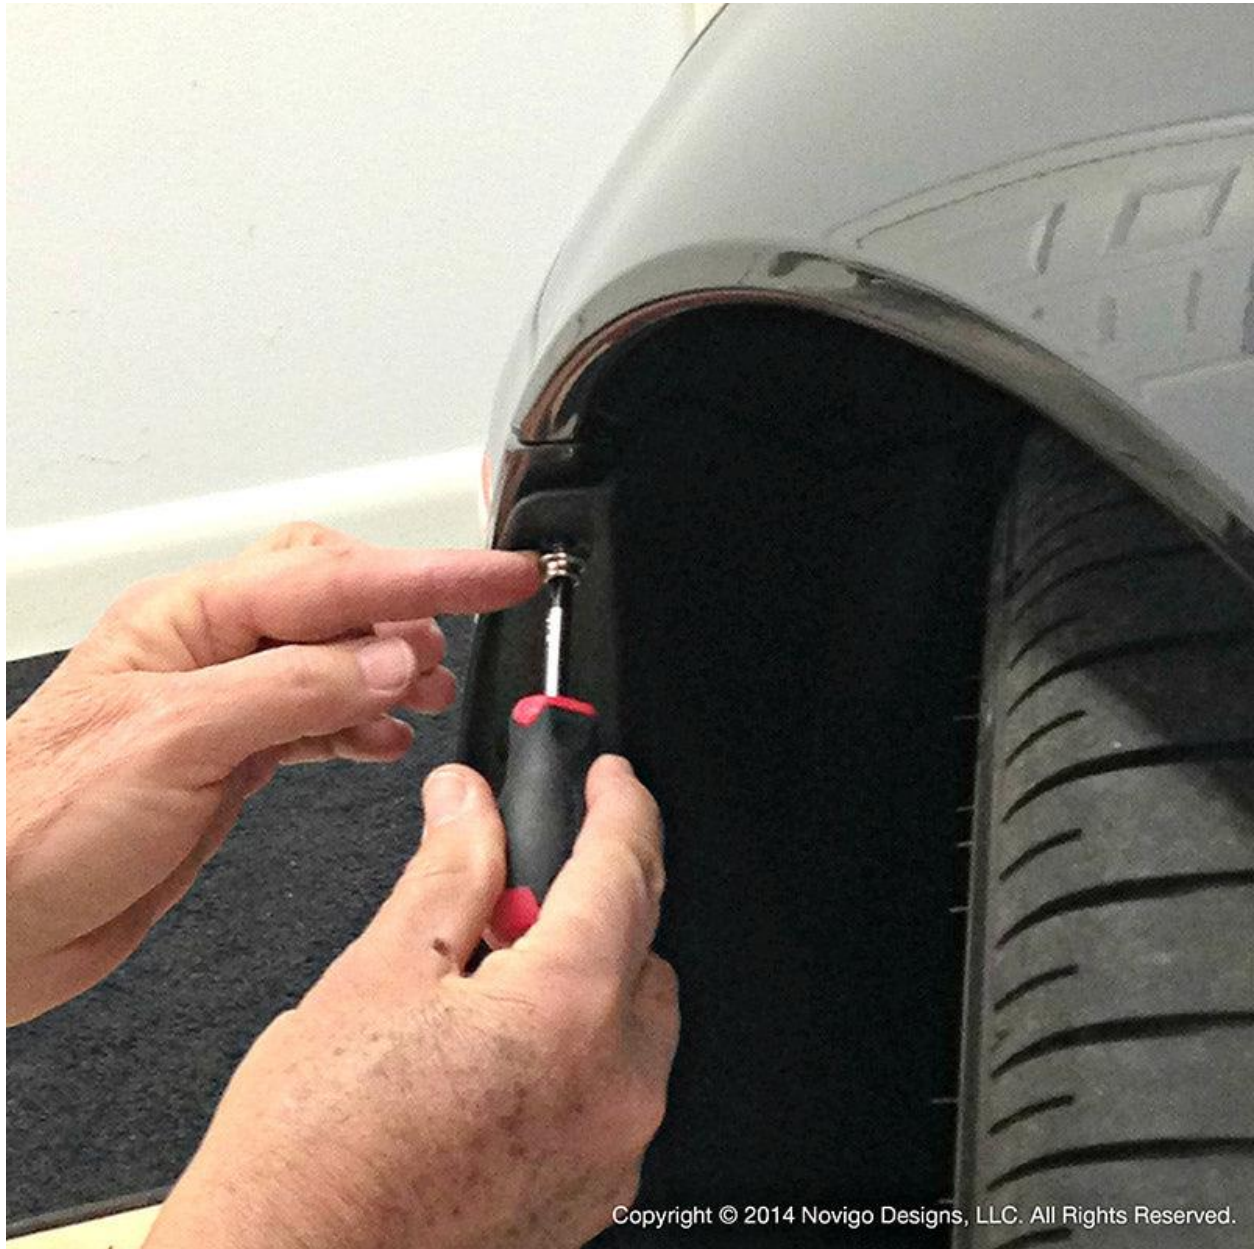

Locate the mounting screws at the edge of the bumper inside the fender liner and remove them. Replace each one as you go with the supplied snap-head screw studs. Repeat this step on the other side of the car.

Step #4



Copyright © 2014 Novigo Designs, LLC. All Rights Reserved

Begin the installation by fastening the snaps on one end of the mask to the screws just installed on the edge of the bumper.

Step #5




Stretch the mask across the front of the bumper and attach to the other side of the car. **Note:** Take extra-care when stretching the mask over and around the Splitter or Spoiler, rough edges and corners on ground fx can damage the mask over repeated installations.


Step #6



Pull the bottom edge of the mask down under the bumper, noting the position of the snaps on the bottom edge of the mask. Replace the screws on the bottom of the bumper that best align with the snaps on the mask with a snap head screw stud. Fasten the snaps on bottom of the mask to the screws just installed on the bottom of the bumper.


Step #7

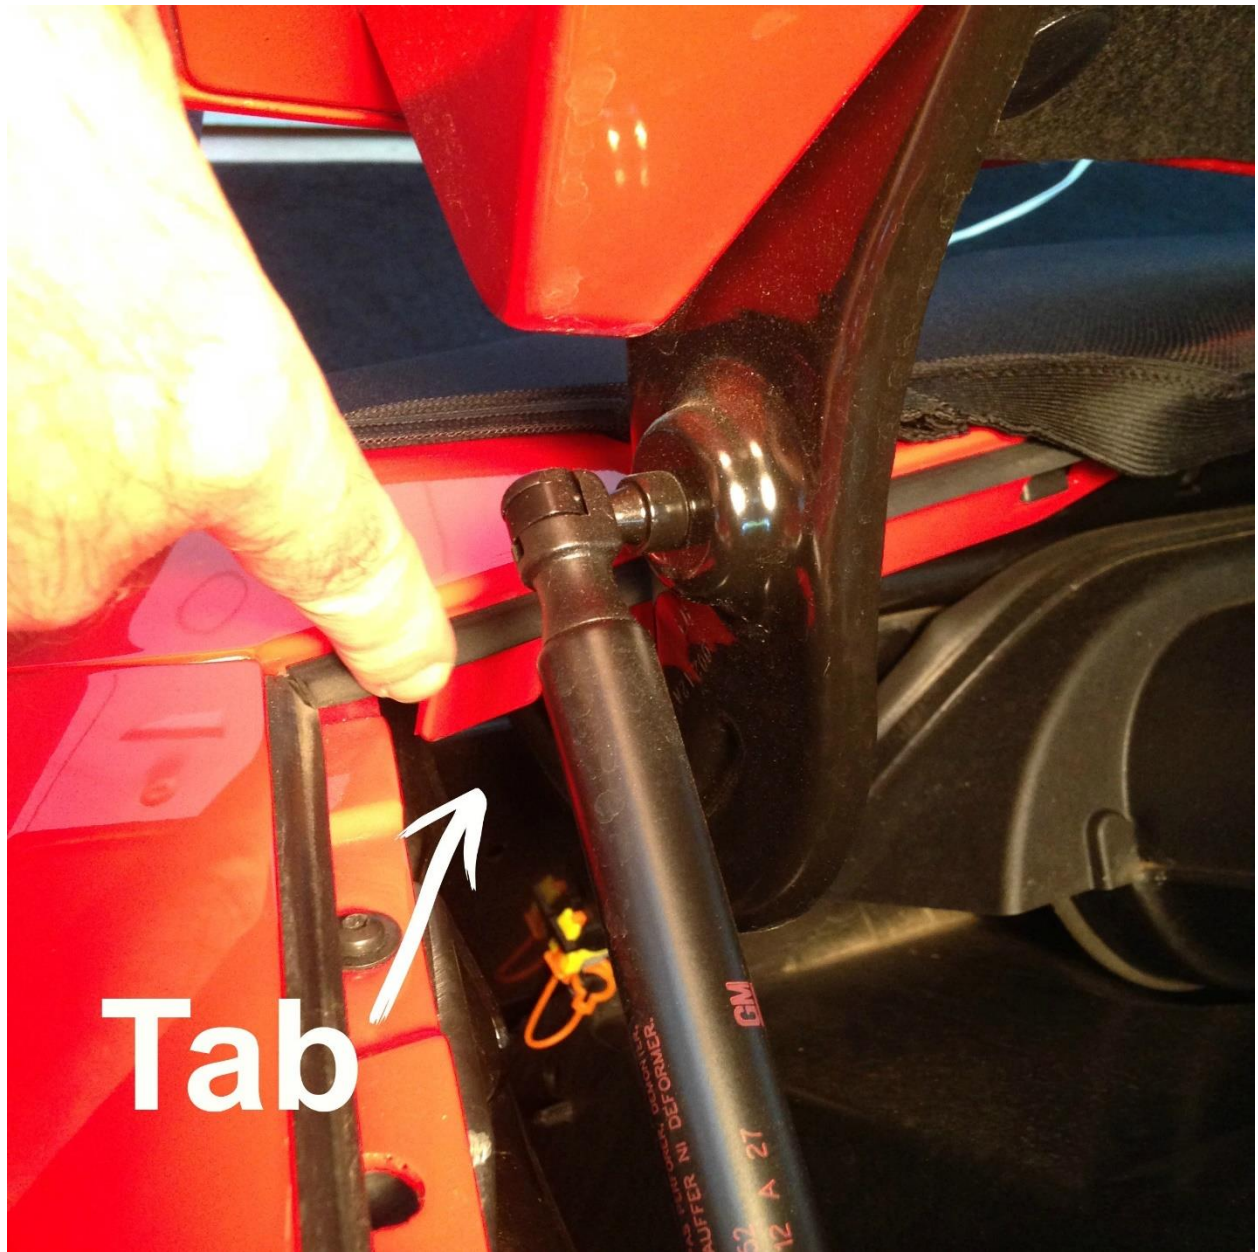

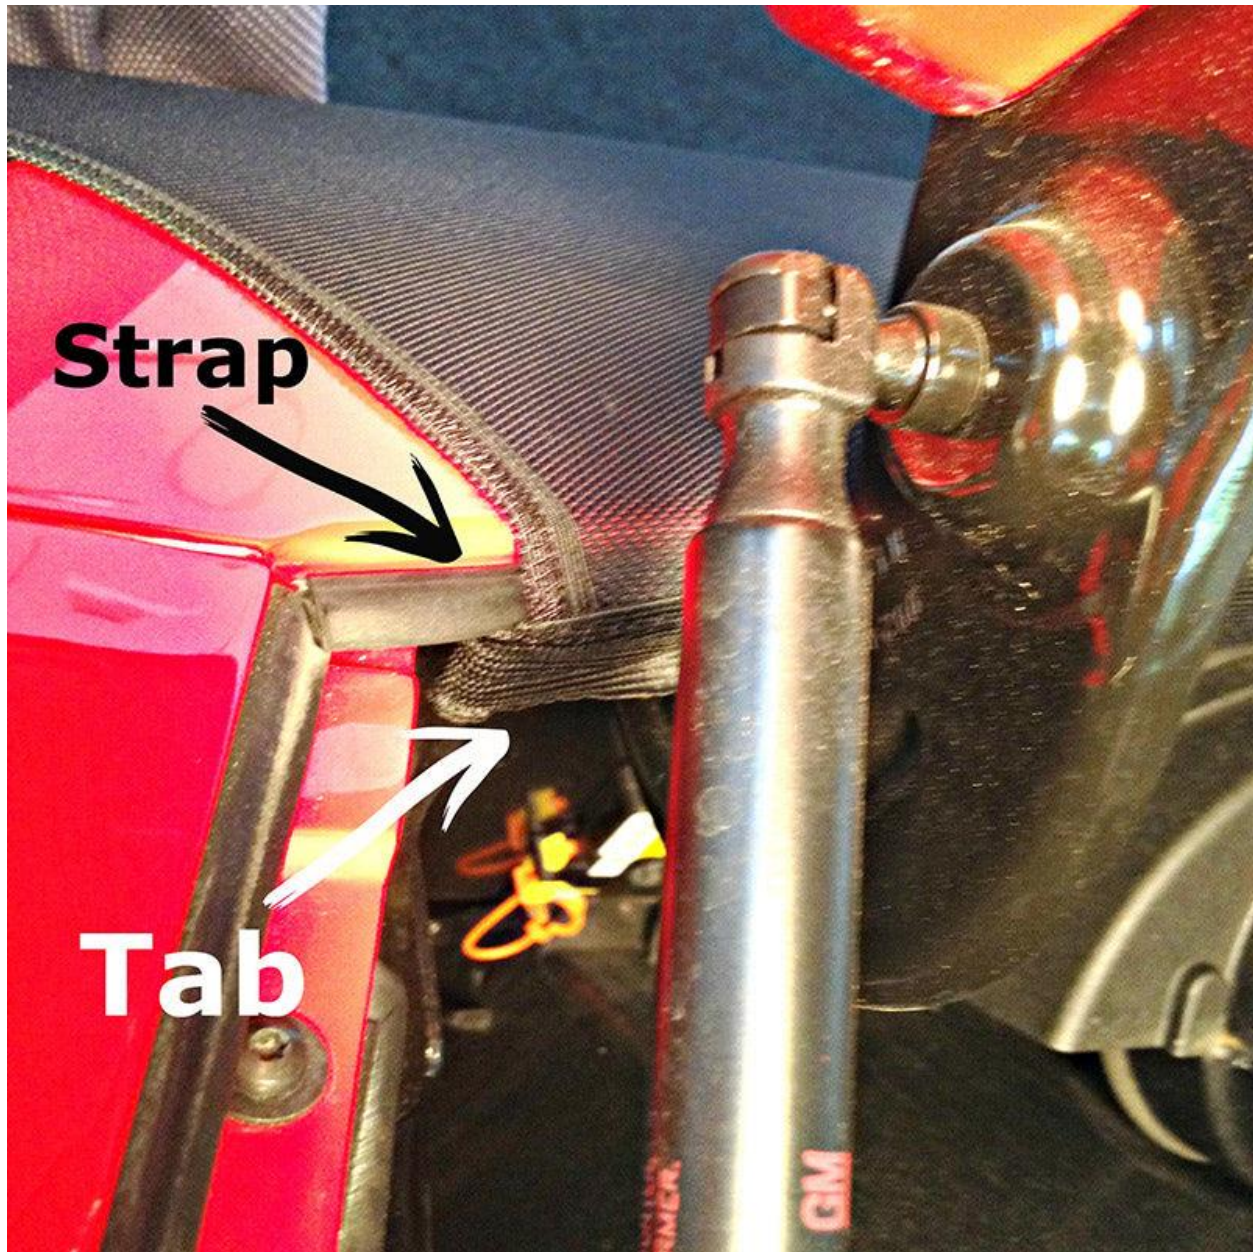

Open the hood. Hold the top of the mask and pull it up to the hood opening. Secure the top corners of the mask to the body frame by looping the open straps on the mask over the tab alongside the hood-hinge.

Step #8

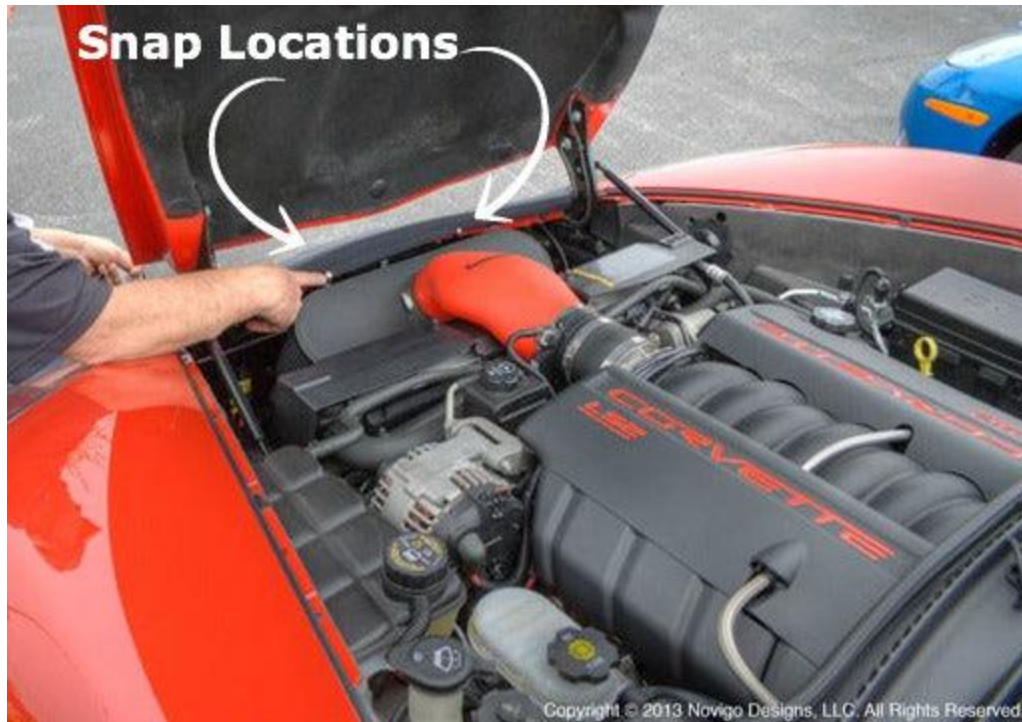

Remove the screws on the frame that best align with the snaps on the mask and replace with a snap head screw stud. Secure the mask by fastening the snaps on the mask to the snaps just installed.