



2019-2022 Chevy Silverado & GMC Sierra w/MultitPro Tailgate MultiPro Tailgate Step LED Lighting Installation

Recommended Tools:

- Plastic Trim Removal Tool
- Small Flat Blade Screwdriver

Installation:

1. Completely OPEN the factory tailgate to access the factory panels (Figure 1)
2. Using a plastic trim removal tool, carefully remove the factory panels from the tailgate (Figure 2)
 - a. **Note:** You can choose to mount the pods on the outer or inner panel location.
 - b. Remove both panels that you choose to install the pods to (Figure 3)
3. Locate the factory harness and remove the connector (Figure 4)
4. Install the provided harness between of the factory harness and reconnect it to the factory location (Figure 5 & Figure 6)
5. Feed remaining harness through the tailgate (Figure 7)
6. Connect the harness to the light pods (Figure 8)
7. Install pod to the tailgate (Figure 9)
 - a. **Note:** Install the pods towards the top of the light and snap the bottom half in place. There are tabs on the top of the light pod that are directional
 - b. Final installation should have lights pointed down
8. Test light function by depressing cargo button on the headlight switch

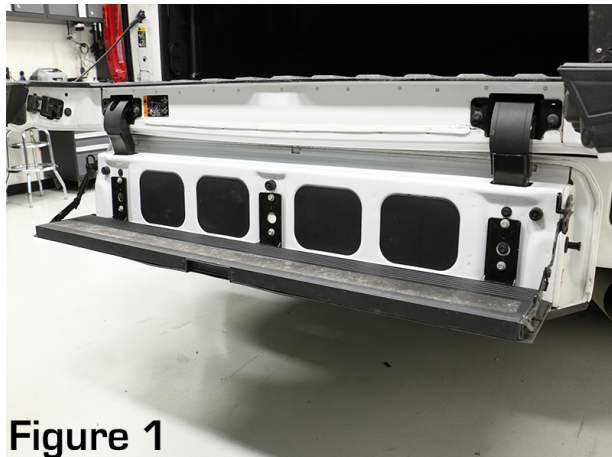


Figure 1



Figure 2

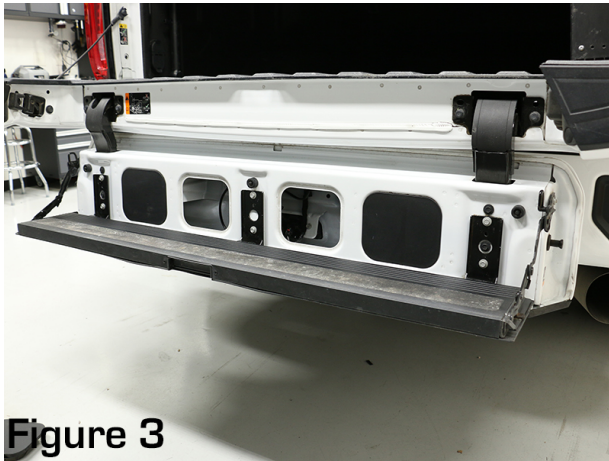


Figure 3

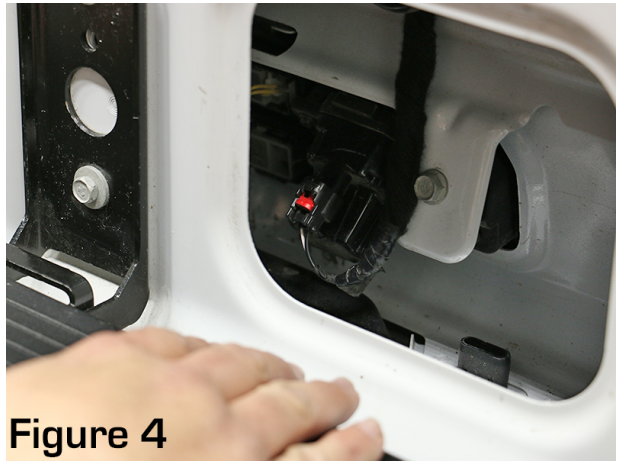


Figure 4

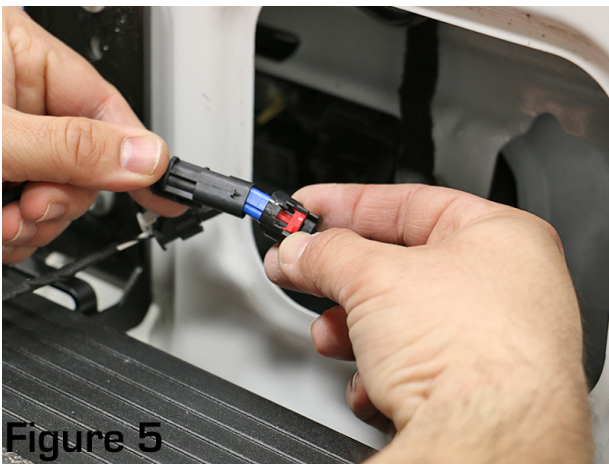


Figure 5

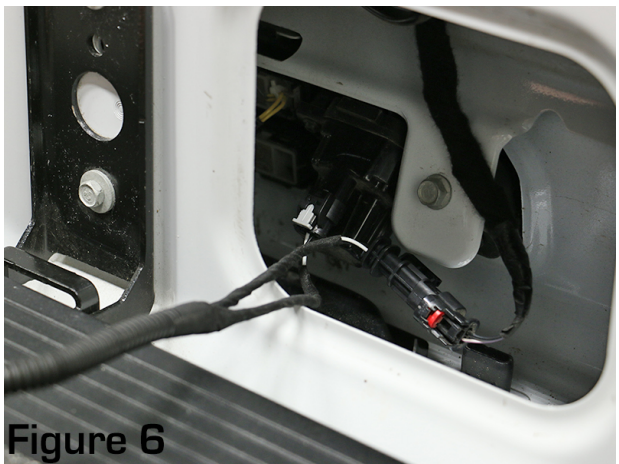


Figure 6



Figure 7



Figure 8



Figure 9