



2016-2023 Camaro Smoked Rear Reflector Installation

Recommended Tools:

- Thin Phillips Screwdriver

Installation:

1. Locate the factory screw on the diffuser (Figure 1)
 - **Note:** View will be tight due to the factory support brace
2. Once the screw is located, using a thin Phillips screwdriver, you can remove the screw holding the factory reflector (Figures 2 & 3)
3. Install the provided screw and washer to the factory diffuser
 - **Tech Tip:** Install the screw to the new reflector prior to installing it to the diffuser, this will create the thread that will create an easy installation process.
4. Place new reflector in the factory diffuser and tightend down with provided screw

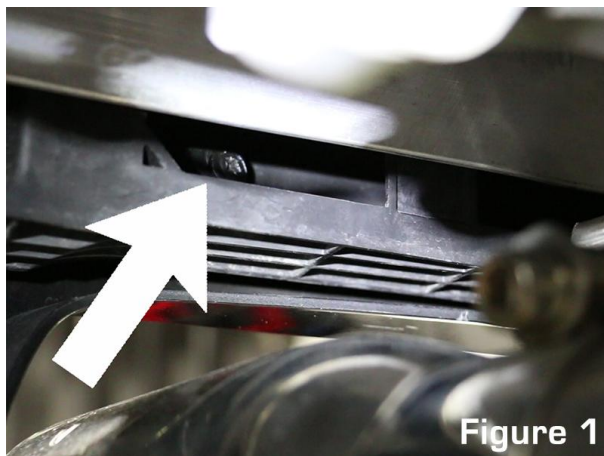


Figure 1

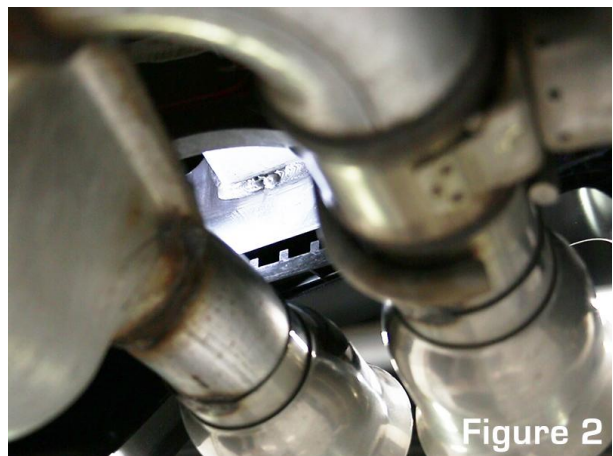


Figure 2

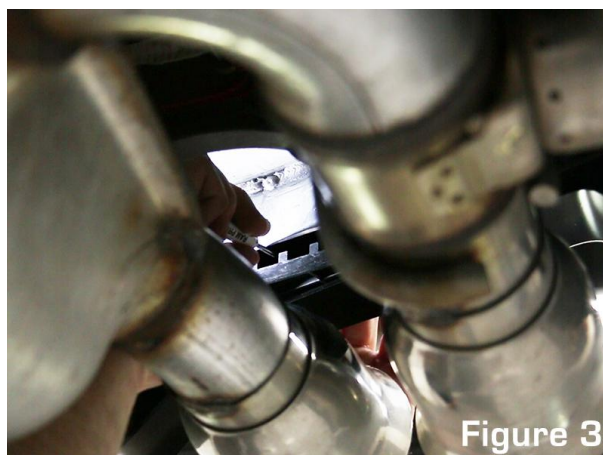


Figure 3