

PART NUMBER 00-11043

INSTALLATION INSTRUCTIONS

This Nitrous Outlet vehicle specific switch panel is designed specifically for the 2016-2021 6th Gen Chevrolet Camaro. If you need any assistance during installation or if you have questions about this switch panel, call our Tech Help Line at (254) 848-4300.

Tools Needed for Installation*:

- 10mm Deep Socket
- Body Tool
- T25 Torx bit
- Drill
- Ratchet
- 1" Hole Saw

^{*}These are the tools required for installation of this kit on a stock vehicle. If your vehicle has aftermarket parts, other tools may be required.



Step 1:

Using the body tool, pry the shifter boot away from the console and pull the boot up toward the shift knob.



Step 2:

Manual Transmission — Using a T25 Torx bit, remove the set screw holding the shift knob. Pull the shift knob and shifter boot straight up and off the shift lever.



Step 2a:

Automatic Transmission - Using the body tool, release the clip holding the shift knob. Pull the shift knob and shifter boot straight up and off the shift lever.



PART NUMBER 00-11043

INSTALLATION INSTRUCTIONS



Step 3:

Using the body tool, remove the circular tab covering the rear mounting bolts on each side of the console.



Step 4:

Using a 10mm socket, remove the mounting bolt on each side.



Step 5:

Remove the side bolsters on each side of the console by lifting straight up.



Step 6:

Using a 10mm socket, remove the two mounting bolts on each side.



PART NUMBER 00-11043

INSTALLATION INSTRUCTIONS



Step 7:

Slide the console back, lift, and rotate to disconnect the three electrical connections underneath.



Step 8:

Remove the console from the vehicle. Place the console, top down, on a level surface.



Step 9:

Disconnect the two plugs on the back side of the USB port.





PART NUMBER 00-11043


INSTALLATION INSTRUCTIONS



Step 10: Unclip the USB port and remove it from the console.



Step 11:

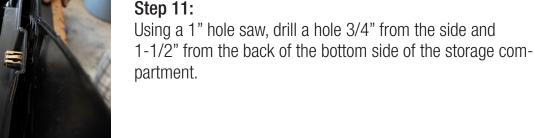



Step 12:

Reinstall the USB port in the console and reconnect the two plugs on the back side of the port.



PART NUMBER 00-11043

INSTALLATION INSTRUCTIONS



Step 13:

Place the console back in the vehicle and reconnect the three stock electrical connections from Step 7.



Step 14:

Pull your wires through the hole in the center console and wire the switch panel using the diagram provided.



Step 15:


The provided 90° flag terminals are to be used on the "Arm" and "Heater" activation switches for console clearance. The provided straight terminals can be used on the remaining activation switches.





PART NUMBER 00-11043

INSTALLATION INSTRUCTIONS

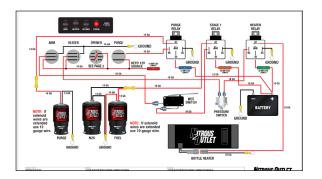

Step 16: Wiring

• This step will cross over into the installation of other components you are installing in conjunction with the switch panel, such as nitrous controller, bottle heater, purge etc. Using the diagrams that came with those components route the wiring.

**Note: The diagram to the left is a basic system diagram with a WOT Switch. To view a larger diagram, turn to the last page of these instructions, however you should be using a nitrous controller that incorporates a window safety switch with TPS activation



Step 17:

Wipe the areas where the double-sided tape will attach with alcohol wipes. Peel the red backing off the double-sided tape and place it on the flange of the switch panel. Place the panel in position and firmly press the edges down.



Step 18:

Using a 10mm socket, reinstall the four bolts at the front of the console.





PART NUMBER 00-11043

INSTALLATION INSTRUCTIONS



Step 19:

Reinstall the side bolsters by sliding them down in to place.



Step 20:

Using a 10mm socket, reinstall the two bolts at the rear of the console.



Step 21:

Reinstall the circular tabs covering the rear mounting bolts.




Conclusion

• You have finished your installation.



PART NUMBER 00-11043

INSTALLATION INSTRUCTIONS

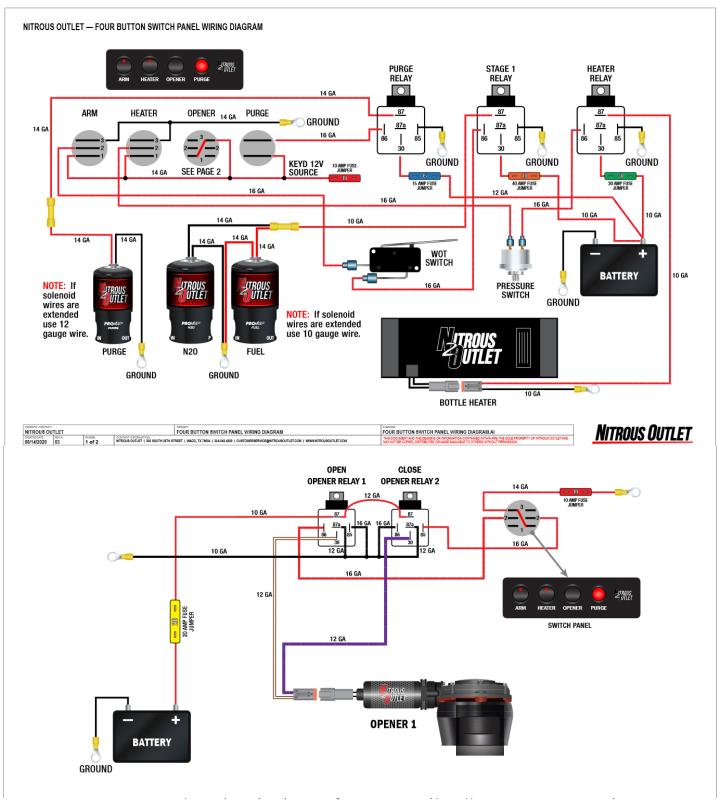

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES