



FBM750V - Installation Instructions

The NoviStretch™ FBM750v mask is easily secured using snap fasteners integrated into the design. This requires snap-head screws, supplied in the hardware kit, be installed on the car as described below. The initial installation should require approximately 15 minutes to complete. After setup the mask can be easily installed and removed in just under one minute.

The **FBM750v** is designed for installation on all **2014 and later 7th Generation base coupe and convertible model Corvettes**

Enclosed you will find:

- FBM750v Mask
- Hardware Kit containing eight (8) snap-head screw studs
- Installation Instructions & Warranty Information

Tools Required:

- Short handle Philips screwdriver
- #15 Torx head screwdriver
- Socket wrench
- 7mm socket



NOTE: Installation Video available to view at www.NoviStretch.com

Step 1

Clean the bumper and surfaces under the car and the fender wells thoroughly (*tar and grease remover is recommended*).

Step 2 (Fig. 2)

Turn the front wheels to gain easier access to the fender liner mounting screws that you will be replacing.



Step 3 (Fig. 3)

Locate the mounting screws at the edge of the bumper inside the fender liner and remove them. Replace each one as you go with the supplied snap-head screw studs. Repeat this step on the other side of the car.



Step 4 (Fig. 4)

Begin the installation by fastening the snaps on one end of the mask to the screws just installed on the edge of the bumper.



Step 5 (Fig. 5)

Stretch the mask across the front of the bumper and attach to the other side of the car




Note: the tension in the mask is normal and important to the overall performance of the product.

(Instructions continue on other side)

Step 6 (Fig. 6)

Pull the bottom edge of the mask down under the bumper, noting the position of the snaps on the bottom edge of the mask. Replace the screws on the bottom of the bumper that best align with the snaps on the mask with a snap head screw stud. Fasten the snaps on bottom of the mask to the screws just installed on the bottom of the bumper.

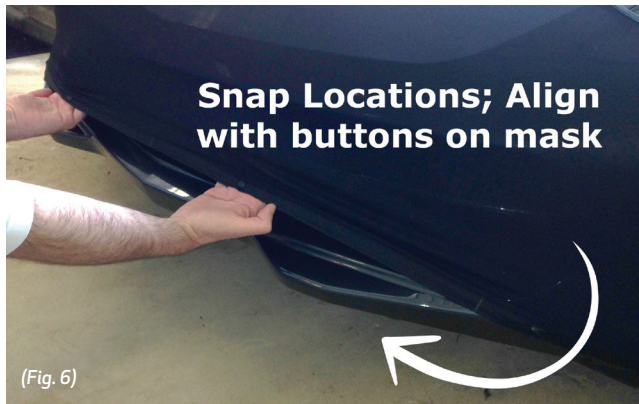

Step 7 (Fig. 7)

Locate and slightly loosen the screw holding the corner of the air dam on each side of the car allowing the bottom edge of the mask to go between the bumper and the air dam.



Note: Do not install mask over the air-dam.

Step 8 (Fig. 8.1 and 8.2)

Open the hood and remove the plastic covering at each corner to expose the corner edge of the body frame just inside the hood opening. *[This piece is held in place with friction clips and is easily removed by prying it loose with your hand]*. Repeat this step for the other corner of the mask. Holding the top of the mask pull it up to the hood opening and secure each corner of the mask to the body frame. The plastic cover may then be replaced if desired but is not necessary.



Special Installation Instructions

A front license plate may be installed over the mask without causing harm to the mask. The small holes made by the mounting screws will not cause the fabric to "run". Thumbscrews may be used to make the removal of the license plate more convenient.

Cleaning and Care Instructions

- The mask can be cleaned by rinsing in water to remove any dirt or debris then squeezing the water out and let air-dry. Wash (by hand) only as necessary.
- Use a concentrated soap solution on areas of the mask that may be particularly dirty.
- Always ensure areas covered by the mask are clean and free of sand and grit before installing the mask.
- For the best life do not leave the mask on the car while parked in the sun for extended periods.
- Avoid obstacles and low clearance areas in the roadway that may come in contact with the bottom of the car causing the mask to snag and the material to tear.

Notice: Patent Pending; NoviStretch™ Copyright © 2015 Novigo Designs, LLC. All Rights Reserved.

NOVIGO DESIGNS™ TWELVE (12) MONTH LIMITED WARRANTY Novigo Designs, LLC warrants this product against "defects in material and workmanship" for a period of twelve (12) months from the original date of purchase by the original consumer purchaser. For full details and explanation of warranty coverage, requirements and policy – please go to the "Support" section of www.NoviStretch.com. Novigo Designs (and its authorized distributors) liability is limited to the materials and workmanship of the product. Novigo Designs is not responsible for damage caused by the product to the paint or finish of the vehicle. To avoid any possible damage and to get the maximum benefit from your Novigo Designs product, carefully follow the installation and care instructions provided. Novigo Designs, LLC.