

IMPORTANT: PRO CUSTOM PRODUCTS, INC. IS NOT RESPONSIBLE FOR IMPROPER INSTALLATION. IF YOU DO NOT FEEL 100% CONFIDENT INSTALLING THIS PRODUCT, SEEK PROFESSIONAL ASSISTANCE.


**PRODUCT INSTALLATION GUIDE
2010+ CAMARO HIDEAWAY HEADLIGHT COVERS
CAM10-HHC1-A**




1) FIT BOTTOM TABS BETWEEN THE HEADLIGHT LENS, AND THE FACIA.



2) TIP THE TOP OF THE HEADLIGHT COVER BACK.

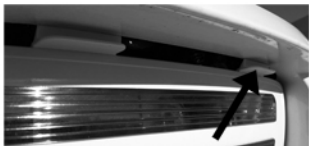

3a) FIT THE TOP TABS BEHIND THE FACIA. SHOWN HERE: IMPROPERLY FIT

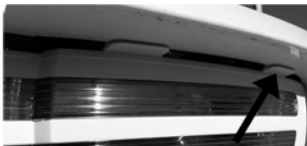

3b) BE SURE YOUR TOP TABS FIT INTO PLACE AS SHOWN HERE. SHOWN HERE: PROPERLY FIT



4) PROPERLY FIT BOTTOM TABS.



5) PROPERLY INSTALLED HIDEAWAY HEADLIGHT COVER. ENJOY!