



2010-2015 Camaro (Non-ZL1) Intake Scoop and Washer Tank Combo Installation







Installation:





Note: Installation pictures below show the front bumper removed, this is not necessary for installation.

1. Remove 3 - T15 Torx screws to pull back the fender liner
 - This will allow access to the factory washer tank
2. Disconnect the electrical connector on the washer pump (Figure 1)
3. Disconnect the washer hose on the washer pump (Figure 1)
 - **Tech Tip:** Plug hose end if there is any fluid in the reservoir, fluid will come out if it is not plugged
4. Remove the 3 - 13mm bolts holding the washer tank to the frame (Figure 2)
 - Doing this will loosen the entire reservoir and it is able to be removed
5. Before the scoop can be installed, you will have to trim the factory plastic deflector (Figure 3 and Figure 4)
 - **Tech Tip:** Check progress as the cut is made to ensure there is enough room
6. Remove the factory 10mm bolt holding the horn bracket to the frame and replace with the supplied M6 bolt (Figure 5 and Figure 6)
7. Install the scoop reusing one of the factory 13mm bolts to hold the scoop to the frame rail and position the mounting tab of the scoop to the backside of the M6 bolt used to hold the horn bracket in place (Figure 7)
8. Use the supplied washer and M6 locking nut to hold the scoop on the backside of the horn bracket (Figure 8)
9. Using the supplied 1/4-20 bolts and locknuts, mount the washer tank to the side of the scoop (Figure 9)
10. Reinstall the factory washer pump and electrical connector to the side of the washer tank
11. Install the provided clear tubing to the top of the washer tank and tighten down with the provided clamp (Figure 10)
12. Mount the fill neck to your intakes heat shield (Figure 11)
 - Verify the location that you will be mounting the neck to will have enough clearance for the hood to close properly
13. Once neck is mounted and heat shield is reinstalled, install the clear tubing to the neck and tighten with the provided clamp
14. Fill system and check for any leaks

Scan for our installation video!



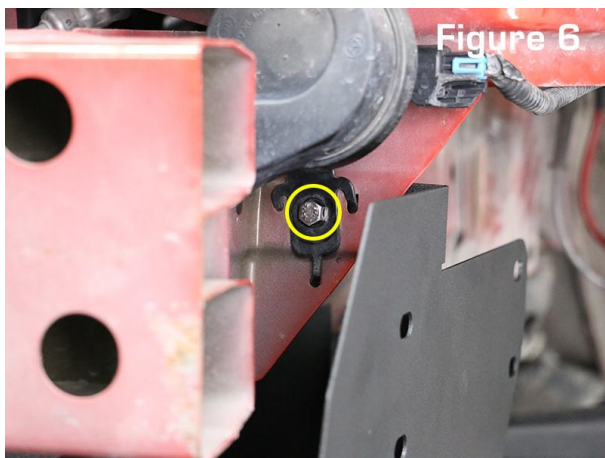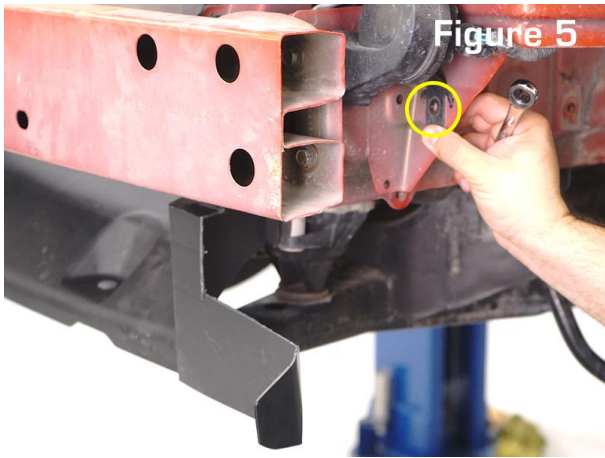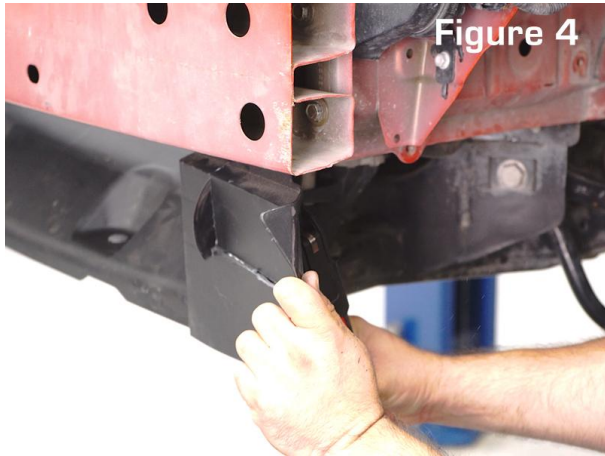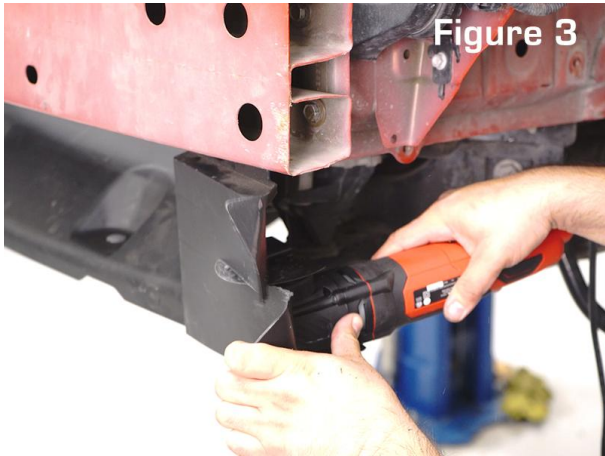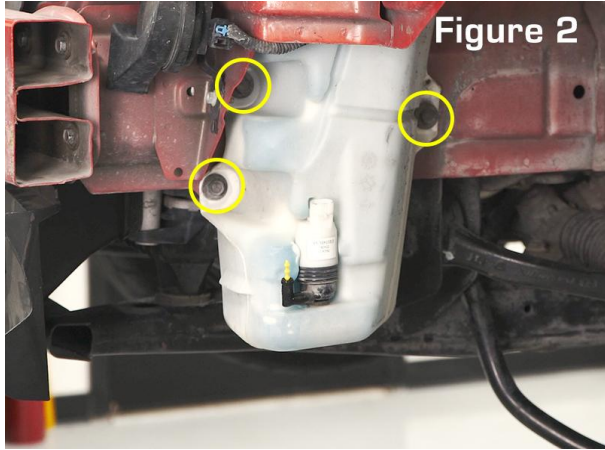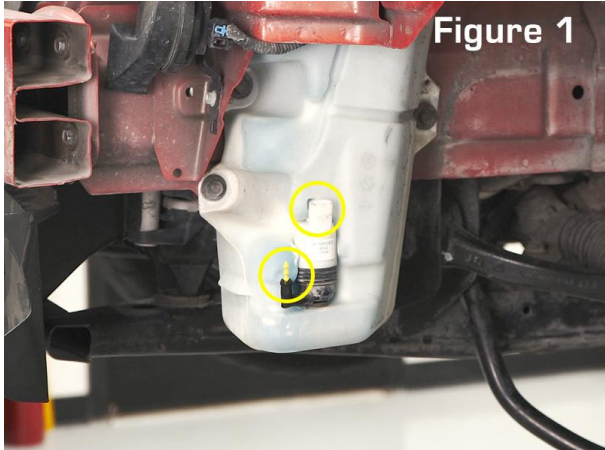

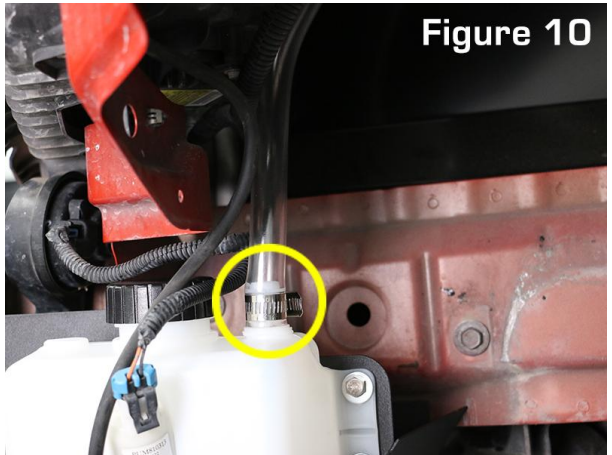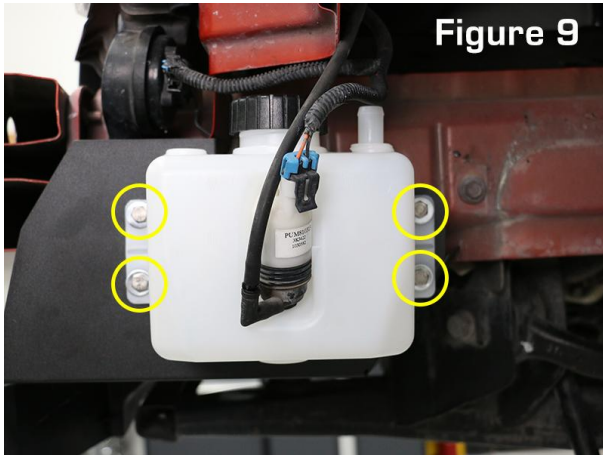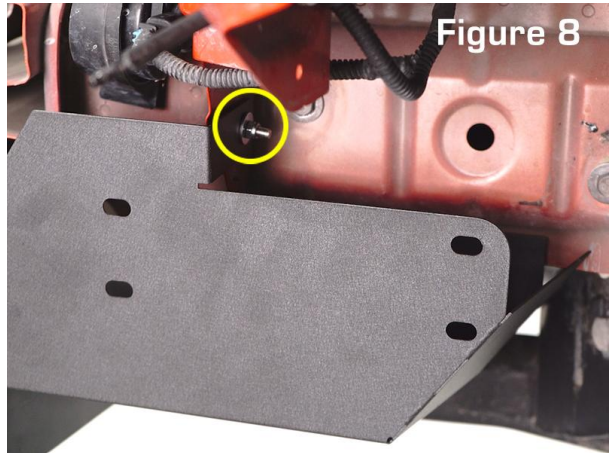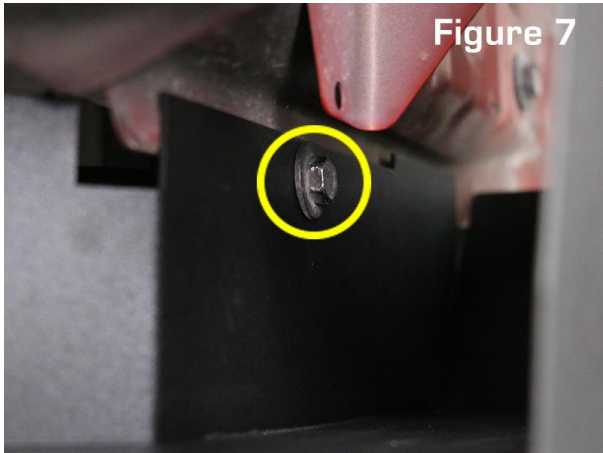

If you have any questions about the installation please email support@phastek.com or contact us at 1-855-PHASTEK (742-7835)