

PHASTEK

2016-2023 Camaro SS Sound Tube Delete Kit Installation

Installation:

1. Remove the factory clamp holding the sound tube in place (Figure 1)
 - **Tech Tip:** While using a cutting tool, ensure NOT to cut the factory tube
2. To remove the tubing for the sound tube, remove the push pins holding the rubber hangers near the strut tower and the A/C line (Figure 2 & Figure 3)
3. Remove remaining tubing from the air box by releasing the tab on the clamp holding it in place (Figure 4)
4. Remove the 10mm nut securing the sound tube to the firewall (Figure 5 and Figure 6)
 - **Note:** The 10mm nut will be reused later
5. Remove the 2 T45 torx bolts holding the sound tube bracket to the engine (Figure 7)
6. With the bolts remove, you can now remove the whole sound tube assembly (Figure 8 and Figure 9)
 - **Tech Tip:** Carefully guide the tube through the engine bay being careful not to bind on anything while removing
7. Install the Phastek plug in the factory sound tube location (Figure 10 and Figure 11)
 - **Tech Tip:** Ensure the plug is fully seated by pushing down on the plug
8. Install the GM cover and the factory 10mm nut from Step 4 (Figure 12)
 - **Note:** The cover will sit flush with the firewall, there are steps that the cover will need to rest in for proper installation





Figure 3



Figure 4

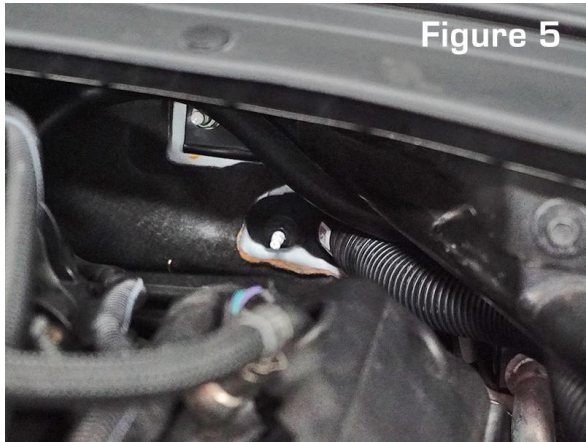


Figure 5

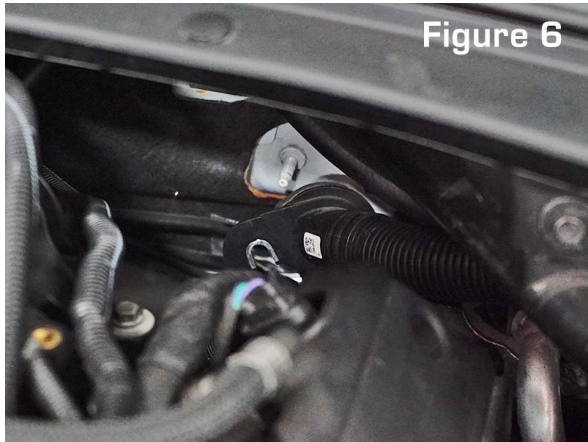


Figure 6

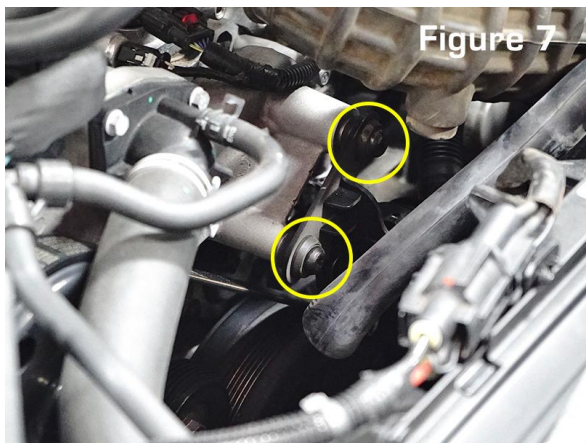


Figure 7

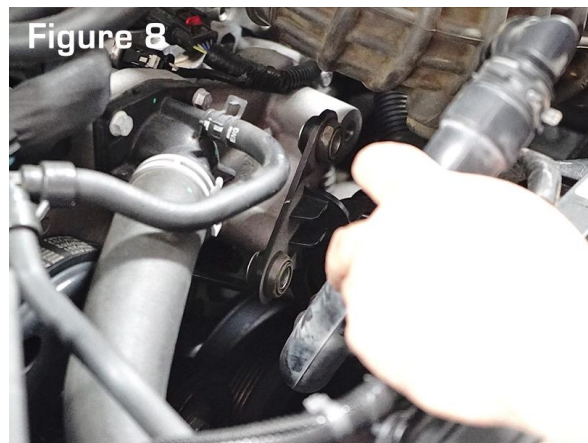


Figure 8

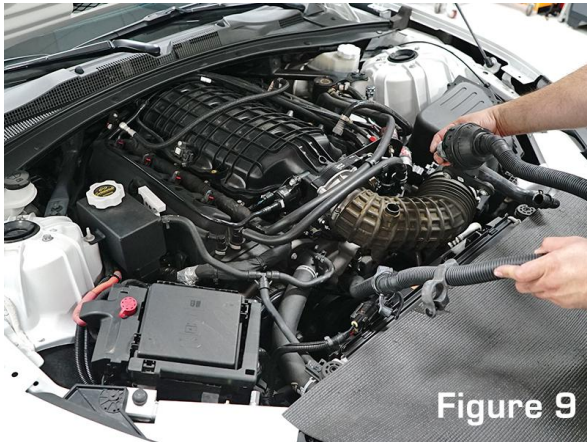


Figure 9



Figure 10



Figure 11

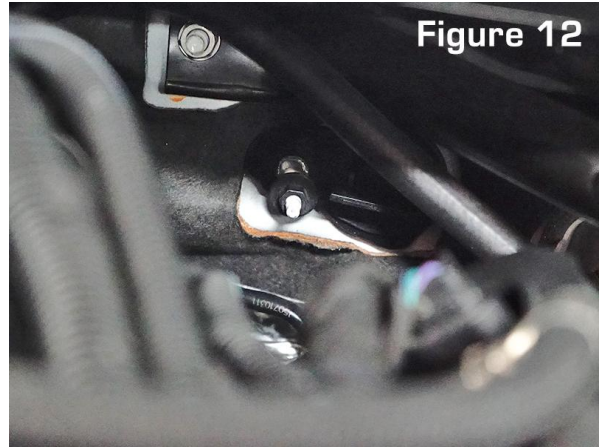


Figure 12

If you have any questions about the installation please email support@phastek.com or contact us at 1-855-PHASTEK (742-7835)