



2010-2013 Camaro w/RS Package & 2012-2015 Camaro ZL1 DRL Harness Installation Instructions

Recommended Tools:

- ¼" Ratchet
- T15 Torx Bit

Installation:

1. Turn the Front Passenger side tire inward to access the 3 Torx screws holding the fender liner to the bumper (Figure 1)
2. Remove the 3 Torx screws using a T15 torx bit (Figure 2)
3. Pull back the fender liner and locate the Main Harness Plug
4. Disconnect the factory harness and place the DRL harness in line with the factory harness (Figure 3)
5. Prior to reinstalling the fender liner, test the harness to ensure operation. Turn on the factory headlights to ensure the fog light operation.
6. Reinstall the fender liner using the Torx screws to complete the installation



Figure 1

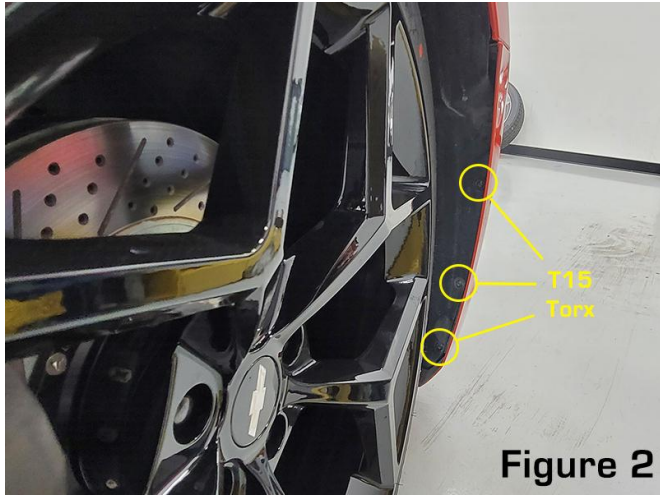


Figure 2



Figure 3