

Phastek Performance

Reverse LED Installation

6th Gen Camaro #PRLED6

Kit Contents:

- 1 - Harness for Driver Side Taillight
- 2 - CREE LED Bulbs
- 2 - Zip Ties

Recommended Tools:

Plastic Trim Tool
8mm Wrench
Wire Cutter

For Driver side:

1. Open trunk to access trunk cover for taillight
2. Remove 3 push pins and cover on Driver side to access taillight (Figure 1)
3. Remove single plastic push pin on Driver side trunk liner (Figure 2)
4. Pull back liner to access back side of trunk and mounting area for taillight
5. Remove the 3, 8mm nuts holding the taillight to the body (Figure 4 & 5)
6. Once nuts are removed the taillight can be removed
7. Unclip factory connector (Figure 6)
8. Connect supplied harness in line between factory connections (Figure 7)
9. While taillight is removed, you can now change factory bulb to supplied LED (Figure 8)
10. Tie back load resistor and excess harness using supplied zip ties
11. Reinstall Driver side taillight

For Passenger side:

1. Remove 3 push pins and cover on Passenger side to access taillight (Figure 1)
2. Locate bulb connector and twist counter clockwise to remove (Figure 3)
3. Replace bulb with supplied LED bulb (Figure 8)
4. Reinstall connector, cover, and 3 push pins



FIGURE 1



FIGURE 2

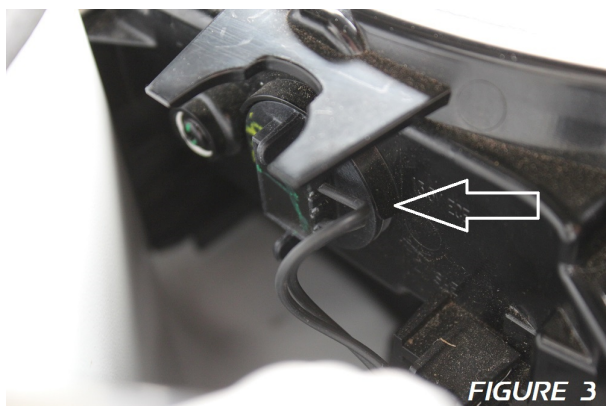


FIGURE 3



FIGURE 4

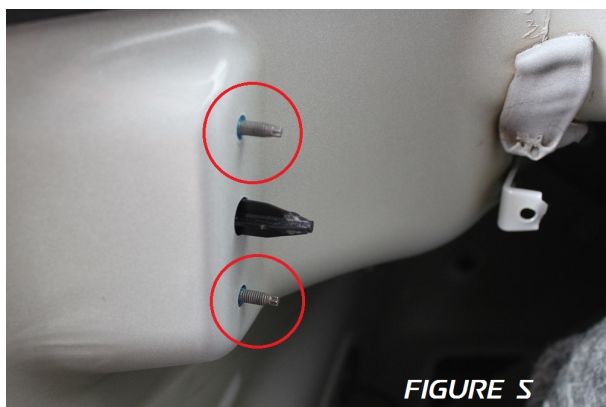


FIGURE 5



FIGURE 6



FIGURE 7



FIGURE 8