
STILLEN®

INSTALLATION INSTRUCTIONS

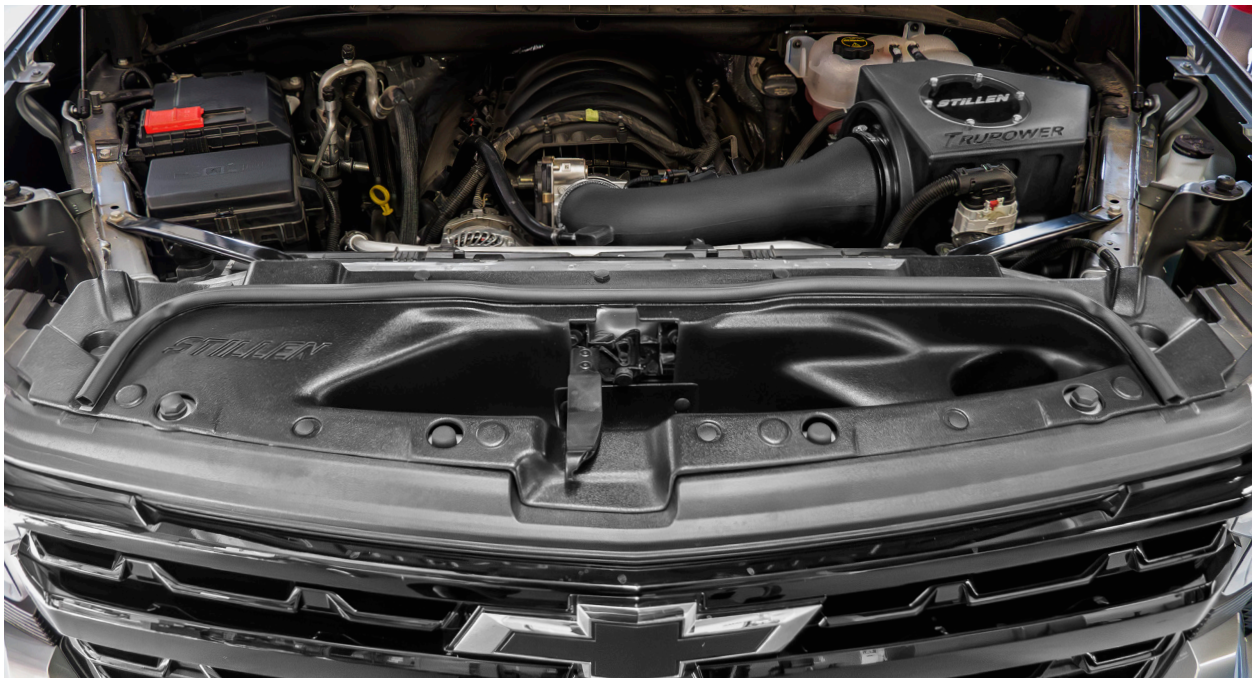


TRUPOWER BY STILLEN

COLD AIR INTAKE SCOOP

2019+ CHEVY SILVERADO 1500

PART#: TP403501

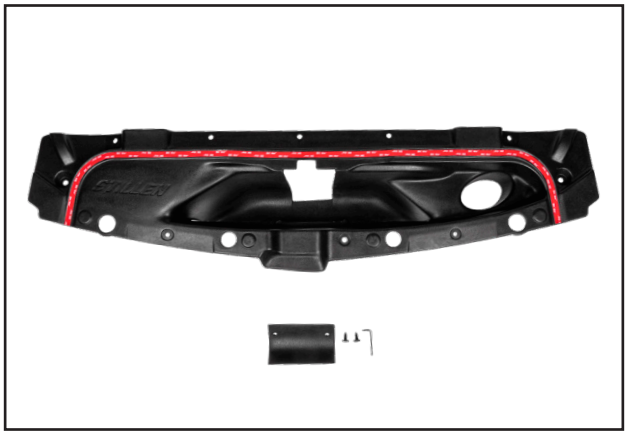

3176 AIRWAY AVE.
COSTA MESA, CA 92626

STILLEN.COM
(866) 250-5542

WHAT'S IN THE BOX

1x COLD AIR INTAKE SCOOP
1x CLOSE-OUT PANEL
2x PLASTIC RETAINER
1x TORX-10 L-WRENCH
1x 3M ADHESIVE PROMOTER STICK
1x SAFETY STICKER

EQUIPMENT NEEDED:

- **FLAT-HEAD SCREWDRIVER**

WARNING:

IF YOU ARE NOT EXPERIENCED IN THE AREA OF AUTOMOTIVE MECHANICS, WE STRONGLY URGE THAT YOU REFER THIS INSTALLATION TO YOUR MECHANIC.

CAUTION:

- *NEVER DRIVE THROUGH STANDING WATER THAT IS DEEPER THAN THE BOTTOM OF THE RIMS MOUNTED ON THE VEHICLE*
- *DRIVING THROUGH STANDING WATER MAY CAUSE DAMAGE TO YOUR VEHICLE*
- *GETTING WATER INSIDE YOUR VEHICLE'S ENGINE WILL CAUSE IT TO LOCK UP AND STALL OUT AND CAUSE SERIOUS INTERNAL DAMAGE TO THE ENGINE. SUCH DAMAGE IS NOT COVERED UNDER STILLEN'S LIMITED WARRANTY*
- *WHEN WASHING VEHICLE DO NOT SPRAY DIRECTLY ON THE STILLEN COLD AIR INTAKE SCOOP*


WARNING!!!!! – DO NOT CLOSE HOOD TILL THE INSTALLATION IS COMPLETE!!!

INSTALLATION INSTRUCTIONS


OE Radiator Support Cover

1. Ensure that you have the correct kit prior to the Installation.
2. Remove the 2 TORX-10 screws to remove the hood latch handle. ***SEE PIC 1***
3. Using the flat tip screwdriver pry and lift all the push pin fastener about a half an inch. ***SEE PIC 2***
4. Using the screwdriver pry and remove all the push pin fasteners.

1

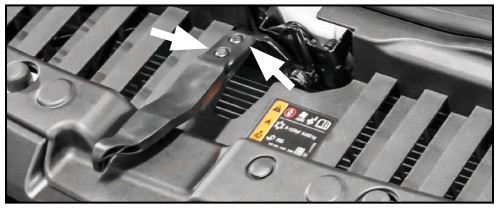

2

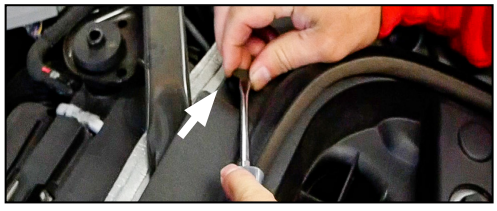

5. Lift the OE Radiator Support Cover and pull forward to remove. ***SEE PIC 3***

Turpower by STILLEN
Cold Air Intake Scoop

6. Install the CAI Scoop. ***SEE PIC 4***
7. Install all push pins in all locations before you lock them in. Once all are in place push down the lock part of the pin. ***SEE PIC 5***
8. Install STILLEN Panel and the Plastic Retainers. ***SEE PIC 6***
9. Install the hood latch handle and the 2 TORX-10 screws. ***SEE PIC 7***
10. Remove the backing of the 3M Double sided tape.
11. Crush at indicated area on the 3M Ashesive Promoter and apply to the bottom of the Rubber Seal.

WARNING: *DO NOT PULL ON THE RUBBER SEAL WHEN APPLYING.*

12. To intall the Rubber Seal start on one corner of the CAI Scoop. Start laying down the seal and gently move your way to the other corner by putting slight pressure to insure the tape has bonded properly. ***SEE PIC 8***
13. Clean a spot on the intake scoop using acetone and a lint-free cloth, then apply the Safety Sticker [A/C System] in a clearly visible area on the scoop or elsewhere in the engine bay. ***SEE PIC 9***
14. The installation of the Trupower by STILLEN Cold Air Intake Scoop is complete.


3




4




5

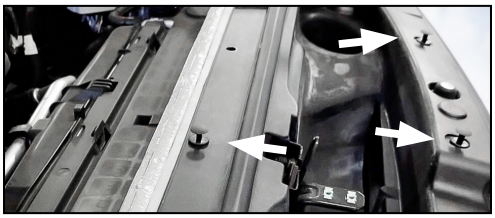

6

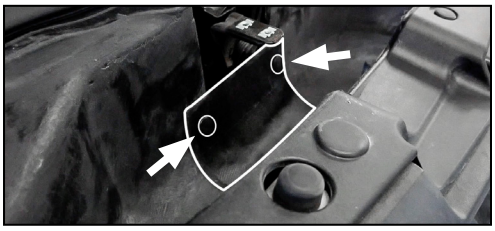

7

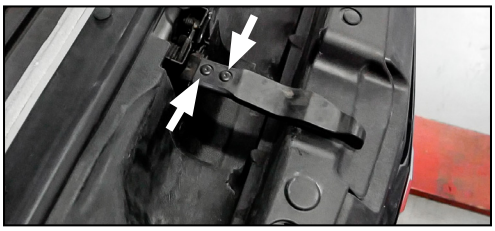

8



9

