

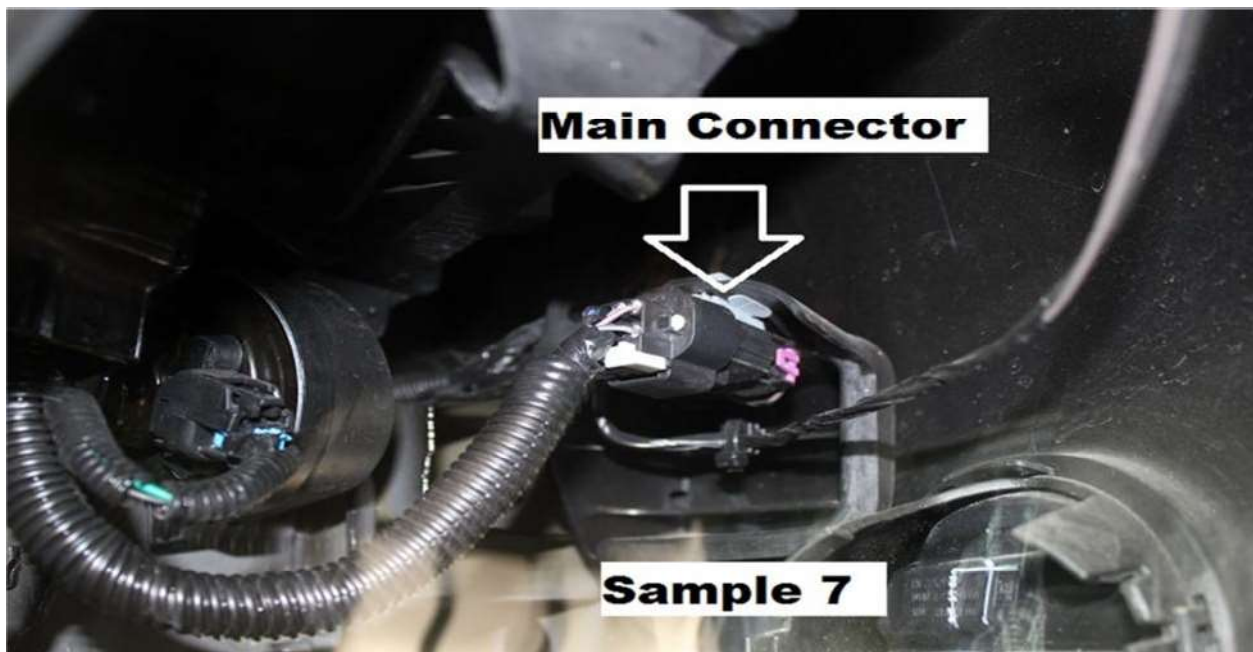


Phastek ZL1 FogLight Harness Kit for LS Camaro

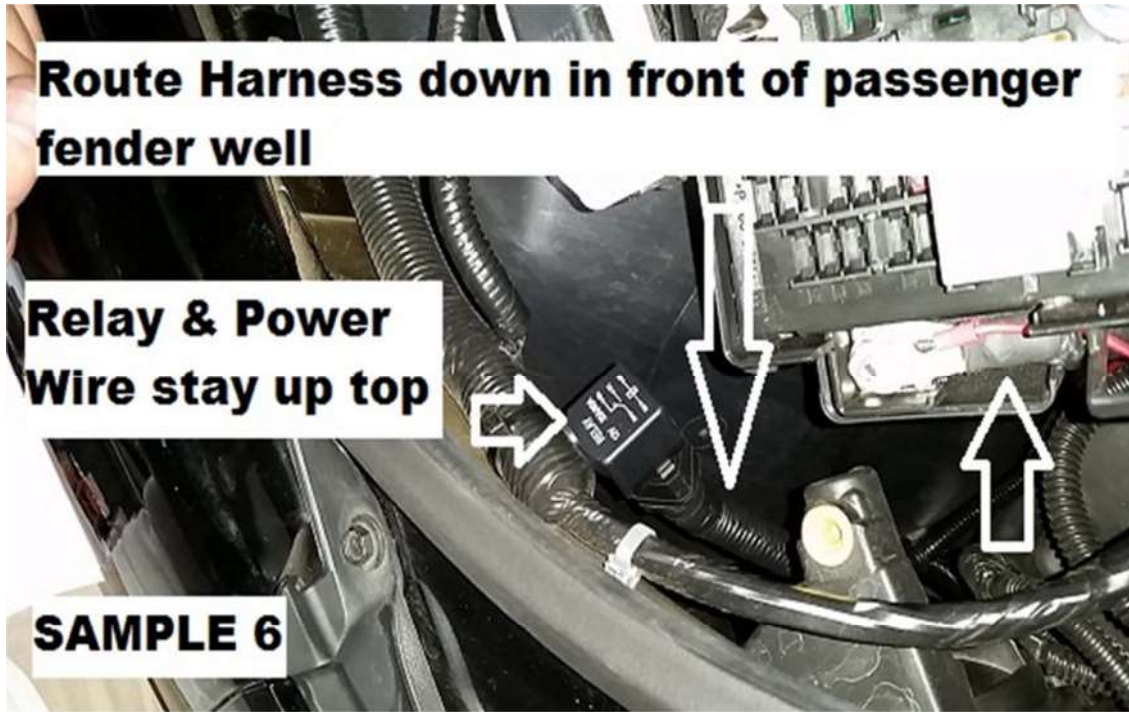

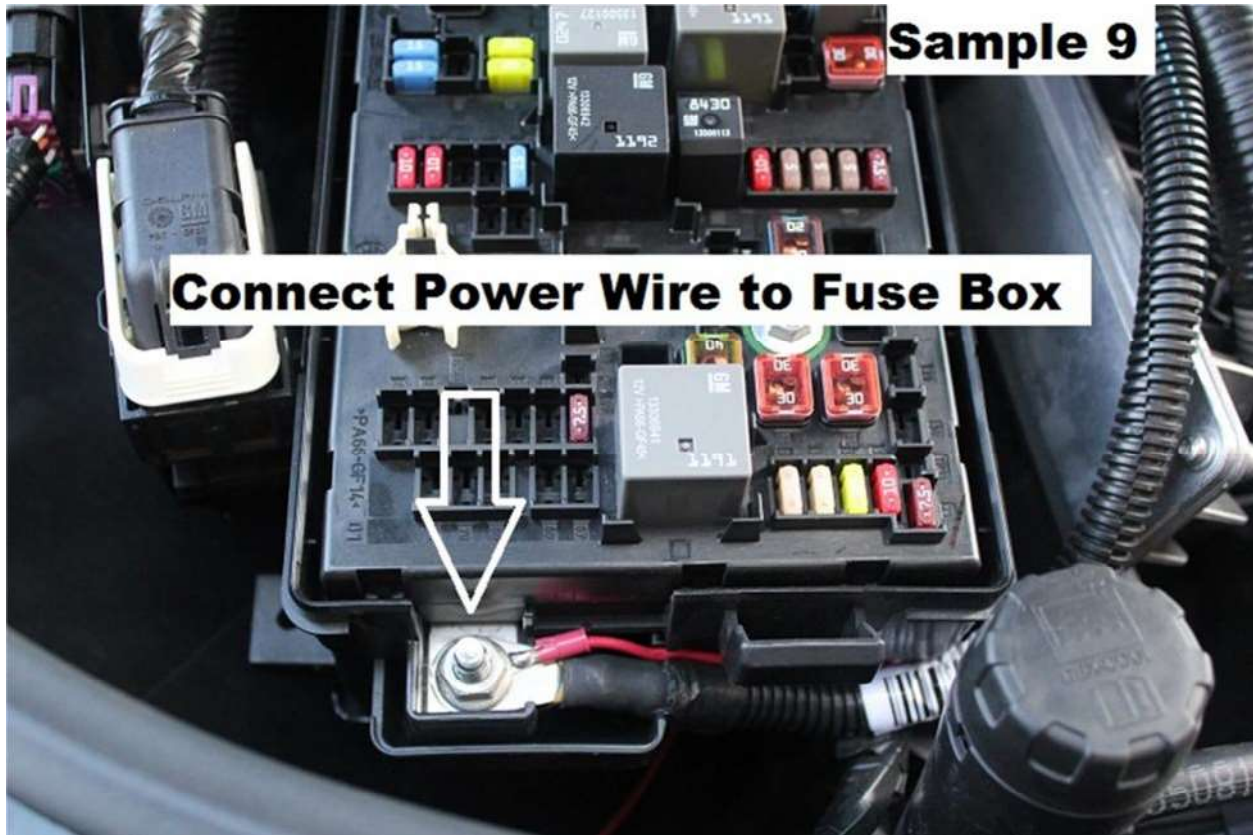

1. First you will route the supplied Fog Light Harness. The Relay and Red wire on the harness will stay up top. You will route the Big T Connector and 4 fog light connection wires down along the fender well behind the passenger headlight.(See Sample 6)
2. Next you will connect the Big T Connector on the supplied harness in between the Main connector; this can be located above the fog light on the passenger side. (See Sample 7)
3. Now you can connect the harness to the 4 Fog lights.
4. Locate the fuse block on the passenger side of the engine compartment. Open the cover and you will see a power terminal. Remove the nut on the power terminal using a 13mm socket. Take the Red Power wire on the supplied harness and connect to the power terminal. Fasten the nut back on to the power terminal. (See Sample 9)